


DST Setting Module : 593

1. Press (C) button several times to change to time/calender setting mode.

<Time/calender setting mode Screen>

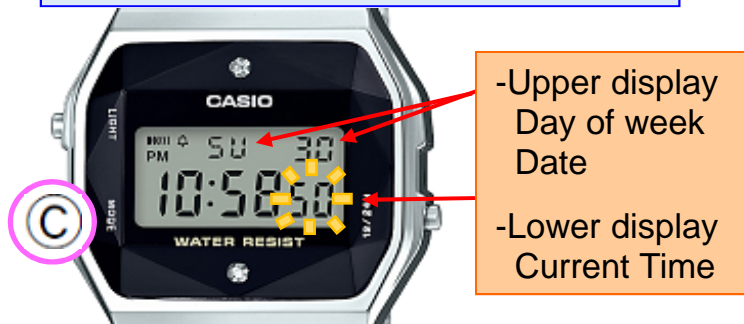

2. In time/calender setting mode, second will be flashing.



3. Press (L) button to move to the hour setting.



4. Press (A) button to increase the number and set the time.



5. Press (C) button to exit the setting mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>