

# OWNER'S MANUAL

**SEARS**

 


MODEL NO.  
**308.701090**

- safety rules • assembly
- care • replacement parts

## TWO-ROOM DOMETENT W/GAZEBO

**CAUTION: READ ALL INSTRUCTIONS  
CAREFULLY BEFORE USE AND RETAIN  
THEM FOR FUTURE REFERENCE.**

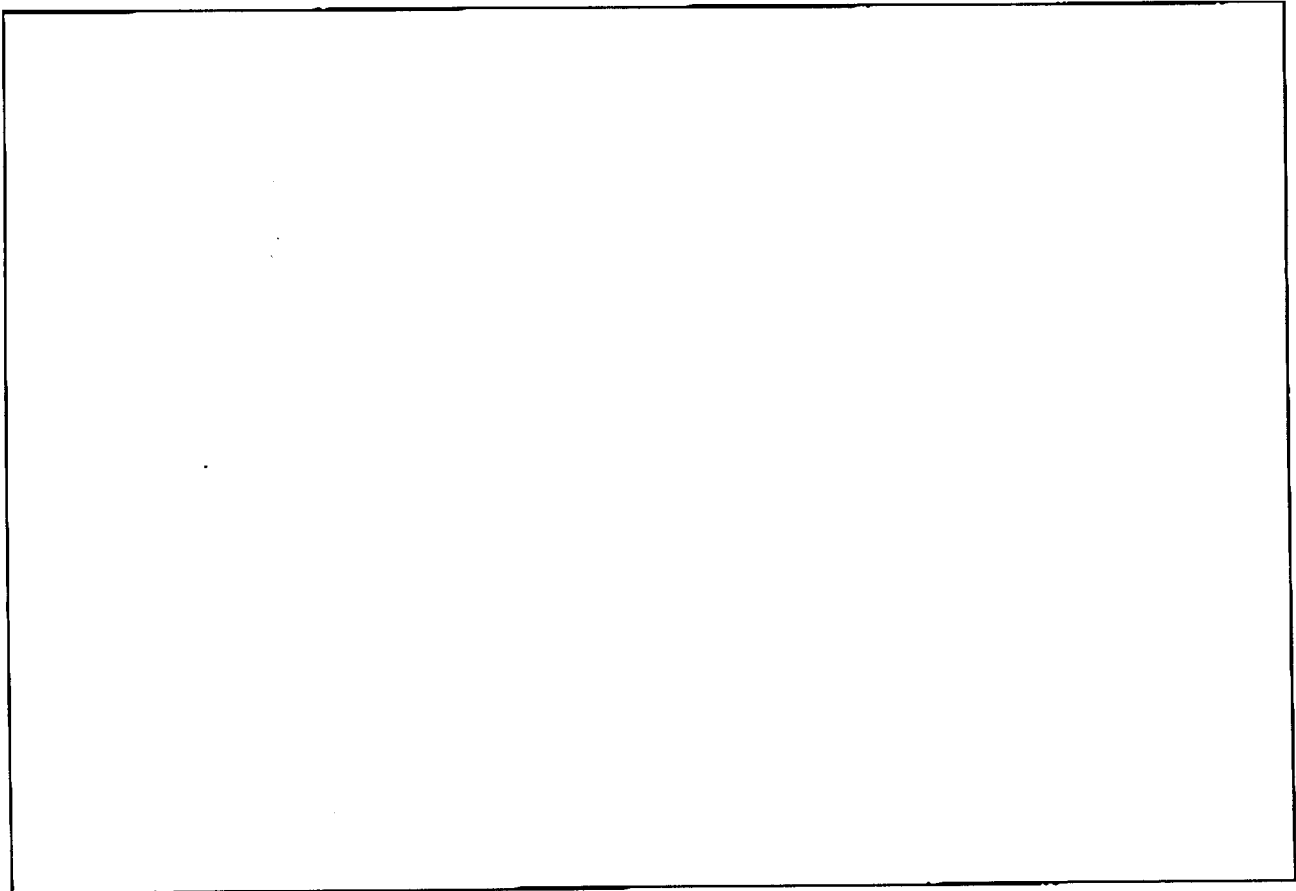

# SAFETY

## WARNING

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### DO NOT...

1. Do not pitch tents near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tent.
5. Do not use other than recommended water-repellent compounds on your tent.
6. Do not spray your tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

### DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

# CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE POLYESTER FABRIC IN YOUR HILLARY TENT PROVIDES MUCH GREATER ULTRAVIOLET RESISTANCE THAN NYLON TENTS BUT FOR MAXIMUM LIFE OF PRODUCT, AVOID SET UP IN SUNLIGHT FOR PROLONGED PERIODS OF TIME.

Your tent is water repellent. However, it is not waterproof. During heavy rain some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

Make certain your tent is clean and dry before storage. Do not store on concrete floor.

## FULL ONE YEAR WARRANTY

 
If, within one year from the date of purchase, this tent fails due to defect in material or workmanship, warranty service is available by RETURNING IT TO THE NEAREST SEARS STORE/SERVICE CENTER in the United States and Sears will repair it, free of charge.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**SEARS, ROEBUCK AND CO.**  
Department 817 WA  
Hoffman Estates, IL 60179  
USA

# REPLACEMENT PARTS

*Congratulations on your purchase of a Sir Edmund Hillary tent,  
an exclusive brand of Sears.*

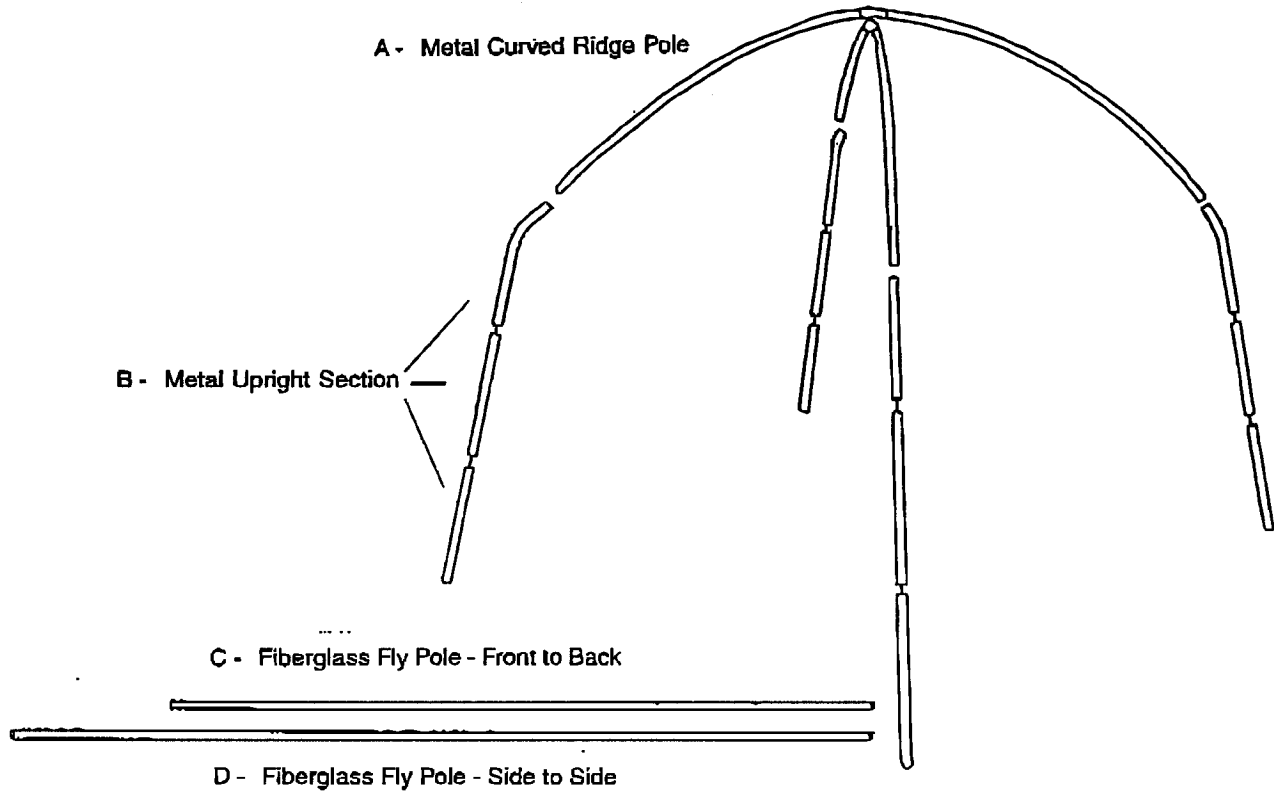

## **HOW TO ORDER REPLACEMENT PARTS FOR YOUR NEW DOME TENT**

The Model Number for your tent will be found on the convenience pocket sewn on the inside of the tent. Always mention the Model Number in all correspondence regarding your Sears Tent and when ordering replacement parts.

All parts listed herein may be ordered from any Sears, Roebuck and Co. retail store or by calling toll free 1-800-366-7278. For questions concerning your tent, call 1-800-325-8368.

### **WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:**

1. Part Number
2. Parts Description
3. Model Number
4. Name of Item

If the parts you need are not stocked locally, your order will be electronically transmitted to a Sears Repair Parts Distribution Center for expedited handling.

KEY NO.	DESCRIPTION	MODEL NO. 701090	MODEL NO.	QUANTITY REQUIRED
		PART NO.	PART NO.	
A	METAL CURVED RIDGE POLE	99-2005B		2
B	METAL UPRIGHT SECTION	99-2006B		4
C	FIBERGLASS FLY POLE - FRONT TO BACK	99-0031		1
D	FIBERGLASS FLY POLE - SIDE TO SIDE	99-0032		1
	COMPLETE FRAME	57010900BS		1
	TENT CARRY BAG	DOMES BAG		1

# ASSEMBLY INSTRUCTIONS

 
**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. FOR THIS MODEL, IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETTING UP THIS TENT.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**

- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the doors and window flaps to allow air to enter the tent.

**STEP 1:** Spread fly of tent out on the ground so the underside of the fly is facing up.

**STEP 2:** Locate the two fiberglass fly pole sections. Each pole section is shock corded together. Extend each section. Insert the ends of the longer fiberglass pole into the pockets located at the sides of the fly. Insert the ends of the remaining fiberglass pole into the pockets located at the front and rear of the fly.

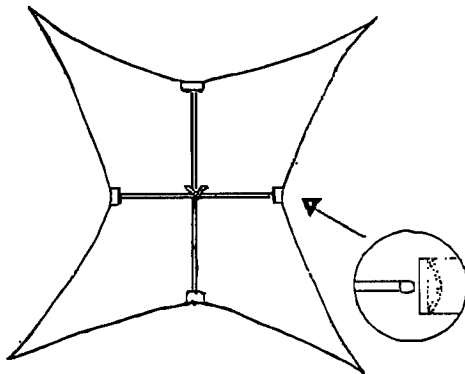


**STEP 3:** Each of the ridge poles of the tent consists of four metal sections chain corded together. Carefully extend each of the sections by joining them together at the swages to form each section into the shape of an arc. Slide each section through the sleeves on the fly.




**STEP 4:** Using ties located in the center of fly, tie the fiberglass and metal poles into place.

 **STEP 5:** Locate the four metal pole sections. Each section consists of three poles chain corded together. Extend each section. While leaving fly on the ground, join the bent end of the metal section to one end of the metal ridge pole sections, which were inserted into the fly sleeves. Repeat for the remaining three pole uprights.

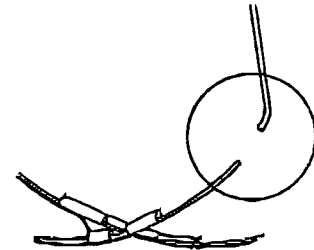


**STEP 6:** Secure fly to frame by fastening the self-fasteners on the fly around the metal frame.

 **STEP 7:** With the help of another person, flip fly over so it is upright. Attach the "J" hooks on the corners of the fly into the open ends of the metal uprights. Adjust tension as necessary.

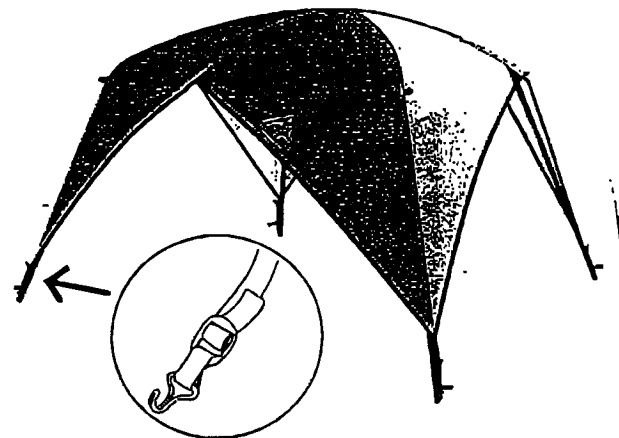

**STEP 8:** Lay tent out under the fly with the roof side up. Unzip doors. Standing on the floor of the tent, hook the center hook of the tent to the tent frame and work your way out to the corners of the tent, clipping tent hooks around the frame.

 
**STEP 9:** Insert the pins attached at each corner of the tent into the open ends of each frame pole.




# ASSEMBLY INSTRUCTIONS

**STEP 10:** Stake down tent by inserting a stake through the webbing loop at each fly corner and each intermediate stake loop on the tent. Hammer stakes into the ground at a 45° angle, by using a hammer or mallet. Make sure to pull tent out even and tight.

 Tent should appear as shown.

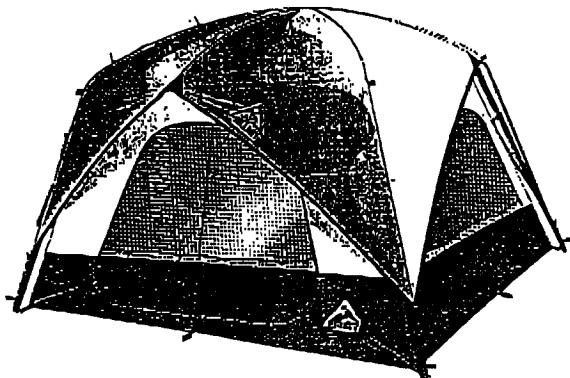

 **STEP 11:** Guy ropes are provided for windy conditions. Tie guy rope to the loop located at each upper corner of the fly and stake down with a loop made with the slider. Adjust sliders as necessary.

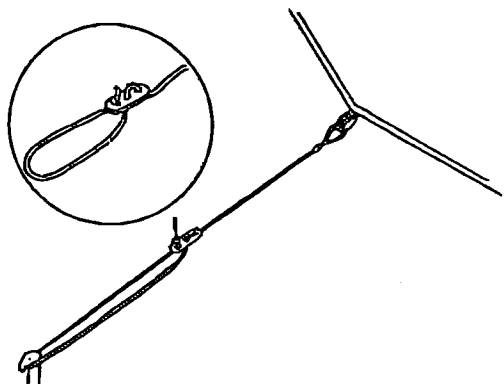

**NOTE:** If you choose to use your tent fly as a canopy only, you may do so by omitting Steps 8 and 9. Stake down fly corners and guy out the fly for extra stability.

Your tent includes a divider curtain that can be hooked into the center of your tent to divide the tent into two rooms.

Convenience pockets are provided for storing small camping gear.

**NOTE:** To take down tent, follow above steps in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag, which is provided.

Fold fly and place on top of tent. Fold tent into thirds lengthwise toward the door. At opposite end of the doors, start a small, tight roll and roll toward the doors. Once rolled, tie a string or rope around tent to hold into place. Slide the tent, frame and stakes into carry bag. Make sure tent is clean and dry before storing.

# SEARS



THANK YOU FOR PURCHASING A QUALITY HILLARY TENT. THIS TROUBLESHOOTING GUIDE IS DESIGNED TO GIVE YOU YEARS OF FUN AND ENJOYMENT FROM YOUR CAMPING EQUIPMENT. YOUR TENT MAY TAKE ON ALMOST HUMAN CHARACTERISTICS. IT IS DIFFERENT ON A SUNNY, WARM DAY THAN ON A COOL, CLOUDY DAY; DIFFERENT WHEN IT IS RAINING THAN WHEN IT IS DRY.

## TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON THE OUTSIDE OF THE TENT COMBINED WITH BODY HEAT ON THE INSIDE OF THE TENT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING THE DOORS AND WINDOWS OPEN WILL REDUCE MOISTURE CONDENSATION.
2. SEAM LEAKAGE	APPLY A GENEROUS AMOUNT OF SEARS SEAM SEALER ON SEAMS. SEARS SEAM SEALER MAY BE PURCHASED AT ANY SEARS, ROEBUCK AND CO. RETAIL STORE.
3. MILDEW	TO AVOID MILDEW NEVER PUT YOUR TENT AWAY WET OR DAMP. HOWEVER, IF MILDEW OCCURS USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD DISHWASHING SOAP OR FELS NAPTHA SOAP TO CLEAN. LET THE TENT DRY IN THE SUNLIGHT AND APPLY WATER REPELLENT COMPOUND.
4. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A CANVAS OR AWNING REPAIR SHOP FOR LARGER TEARS.
5. FAULTY ZIPPER	ALL OUR TENTS COME WITH SELF-REPAIRING ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. IF THIS DOESN'T WORK, A REPLACEMENT CAN BE ORDERED FROM OUR PARTS DEPARTMENT AND THEN BE INSTALLED BY A LOCAL CANVAS OR AWNING REPAIR SHOP IN YOUR AREA.
6. FADING FABRIC	DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN.
7. FLOOR CONDENSATION	A GROUND CLOTH UNDER THE TENT PREVENTS THE FLOOR FROM FEELING DAMP AND HELPS PROLONG ITS LIFE. THE CLOTH SHOULD BE SMALLER THAN THE TENT FLOOR TO PREVENT RAIN FROM RUNNING UNDER THE TENT.
8. REMOVING STAKES	STAKES SHOULD BE PULLED WITH ANOTHER STAKE, HAMMER OR A STAKE PULLER, BUT NEVER BY PULLING ON THE TENT. AVOID STAKING TENT SO TIGHT THAT IT STRETCHES THE FABRIC. OVERSTRETCHING MAY CAUSE STAKE LOOPS TO TEAR.

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE. SEND US YOUR IDEAS ON "TRICKS OF CAMPING", REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR JUST YOUR THOUGHTS. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-325-8368, OR WRITE US AT: THE WENZEL COMPANY, 113 INDUSTRIAL DRIVE, NEW HAVEN, MO 63068.

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT FOR LONGER THAN NECESSARY.**

Order replacement parts through Sears Service Centers or call toll free 1-800-366-7278. Mention complete model numbers.

### ATTENTION!!!

- If You Have... **Camping Suggestions**
- If You Need... **Problems Solved**
- If You Have... **Consumer Questions**

**CALL OUR CONSUMER HOT LINE  
1-800-325-8368**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>