

salton®

stainless steel hand blender



Instruction Booklet

Model: HB-1094

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against electrical hazards, do not immerse motor body, cord, plugs, or the appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use before putting on or taking off parts and before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to SALTON for examination, repair or electrical or mechanical adjustment. See Warranty section.
6. Avoid contacting moving parts.
7. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
8. Blades are sharp. Handle carefully.
9. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage, splattering and possibility of injury from burning.
10. Be certain that the chopper lid is securely locked in place before operating appliance.
11. The use of accessories or attachments, not recommended or sold by SALTON may cause fire, electric shock or injury.
12. Do not use outdoors.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.

15. Always attach plug to appliance first, then plug cord into the wall outlet.
To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
16. This appliance is for Household Use Only. Do not use appliance for other than intended use.
17. Do not leave unit unattended while in use.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

1. Variable Speed Dial
2. Motor Body
3. Power Button
4. Turbo Button
5. Blending Attachment
6. Stainless Steel Blade (not shown)
7. Blade Guard
8. Chopper Lid
9. Chopper Blade
10. Chopper Bowl
11. Measuring Cup
12. Lid
13. Wall Mount Bracket

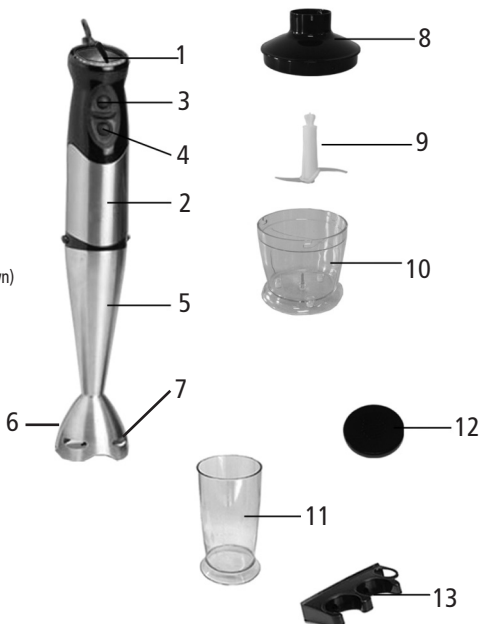

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Wash the Blending Attachment, Chopper Lid, Chopper Blade, Chopper Bowl, Measuring Cup and Lid in warm soapy water.
NOTE: Be careful when handling the Chopper Blade and Stainless Steel Blade on Blending Attachment, the blades are sharp.
4. Rinse and dry thoroughly.
5. Wipe the Motor Body with a damp cloth. **DO NOT IMMERGE THE MOTOR BODY IN WATER OR ANY OTHER LIQUID.**

HOW TO USE

IMPORTANT

- Make sure that the hand blender is unplugged from the wall outlet before assembling or removing attachments.
- Do not operate the hand blender continuously for more than 1 minute. Let the motor rest for 1 minute between each use.
- Do not operate the hand blender for more than 30 seconds when mixing dry, thick or heavy mixtures. Let the motor rest for 1 minute between each use.

How to use the Blending Attachment

The Blending Attachment is designed for stirring, mixing, pureeing and blending foods, milkshakes and other beverages.

1. Align the arrow on the Motor Body with the lock symbol on the Blending Attachment. Push the Motor Body down into the Blending Attachment until it locks into place.
NOTE: Make sure the Blending Attachment is thoroughly dry and there is no water left inside before attaching.
2. Place food to be processed in the measuring cup and place the Blending Attachment as deeply as possible into the measuring cup.
3. Plug the unit into the wall outlet.
4. Turn the Variable Speed Dial at the top of the Motor Body to the desired speed between 1 to 5 and press the Power Button.

Speed 1 on the Variable Speed Dial is the slowest and speed 5 is the highest.

NOTE: The Power Button must be kept depressed for the duration of use.

5. Move the hand blender gently in an up and down motion, until the mixture is at the desired consistency. If an extra boost of power is required when blending, push the Turbo Button.

NOTE: The Power Button must be released when selecting the Turbo Button.

6. Once ingredients have reached the desired consistency, release the Power or Boost Button and turn the Variable Speed Dial at the top of the Motor Body to '1'.
7. Wait until the motor has completely stopped before lifting the hand blender out of the measuring cup.
8. Unplug from the wall outlet.
9. To detach the Blending Attachment, hold the Motor Body with one hand. Using your thumb and finger, push the button on either side of the Motor Body while holding the Blending Attachment with the other hand. Pull the Motor Body away from the Blending Attachment until the two pieces separate.

NOTE: If food gets lodged around the Blade or the Blade Guard, unplug the unit from the wall outlet and use a spatula to dislodge the food. The Blade is very sharp. DO NOT use your fingers.

IMPORTANT: NEVER immerse the hand blender past the length of the Blending Attachment. DO NOT immerse beyond the seam of the Blending Attachment. NEVER immerse the Motor Body into any liquid or mixture.

HELPFUL HINTS

- To use the Blending Attachment in a saucepan, be sure to remove the pan from the stove as the Blending Attachment is not designed for use over a heat source.
- When blending in non-stick cookware, be careful not to scratch the coating with the blade.

- When blending or pureeing, cut food into uniform sizes for best results.
- This appliance is not designed to chop ice. Add ice to beverages after blending.
- To achieve best results, use deep, tall pots or containers
- For easy cleanup, rinse Blending Attachment immediately after use.

How to use the Chopper

The Chopper is designed for chopping cheese, onions, herbs & spices, garlic, carrots, nuts and more.

1. Place the Chopper Blade onto the metal pin in the center base of the Chopper Bowl.
2. Place food to be processed in the Chopper Bowl. Do not fill above the (MAX) marking.
3. Align the pins on either side of the Chopper Lid with the grooves on the Chopper Bowl. Push down and turn clockwise until the Chopper Lid locks into place.
4. Align the arrow on the Motor Body with the lock symbol on the open head of the Chopper Lid. Push the Motor Body into the open head of the Chopper Lid until it locks into place.

NOTE: Make sure the Chopper Lid is thoroughly dry and there is no water left inside before attaching.

5. Plug the unit into the wall outlet.
6. Turn the Variable Speed Dial at the top of the Motor Body to the desired speed between 1 to 5 and press the Power Button. Speed 1 on the Variable Speed Dial is the slowest and speed 5 is the highest.

NOTE: The Power Button must be kept depressed for the duration of use.

7. If an extra boost of power is required when chopping, push the Turbo Button.

NOTE: The Power Button must be released when selecting the Turbo Button.

8. Although the Chopper has rubberized feet on the bottom of the Chopper Bowl, keep one hand on the Motor Body and the other hand on the

- Chopper Bowl to stabilize the unit while in use.
9. Once ingredients have reached the desired consistency or texture, release the Power or Boost Button and turn the Variable Speed Dial at the top of the Motor Body to '1'.
 10. Wait until the motor has completely stopped before opening the Chopper Lid.
 11. Unplug from the wall outlet.
 12. Remove the Chopper Blade and use a spatula to remove any food stuck to the Chopper Blade and around the walls of the Chopper Bowl.
NOTE: The Chopper Blade is very sharp. DO NOT use your fingers to remove food stuck to the Chopper Blade.
 13. To detach the Chopper Lid, hold the Motor Body with one hand. Using your thumb and finger, push the button on either side of the Motor Body while holding the Chopper Lid with the other hand. Pull the Motor Body away from the Chopper Lid until the two pieces separate.

HELPFUL HINTS

- When chopping, cut food into uniform sizes for best results.
- Do not process hard foods such as coffee, nutmeg, ice cubes or chunks of hard chocolate. This may damage the Chopper Blade.
- Never process hot or boiling foods in the Chopper Bowl.

Wall Mount Bracket

The wall mount bracket is designed to provide convenient storage for your hand blender so that it's always at your fingertips.

CARE AND CLEANING

1. Make sure the unit is unplugged from the wall unit before removing attachments from the Motor Body.
2. Wipe the Motor Body with a damp cloth. . If necessary, you can use a little mild detergent. DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.

3. Wash the Blending Attachment, Chopper Lid, Chopper Blade, Chopper Bowl, Measuring Cup and Lid in warm soapy water.

NOTE: Be careful when handling the Chopper Blade and Stainless Steel Blade on Blending Attachment, the blades are sharp.

4. Rinse and dry thoroughly.

RECIPES

Eggnog Milkshake

1 cup (250 ml) store bought ready eggnog

1/4 tsp. (1 ml) vanilla

1 scoop vanilla ice cream

Pinch nutmeg

Using the Blending Attachment, blend the first 3 ingredients on speed 2 until mixture is smooth and creamy. Sprinkle with nutmeg.

Serves 1

Vanilla or Chocolate Milkshake

3 scoops vanilla or chocolate ice cream

1-1/2 cups (375 ml) milk

1 tbsp. (15 ml) vanilla extract

Using the Blending Attachment, blend all ingredients on speed 2 until mixture is smooth and creamy.

Serves 2

Strawberry Milkshake

3 scoops vanilla or chocolate ice cream

1-1/2 cups (375 ml) milk

Handful of fresh strawberries cut in pieces

Using the Blending Attachment, blend all ingredients on speed 3 until mixture is smooth and creamy.

Serves 2

Fruit Smoothie Recipe

Vanilla yogurt

Frozen banana

Frozen strawberries

Frozen blueberries

Honey

Milk

Using the Blending Attachment, blend all ingredients on speed 5 until desired consistency. This recipe does not have any measurements. Mix and match different yogurts and frozen fruit to your create own unique smoothie.

Creamy Broccoli Soup

2 tsp. (10 ml) olive oil

1 small onion, chopped

1 bunch fresh broccoli

1-1/2 cups (375 ml) chicken broth

1/4 tsp. (1 ml) oregano

Pinch cayenne pepper

1 cup (250 ml) milk

Heat oil in a large pot over medium heat. Add onions and sauté until tender. Add broccoli, chicken broth, oregano and cayenne pepper. Reduce heat to medium low and simmer until broccoli is tender. Remove pot from heat and milk and stir to blend and let cool down. Using the Blending Attachment, immerse hand blender directly into pot and blend on speed 5 until creamy. Reheat and serve.

Serves 4

Sweet Potato Soup

1/2 cup (125 ml) butter

1/2 cup (125 ml) onions, chopped

1 cup (250 ml) celery, chopped

2 large sweet potatoes, peeled and diced

3 cups (750 ml) chicken broth

1 cup (250 ml) milk

1/2 tsp. (2.5 ml) ground cloves

Salt to taste

Pepper to taste

Heat butter in a large pot over medium heat. Add onions and celery and sauté for 10 minutes. Add sweet potatoes and chicken broth. Bring to a boil and reduce heat to medium low and simmer until sweet potatoes are tender. Remove pot from heat and let cool down. Using the Blending Attachment, immerse hand blender directly into pot and blend on speed 5 until creamy. Stir in the milk and cloves. Season with salt and pepper to taste. Reheat and serve.

Serves 6

Greek Salad Dressing

1/2 cup (125 ml) extra virgin olive oil

2 tbsp. (30 ml) red wine vinegar

1 tbsp. (15 ml) lemon juice

1 tsp. (5 ml) garlic powder

1/4 tsp. (1 ml) pepper

2 tbsp. (30 ml) dried oregano, crushed

3/4 tsp. (3.75 ml) salt

1 tsp. (5 ml) dijon mustard

Pinch thyme

Using the Whisk Attachment, blend all ingredients on speed 2 until ingredients all well combined. Store in fridge for up to 3 weeks.

Cesar Salad Dressing

1/2 cup (125 ml)	freshly grated Parmesan
1/4 cup (60 ml)	olive oil
1/4 cup (60 ml)	vegetable oil
1/4 cup (60 ml)	lemon juice
2	garlic cloves
1 tsp. (5 ml)	worcestershire sauce
Salt to taste	
Pepper to taste	

Using the Whisk Attachment, blend all ingredients on speed 2 until smooth. Season with salt and pepper to taste. Store in fridge for up to 2 days.

Crepe Batter

1 cup (250 ml)	self-rising flour
1/2 tsp. (2.5 ml)	salt
2 tsp. (10 ml)	sugar
1 tsp. (5 ml)	vanilla extract
1/2 cup (125 ml)	milk
1/2 cup (125 ml)	water
2 tbsp. (30 ml)	melted butter
4	eggs

Using the Whisk Attachment, blend all ingredients except flour on speed 3. Add flour last and slowly until well blended and smooth.

Pour 1/4 cup (60ml) of mixture in an preheated and lightly oiled frypan. Turn and cook other side when edges begin to curl and have a nice golden colour. Remove keep warm and repeat with remaining mixture.

Basic Whipped Cream Recipe

2 cups (500 ml)	heavy cream
1/4 cup (60 ml)	sugar
1 tbsp. (15 ml)	vanilla extract

Using the Whisk Attachment, whip on speed 5 until cream is slightly thickened. Add the sugar and vanilla extract. Continue to whip until cream forms soft peaks. Cream can be stored in the fridge for up to 2 days.

Hummus

1/2 can (400 ml)	chickpeas
1 tsp. (5 ml)	salt
2	large garlic cloves, crushed
4 tbsp. (60 ml)	lemon juice
3/4 cup (80 ml)	tahini
1/2 cup (125 ml)	water

Put all ingredients in the chopper and cream on speed 5 until smooth. Serve with fresh cut vegetables such as broccoli, cauliflower, carrots, radishes, celery, etc. Store leftovers in the fridge for up to 2 weeks.

Pesto Sauce

1 cup (250 ml)	finely chopped fresh parsley
2	large garlic cloves, crushed
1/4 cup (60 ml)	pine nuts
2 tbsp. (30 ml)	fresh chopped basil
2/3 cup (150 ml)	olive oil
1/2 cup (125 ml)	parmesan cheese (grated)

Pepper to taste

Put all ingredients in the chopper and process on speed 5 until smooth. Pour over cooked spaghetti, toss to coat and serve.

Serves 4

Peanut Butter

1 cup (250 ml) roasted peanuts

1 tbsp. (15 ml) peanut oil

1/2 tsp. (5 ml) salt

Put all ingredients in the chopper and blend on speed 5 stopping every 30 seconds to scrape down sides of bowl. Blend until desired consistency is reached. Store in the fridge for up to 2 weeks.

Chocolate or Graham Crumbs

1-1/2 cup (375 ml) chocolate or graham cookies (without filling)

Using the chopper, process on speed 2 until fine crumbs. For use as base in cheesecake recipes.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Salton Canada. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, commercial use or improper maintenance.

A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period*. If you are unable to have a defective product replaced under warranty by the retailer, please check our website at "www.salton.com" for the service centre nearest you. You may also contact us for assistance by mail, e-mail, fax or telephone as listed below.

To ensure prompt 'in-warranty' service securely package and return the product to us prepaid. Be sure to include the original proof of purchase and a description of the defect along with your address and postal code.

For repairs not covered by the warranty, please contact us for assistance.

SALTON CANADA

Customer Service Department
81A Brunswick,
Dollard-des-Ormeaux,
Quebec, Canada H9B 2J5
website: www.salton.com
E-mail: service@salton.com
Fax: 514-685-8300
Tel: 514-685-3660

* Return/exchange policies at each retailer vary and may differ from the SALTON Canada 1 year limited warranty period.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>