

Component List:

- 1 Tent Canopy, 1 Crown, 4 Shockcorded BLUE Rafters,
- 4 Shockcorded RED Rafters, 8 Shockcorded GREEN Rafters,
- 4 Corner Brackets, 4 Mid Brackets, 8 Corner/Mid Poles,
- 8 Adjustable Pole Extensions, 8 Baseplates, 8 Sets Bolts, Washers & Nuts,
- 8 Guy Ropes with Sliders, 8 Stakes, 3 Stow Bags

NOTE: This is a large structure. For ease of set-up and personal safety, we recommend that you have help !

CAUTION:

Good judgment and common sense must be used for each set-up and take down. Since weather is unpredictable, it is the responsibility of the person erecting the shelter to determine the proper time and method to secure and/or dismantle the shelter. Eureka! shelters are manufactured for use as temporary protection from sun and light rain. Evacuate the shelter during threatening or severe weather.

Assembly: See drawing on reverse side

- 1 Unpack all four boxes** and separate the components. Leave the canopy folded until the roof rafters are up
- 2. Locate The Crown Assembly.** Lay it on the ground, near the center of where you want the shelter to stand. Spread the arms and orient the crown so that the BLUE tipped arms point to the corners
- 3. Assemble The Rafters.** Each rafter is two sections that are shockcorded together. The roof rafters are either BLUE or RED tipped and the perimeter rafters are GREEN tipped. Fit the centers together, making sure that the detent buttons are fully seated into the holes opposite section. Divide the rafters according to color
- 4. Add The Roof Rafters To The Crown Arms.** Both the arms and rafters are color coded. Fit the BLUE tipped corner rafters onto the BLUE tipped arms and fit the RED tipped mid rafters onto the RED tipped arms. Again, ensure that the rafters fully capture the buttons to secure
- 5. Add The Brackets To The Rafters.**
 - There are 4 corner brackets. These have two GREEN tipped tubes and one BLUE tipped tube. Slide the BLUE tube over the end of a BLUE corner rafter and engage the buttons to secure. Repeat with the remaining corners
 - There are 4 mid brackets. These have two GREEN tipped tubes and one RED tipped tube. Slide the RED tube over the RED mid rafter and secure. Repeat with the remaining mids
- 6. Add The Perimeter Rafters To The Brackets.** Work your way around the frame adding the perimeter rafters as you go. Fit and secure GREEN to GREEN until you have created a square, freestanding frame. NOTE: If it appears the last rafters will not reach to the corners, walk to the center and lift the crown. This will pull the sides in to reduce the distance between corners
- 7. Attach The Canopy To The Frame.** Unfold the canopy. Drag it, top up, square to one side of the frame. Pull the canopy up and over the frame until the peak vent covers the crown and the corners align to the frame. At each corner, reach under the canopy and wrap the attached Velcro® tabs around the bracket to secure. This will keep the canopy from sliding off as you raise the frame
- 8. Assemble The Poles.**
 - Use the bolts/nuts/washers to attach the baseplates to the lower pole sections. Take care to finger tighten only. Too much torque could deform the tube and make removal difficult
 - Slide the top pole sections into the lower sections and engage the buttons to secure. Make sure to maintain the same height for all poles
- 9. Raise The Assembly.**
 - Move to the center on one side of the canopy and raise the mid bracket. Connect the top of a pole assembly into

the bottom tube of the mid bracket. Again, make sure the buttons are captured and secure. Next, go to the corners on this same side and connect pole assemblies to the bottom tube of both corner brackets.

- Continue to raise the remaining sides and connect all remaining assemblies.
- Step back at a corner and look down the row of poles. Then, align the baseplates to straighten the row.

10. Attach The Fabric To The Frame. Move to under the canopy and working your way around the perimeter, wrap all of the Velcro® tabs over the tubes to secure the fabric to the frame

11. Stake It Down. There is a D-Ring sewn at each corner on the canopy top. Tie two (2) guy ropes to one of these rings. Pull one of the guy ropes out and away (about 3-4 ft.) in line with one of the rows of poles and stake it down. Adjust the slider to maintain tension. Pull the second guy rope out in line with the other row of poles and again stake down and adjust. Continue until all remaining guy ropes are attached and staked down

YOUR SHELTER IS READY!

- Take Down:** Pull up the stakes and stow in the side pocket of the small bag
Release the perimeter Velcro® tabs
Remove the poles from the frame and stow in the large bag.
Separate each pole into two sections. You do not need to remove the baseplates.
Remove the canopy from the frame. You do not need to untie the guy ropes. Fold and stow in the small bag
Remove all the rafters. Dismantle and stow Blue in the large bag and Red & Green in the medium bag
Stow the crown and corners in the small bag


WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHELTER FABRIC. This shelter meets the flammability requirements of CPAI-84 and NFPA701. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Ultraviolet Light Damage: While our fabrics are UV resistant, any synthetic fabric is susceptible to UV degradation. UV damage will cause nylon and polyester to become brittle and tear easily. This can be minimized by erecting shelters on sites with low exposure to direct sunlight

Cleaning: Clean the shelter by washing it down with a mild liquid hand soap and warm water solution. Rinse thoroughly. Never use detergent, washing machines or dryers because they can damage the tent's protective coating and seams. After cleaning, be sure the shelter is completely dry, especially the heavier, double-stitched areas such as seams, before storing or mold and mildew will grow. Clean the poles with a cloth and lubricate them with silicone spray. This is especially necessary after ocean side trips to remove salt spray so the poles don't corrode

Alterations Or Modifications: DO NOT misuse, modify or alter this product in any way from its condition at the time of sale. Alteration, modification or any use of this product contrary to the accompanying written instructions shall void the warranty. Moreover, any misuse, alteration or modification of the product shall absolve Johnson Outdoors Inc. of any liability for property damages or injuries sustained as a result of such misuse, modification or alteration.

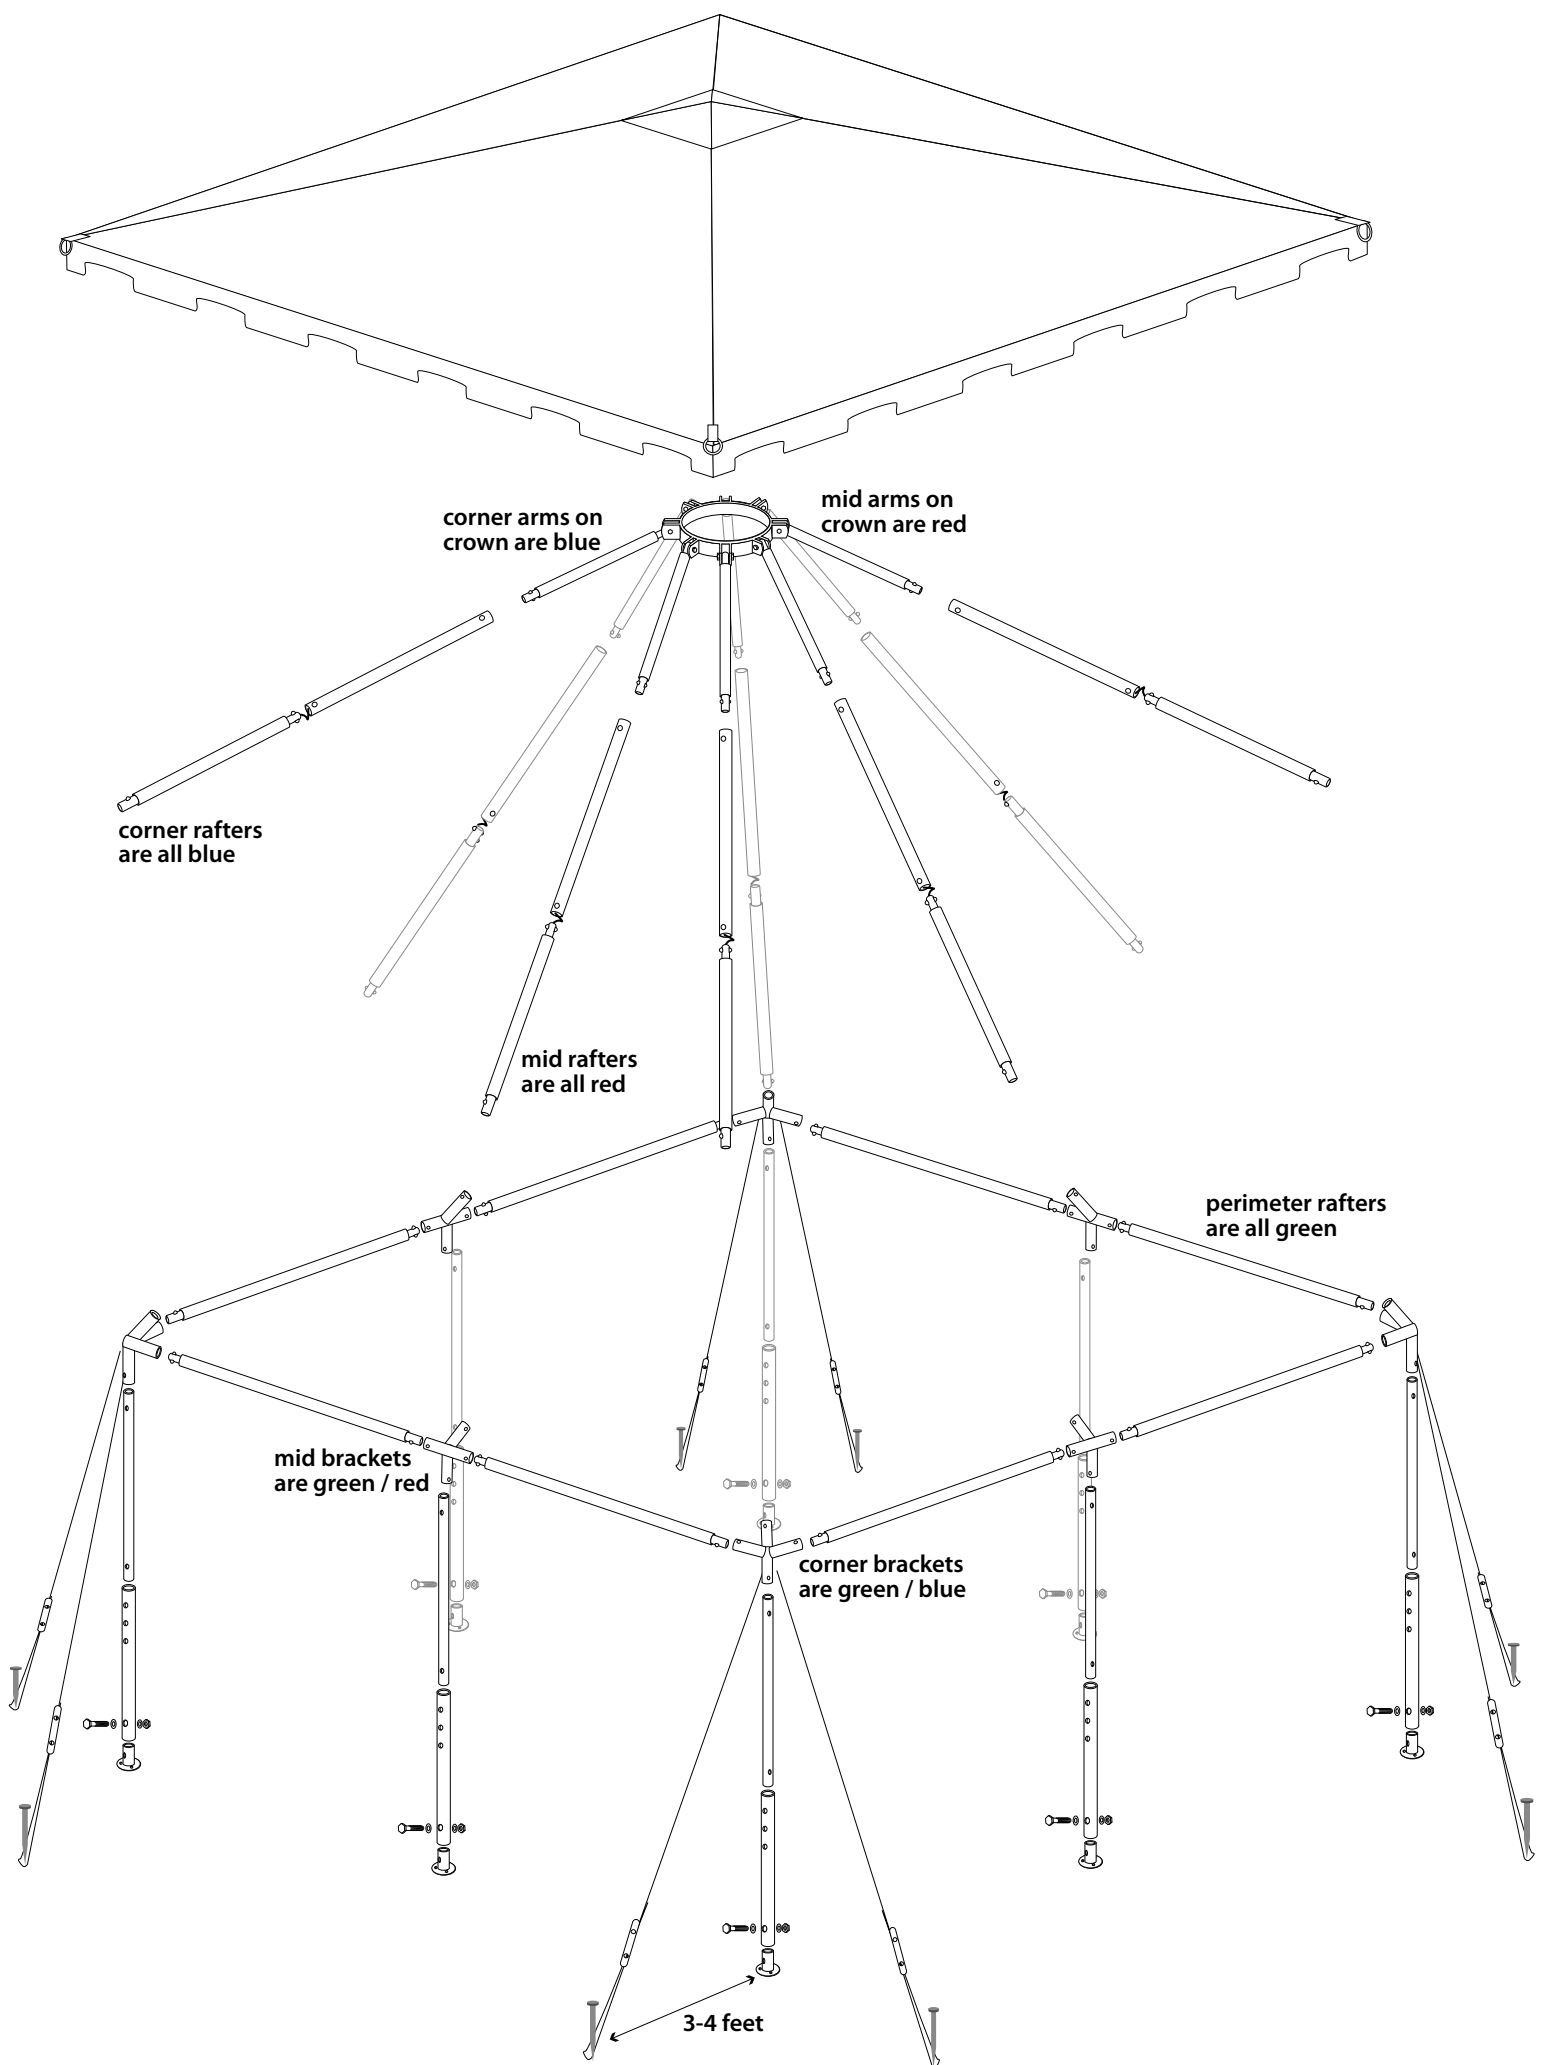

LIMITED WARRANTY:

Johnson Outdoors Gear LLC Entertainer Tents are warranted to the original purchaser that they are free from major defects in materials or workmanship for three years, except as qualified below. We are not responsible for normal wear and tear or for damages caused by shipping, accidents, misuse, alterations, or improper installations. Additionally, although we manufacture Johnson Outdoors Gear LLC products with quality fabrics, we are not responsible for the negative effects of climate, pollution, acts of God, and long or semi-permanent installations. Because these shelters are temporary structures, it is necessary that any Johnson Outdoors Gear LLC shelter be installed and maintained according to the manufacturer's instructions.

What Johnson Outdoors Gear LLC Will Do:

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

How to Obtain Warranty Service:

Return the product, freight prepaid, to the Eureka! Dealer from whom it was purchased; or, contact Eureka's Customer Satisfaction Department for return authorization: toll free 1-800-572-8822. Collect shipments or shipments without return authorization cannot be

accepted. The product registration card packaged with our product need not be returned for the warranty to be effective and for you to receive warranty service.

THERE ARE NO OTHER EXPRESS WARRANTIES BEYOND THE TERMS OF THIS LIMITED WARRANTY. IN NO EVENT SHALL JOHNSON OUTDOORS GEAR LLC BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How State Law Relates To This Warranty:

This warranty gives you specific legal rights, and you may have other rights that vary from state to state.



JOHNSON OUTDOORS GEAR LLC

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>