



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX ESL 63010. You'll find the answers to all your questions on the AEG-ELECTROLUX ESL 63010 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX ESL 63010
User guide AEG-ELECTROLUX ESL 63010
Operating instructions AEG-ELECTROLUX ESL 63010
Instructions for use AEG-ELECTROLUX ESL 63010
Instruction manual AEG-ELECTROLUX ESL 63010



user manual

Dishwasher

ESL 63010



[Your user manual](#)
[AEG-ELECTROLUX ESL 63010](#)

Manual abstract:

All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components. For electrical and water connection carefully follow the instructions given in specific paragraphs. product description electrolux 7 Product description 1 Upper basket 2 Water hardness dial 3 Salt container 4 Detergent dispenser 5 Rinse aid dispenser 6 Rating plate 7 Filters 8 Lower spray arm 9 Upper spray arm 8 electrolux control panel Control panel 1 On/Off button 2 Delay start button 3 Programme selection / cancel button 4 Indicator lights Indicator lights End of programme Illuminates when a washing programme has ended. It also has added functions of visual signalling as: - the setting of the water softener, - activation/deactivation of the audible signals, - intervention of an alarm due to the malfunction of the machine. Illuminates when the rinse aid has run out. Rinse aid Salt Illuminates when the special salt has run out. control panel electrolux 9 Audible signals The salt indicator light on the control panel can remain illuminated for 2-6 hours after the salt has been replenished, assuming the dishwasher remains switched on. If you are using salts that take longer to dissolve then this can take longer. The function of the machine is not affected. Setting mode The appliance is in setting mode when all programme indicator light are off and end of programme indicator light is flashing.

Audible signals have been introduced to help indicate which operations the dishwasher is performing: - end of programme - intervention of an alarm due to malfunction Factory setting: audible signals activated. It is possible to deactivate the audible signals, using the programme selection/cancel button.

Deactivation/activation of the audible signals Always remember that when: - setting the water softener, - activating/deactivating the audible signals, the appliance MUST be in setting mode. If a programme indicator light is illuminated and end of programme indicator light is illuminated with fixed light, the last performed or selected programme still set. In this case, to return to setting mode, the programme has to be cancelled.

1. Press and hold the programme selection/cancel button until the light of the set programme turns off and the end of programme indicator light is flashing. 2. Release the programme selection/cancel button. 1.

Press the On/Off button. The dishwasher must be in setting mode. 2. Press and hold the programme selection/cancel button until programme light 1 flashes and programme light 2 illuminates with a fixed light. 3. Press programme selection/cancel button again, programme light 1 illuminates with a fixed light and programme light 2 starts flashing. 10 electrolux control pane 4. Wait until: - programme light 1 turns off, - programme light 2 goes on flashing - the end of programme indicator light illuminates with a fixed light, indicating that the audible signals are activated. 5. To deactivate the audible signals, press the programme selection/cancel button again: the end of programme indicator light turns off indicating that the audible signals are deactivated.

6. To memorise the operation, switch off the dishwasher. To activate again the audible signals simply follow the above operations until the end of programme indicator light illuminates. first use electrolux 11 First use Before using your dishwasher for the first time: Ensure that the electrical and water connections comply with the installation instructions Remove all packaging from inside the appliance Set the water softener Pour 1 litre of water inside the salt container and then fill with dishwasher salt Fill the rinse aid dispenser Set the water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. Water hardness is measured in equivalent scales, Clarke degrees (°dH), French degrees (°TH) and mmol/l (millimol per litre - international unit for the hardness of water). The softener should be adjusted according to the hardness of the water in your area..



[Your user manual](#)

[AEG-ELECTROLUX ESL 63010](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>