



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L14850. You'll find the answers to all your questions on the AEG-ELECTROLUX L14850 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L14850
User guide AEG-ELECTROLUX L14850
Operating instructions AEG-ELECTROLUX L14850
Instructions for use AEG-ELECTROLUX L14850
Instruction manual AEG-ELECTROLUX L14850

LAVAMAT L 14850



User Manual

Washer-dryer

PERFEKT IN FORM UND FUNKTION



[Your user manual](#)
[AEG-ELECTROLUX L14850](#)

Manual abstract:

· Before first starting up, check the machine for any damage incurred during transport. Never install a damaged machine. If parts are damaged, contact your supplier. · If the appliance is delivered in the winter months when there are minus temperatures: Store the washer-dryer at room temperature for 24 hours before using for the first time. General safety · It is dangerous to alter the specifications or attempt to modify this product in any way. · During high temperature washing and drying programmes the door glass may get hot. Do not touch it! · Make sure that small pets do not climb into the drum. To avoid this, please check inside the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · Only use the advised quantities of fabric softener and detergent.

Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. Safety information 7 · Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. · Do not use your washer-dryer to wash and dry articles with whalebones, material without hems or torn material. · Always unplug the appliance and turn off the water supply after use, cleaning and maintenance.

· Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. Installation · When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. · All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. · Always be sure, that there is no water leakage from hoses and their connections after the installation. · If the appliance is installed in a location subject to frost, please read the "dangers of freezing" chapter. · Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash and dry fabrics which are designed to be machine washed. Follow the instructions on each garment label. · Do not overload the appliance. See the relevant section in the user manual. 8 Safety information · Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. · Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. · The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. · Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion.

Only tumble dry items which have been washed in water or require airing. · Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat..



[Your user manual](#)
[AEG-ELECTROLUX L14850](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>