

Congratulations on purchasing your new 7" Portable DVD player with FLO TV™.
Please follow these instructions to set up and start using the unit.

Unpacking the unit

- 1 x 7" portable DVD Player with FLO TV™
- 1 x Audio/Video Cable
- 1 x AC to DC Adapter
- 1 x DC Power Adapter
- 1 x Remote Control*
- 1 x Carrying Bag*
- 2 x Foldable Headphones*
- 1 x Instruction Manual
- 1 x Quick Start Guide
- 1 x Product Registration Card
- 1 x eMusic Card
- 1 x EULA
- 1 x **FLO** Terms of Service and Software License
- 1 x **FLO** Activation Insert

* For DFL710PK only


Powering and Installation

Powering the system indoors

Plug one end of the AC to DC adapter into the DC input jack on the left side of the main unit, then plug the other end into the 100~240 V AC power receptacle.

Powering the system in a car

Plug one end of the DC Power adapter into the DC input jack on the unit, then plug the other end into the vehicle power outlet.

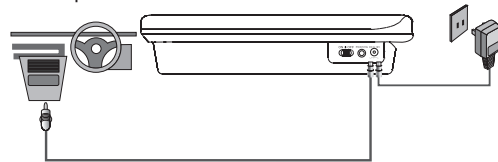

Recharging the built-in battery

1. The DVD player utilizes a long-life Li-Polymer battery for portability. Li-Polymer batteries feature high storage capacity and low level of degradation. This means the Li-Polymer batteries do not have "Memory Effect" and thus can be recharged regardless of whether the battery is fully or only partially discharged. The battery must be charged at least 8 hours prior to first use.
2. There are two methods to recharge the battery. Connect the AC to DC adapter to the unit, and then
 - A. power off the player. The Charge/Power LED will be red. Once fully charged, the Charge/Power LED will turn off.
 - B. power on the player. The Charge/Power LED will be red during charge. Once fully charged, the Charge/Power LED will be green.

Subscribing to the FLO TV Service

To subscribe to the **FLO TV** service, your device will need to be powered on and within a **FLO TV** coverage area. **FLO TV** coverage maps can be found at www.flotv.com/maps

1. Power on your device by pressing the **Power Switch** on the left side of the device.
2. Press the **MODE** button to switch from the DVD player to the **FLO TV** service. The **FLO TV** Preview Channel will appear shortly. If you do not see the **FLO TV** Preview Channel, you may not be in coverage. You must be within the **FLO TV** coverage area to continue with the activation process.

v3.0 (1.0.3.0) (EN/E) 128-8852

3. You will need the following information readily available to proceed with activation:
 - Credit/Debit Card
 - Email Address
 - Device ID
 - Authorization Code

To find the Device ID and Authorization Code, simply change channels up or down. The non-subscribed channel state will display your Device ID and Authorization Code.

4. Log on to www.flotv.com and select **Activate Service**. Follow the prompts and enter the required information. Make sure your device is powered on, in FLO TV coverage and on a subscribed channel (depending on your subscription). Your device should start playing the FLO TV service within 10 minutes.

If your **FLO TV** service is not activated within 10 minutes, try powering off/on. If you still cannot view the **FLO TV** service, call **FLO TV** Customer Care at 1-888-99-FLOTV (1-888-993-5688).



Watching the FLO TV Service

1. Press the **GUIDE** button to access the **FLO TV** Channel Guide.
2. Press the **▲** and **▼** buttons to change channels. (Use these keys, and the **◀** and **▶** Buttons to navigate the Program Guide and other features.)
3. Press the **⏪** button to select a channel from the Program Guide.
4. Press the **INFO** button to view program information for the current program.
5. Press the **SETTINGS** button to access the Settings Menu, Parental Controls, Subscription Information, and System and Legal information.

FLO TV service is a 4:3 picture aspect ratio, and a normal picture will not fill the screen horizontally.



For more information, visit www.flotv.com

Playing CD/DVD

- Press the **Power Switch** to the ON position to start the DVD player.
- Press the DVD Cover Open Switch **⊖** on the top of the device to open the cover. Insert a CD/DVD disc. The disc should start playback automatically. Press **▶II** to pause or resume playback. Press and hold for about two seconds to stop playback.
- Press the **INFO** button to display the main menu of the disc.
- Press the **SETTINGS** button to enter the General Setup Page. Press and hold for about two seconds to enter the System Setup Page. Press the navigation buttons **▲**, **▼**, **◀** or **▶** to navigate left and right, up and down, and back. Press **▶II** to select an item on the screen.

IMPORTANT SAFETY NOTICE: It is unlawful in most jurisdictions for a person to drive a motor vehicle which is equipped with a television viewer or screen that is located in the motor vehicle at any point forward of the back of the driver's seat, or that is visible, directly or indirectly, to the driver while operating the vehicle. This product should ONLY be installed to the rear of the back of the back of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle. In addition, the state of Rhode Island forbids the installation of such a device in a motor vehicle.

Audiovox Electronics Corporation
150 Marcus Boulevard
Hauppauge, NY 11788
www.audiovox.com
© 2010 Audiovox Electronics Corp.

Visit <http://store.audiovox.com> to find the best accessories for your products.

Trademark(s) ® Registered
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>