

THANK YOU!

... FOR PURCHASING YOUR BROTHER MACHINE.
WE ARE SURE YOU WILL BE IMPRESSED WITH THE CONVENIENT WAY THAT YOUR NEW MACHINE PERFORMS SO MANY TASKS WITH GREAT RESULTS!

Follow these simple instructions in numerical order.

For greater detail, consult your Owner's Manual.

 
Alternatively, if you cannot solve a problem:
Refer to **Frequently Asked Questions (FAQ's)** on Brother Solutions Web Site:

URL: <http://solutions.brother.com>

For Australia/New Zealand

! You must select the country where you use the machine after installing the power code.


1 Packing List

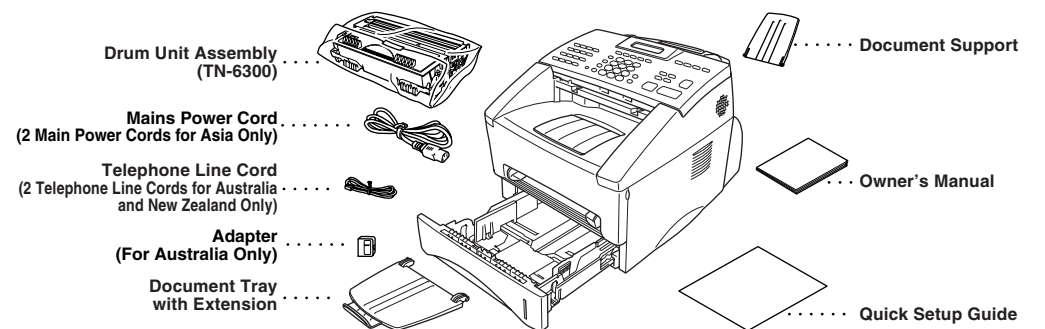

! Keep the packing materials for possible future transport. If you do not pack the machine properly, it may void your warranty.


2 Install Drum Unit

 A. Unpack the drum unit assembly, and gently rock it from side to side five or six times to distribute the toner evenly inside the cartridge.

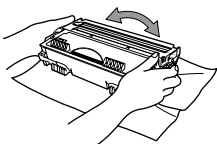


! To prevent damage to the drum, do not expose it to light for longer than a few minutes.

 
B. Remove the protective part.

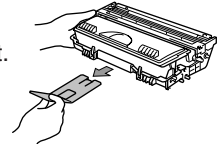

 C. Open the front cover of the machine.

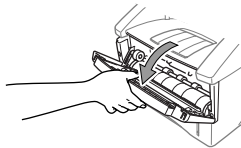

 
D. Insert the drum unit assembly into the machine.

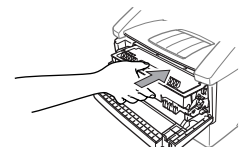


E. Close the front cover.

3 If you have Optional Paper Tray, connect it (otherwise go to Step 4)

 A. Carefully pick up the machine and place it on top of the Optional Paper Tray (Lower Tray).

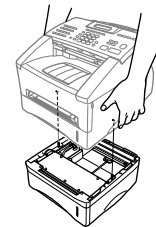

 B. Plug the modular cable from the Lower Tray into the modular socket on the machine.

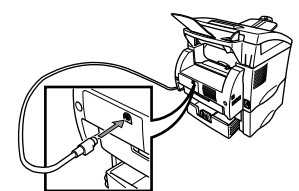


C. The optional paper cassette must be used in place of the upper paper cassette. See instructions supplied with the Optional Paper Tray.

To select which tray will be used for faxes or for copies, see *Lower Tray (With Optional Paper Tray Only)*.


If you move the machine after connecting the Lower Tray, be sure to carefully lift the Lower Tray with the machine because they are not fastened together.

 4 Attach Document Tray/Support

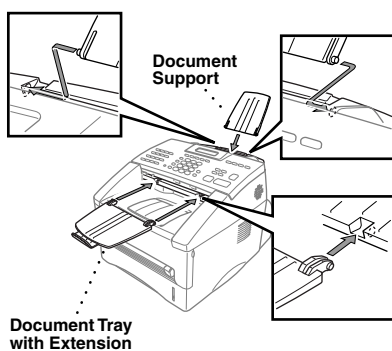


5 Load Paper

 A. Pull the paper cassette completely out of the machine.

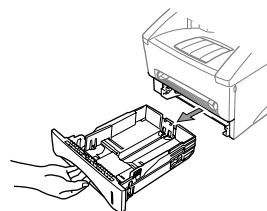

B. Adjust the paper guides at the right and rear of the paper cassette for the paper size you want.

 
C. Load paper in the paper cassette. Press down on the paper to flatten it in all four corners, keeping the paper level below the guide marks.

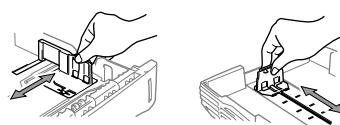

D. Slide the paper cassette into the machine until it locks into place.



 6 Install Mains Power Cord and Telephone Line Cord

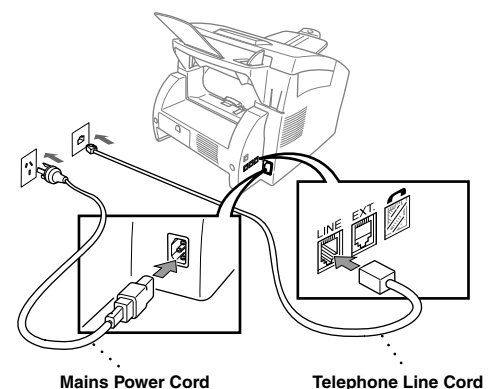

7 Set Your Country (For Australia/New Zealand Customer Only)

You must set your country so that the machine works correctly.

A. Check that the power is turned on (by plugging in the power cord).
The LCD shows:

SET COUNTRY
PRESS SET KEY

B. Press **Set**.
The LCD shows:

AUSTRALIA
SELECT ← → & SET
NEWZEALAND
SELECT ← → & SET

C. Press **←** or **→** to select the country (AUSTRALIA or NEWZEALAND).
(Be careful you set your country.)

D. Press **Set** when the LCD shows your country.

E. The LCD prompts you to make sure of the country again.

 
AUSTRALIA
1. YES 2. NO

F. Press **1** to go to Step **G** –OR– Press **2** to go back to Step **A** to select the country again.

G. After the LCD shows **ACCEPTED** for two seconds.

ACCEPTED

8 Telephone Answering Device (TAD), External/Extension Telephone

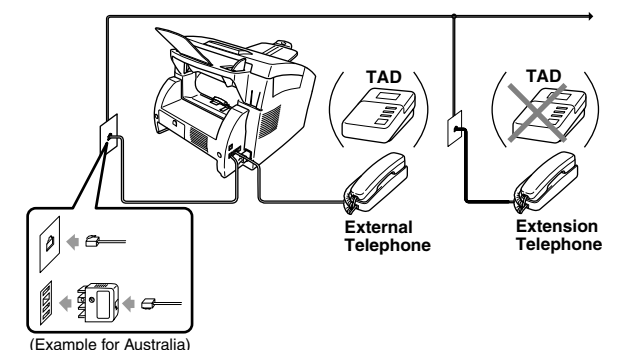

(Example for Australia)

9 Selecting Receive Mode

Choose the mode that best suits your needs by pressing **Mode** repeatedly until you have changed the Fax and F/T lights to the setting you want to use.

(○ means light off. ● means light on.)

● Fax For use with a dedicated fax line.

↓ TAD Every call is answered as a fax.

○ F/T

○ Fax For receiving fax and voice calls on one line.

↓ TAD The machine answers every call automatically and receives a fax or pseudo rings for you to pick up a voice call on an extension/external telephone.

● Fax For use with an external answering device.

↓ TAD The TAD answers every call and stores voice messages. Fax messages are printed.

● F/T Make sure that TAD is connected to the external socket.

○ Fax For receiving fax and voice calls on one line.

↓ TAD You control the phone line and must answer every call

○ F/T yourself on the machine or extension/external telephone.

For more details, see *Receive Mode Settings* in Owner's Manual.

10 Set Date and Time

A. Press **Menu**, (1), (1).

1. DATE/TIME

YEAR: XX
ENTER & SET KEY

B. Enter the last two digits of the year and press **Set**.

MONTH: XX
ENTER & SET KEY

C. Enter two digits for the month and press **Set**.

DAY: XX
ENTER & SET KEY

D. Enter two digits for the day and press **Set**.

TIME: XX:XX
ENTER & SET KEY

E. Enter the time in 24-hour format and press **Set**.

F. Press **Stop/Exit**.

Note: To cancel the setting and exit the menu please press **Stop/Exit**.

11 Set Station ID

A. Press **Menu**, (1), (2).

2. STATION ID


FAX:
ENTER & SET KEY

B. Enter your fax number, then press **Set**.

TEL:
ENTER & SET KEY

C. Enter your telephone number, then press **Set**.

NAME:
ENTER & SET KEY

D. Enter your name using the dial pad and the chart below, then press **Set**. Press  twice to enter a space.

E. Press **Stop/Exit**.

For more details, see *Entering Text* in Owner's Manual.

Press Key	once	twice	three times	four times	five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	7	P
8	T	U	V	8	T
9	W	X	Y	9	W

Note: To cancel the setting and exit the menu please press **Stop/Exit**.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>