



Power button

Press and hold to turn on/off the phone.

Press once to:

- lock/unlock the display when it is active.
- wake up the display when it is in sleep mode.

Home or Back button

Press and hold to view the Home screen.

Press once to view the previous screen.

Mini-USB connector

Use to charge the phone and connect to a computer or headset.

Volume/Camera zoom buttons

Press to increase or decrease the volume level.

Press to zoom in or zoom out in camera mode.

Options button

 
Press to view the Options menu.

Camera button

 
Press to activate the camera, take photos, or capture video.

Idle Screen

The Idle screen appears when your phone is not in use.

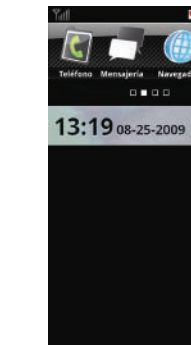

Icons appear on the idle screen to notify you of a new message, a missed call, upcoming calendar event, alarm, or other information.



 
Unlock — To unlock your phone, drag the slider across the screen.



Favorites — Allows you to quickly access your favorite applications.

Home Screen

The Home screen displays the applications available on your phone. To view the Home screen, flick your finger to the right or left on the Idle screen.

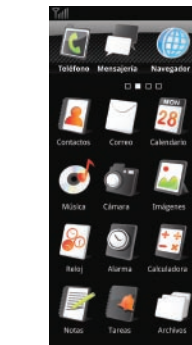

Launch applications — To launch an application tap the icon.

Rearrange icons —

- Press and hold an icon.
- In the Menu manager window, tap **Reorder menu**.
- Press and drag the icon to the desired location.
- Press any button on the side of your phone to lock the icon arrangement.

Connection Manager — Allows you to quickly access connections, profiles, and running applications. To access the Connection Manager, slide your finger from the top to the bottom on any screen.

 
Screen Orientation

To change the orientation of the screen from portrait to landscape and vice-versa, rotate the phone.



Dialer

To launch the dialer, tap the Phone icon.

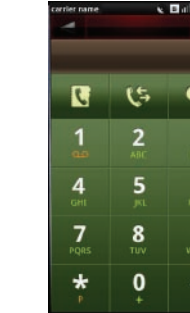

To make a call:

- Dial a number manually using the dialer
- Tap a number in either your phone book, on the recent call log, or from your favorites

Phone book

Tap the icon to view your phone book.

Call Log

Tap the icon to view dialed, received, or missed calls.

Favorites

Tap the icon to view the favorites screen.

Messaging

To launch messaging, tap the Messaging icon.

You can also insert images, videos, or captured photos and sounds in your messages.

Keyboard Navigation

When you start a program or select a field that requires text or numbers, the input panel appears automatically. Commonly used phrases and words appear in the input panel as you enter text.

Tap the language icon to change the input language. Press and hold the language icon to change between the following input options.



- Qwerty Keyboard** — Enter text by tapping letters on the keyboard. Tap **12378** to access numbers and symbols, and **<Alt>** to access more symbols. Press and hold **12378** for emoticons.
- Phone Keypad** — Enter words with predictive text using the phone-style keypad.
- HandWriting** — Write text on the screen using your finger.



Touch Screen Gestures

Use the following gestures to view photos, maps, web pages, and other applications.



Scroll Right or Left

To scroll right or left, slide your finger right or left on the screen.



Scroll Up or Down

To scroll up or down in a list or a page on the screen, slide your finger up or down on the screen.



Zoom Out

To zoom out on an image or a web page, move two fingers closer together on the screen.



Zoom In


To zoom in on an image or a web page, move two fingers apart on the screen.



Drag and Drop

To move an item on the screen, place your finger on the item and drag the item to the desired position.

Browser

To launch the web browser, tap the browser icon .

Creating Bookmarks

To create bookmarks to your favorite web pages:

1. Press the Options button.
2. Tap **Bookmarks** and then tap **Add New**.
3. Enter a name for the bookmark and the website's address.
4. Tap **Save**.

Setting a New Home Page

To set a new home page:


1. Press the Options button and tap **Settings**.
2. Tap **Set home page**.
3. Enter the website's address and tap **OK**.

Page Bar

Slide your finger across the browser to view the page bar.




The icons on the page bar allow you to open multiple windows, navigate, and save web pages.

 Tap to view the previous page.

 

 Tap to view the next page.

 Tap to open a new window.

 Tap to save a page.

Manage Files and Folders

 
To cut, copy, or paste files and folders:

1. Tap the File Manager icon  to launch the File Manager.
2. Press the Options button and select **Cut** or **Copy**. Check boxes appear next to all the files and folders.
3. Select the check boxes of the files or folders you want to cut or copy.
4. Select a destination folder.
5. Press the Options button and select **Paste** to move the files or folders to the new destination.
6. To exit the screen, tap the Back icon .


 
To delete files and folders:

1. Press the Options button and tap **Delete**. Check boxes appear next to all files and folders.
2. Select the check boxes of the files or folders you want to delete.
3. Tap **Delete** and tap **Yes** to confirm.

Search

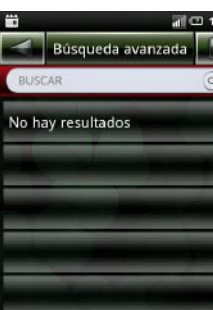

 
To search for contents on your phone:

1. Tap the Search icon  to launch the search screen.
2. Enter the search criteria in the SEARCH box. Tap  to start your search. The search results are sorted and categorized.


To refine your search:

1. Press the Options button and choose **Settings**.
2. Tap **Search category**. Check boxes appear next to the folders.
3. Select the check boxes of the folders you want to search in.

Music

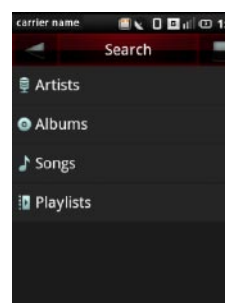
 


To browse and play music:

1. Tap the Music icon . Your music is organized into five categories: **Artists**, **Albums**, **Songs**, **Playlists**, and **Genre**.
2. Tap a category to view the lists within it.
3. Tap any song to start playing the song.

To browse all the audio files available on the phone:

1. Tap the **Search** tab at the top of the page.
2. Orient the phone in landscape view to browse through your album collection.

 **NOTE:** You can also access other functions of the phone while playing music. To go back to the music player, tap the Music icon .


Camera

To launch the camera, press and hold the camera button or tap the Camera icon .

 
To take a picture, press the camera button halfway to focus, and press completely to capture the picture.

You can upload or edit your pictures to the web using the Options menu.

Video

To launch the video application, press and hold the camera button and select the Video icon, or tap the Video icon .

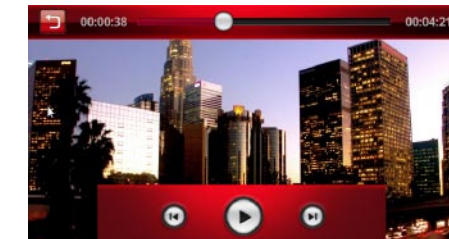

To start recording a video, press the camera button. To stop recording the video, press the camera button again.



Additional Information

Go to support.dell.com to download the following:

- User's Manual — Provides extensive information on other features and advanced options
- PCSync tool — Used to sync contacts, calendar, and personal content such as music and pictures between your phone and a computer

 **NOTE:** Tap the File Manager icon  to access the PCSync tool and User's Manual (available on select models only).

Information in this document is subject to change without notice.

© 2009 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.

October 2009 P/N H1MXJ Rev. A00

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>