


Deluxe Perfect Support Carrier™

Model Numbers: 79249, 79471

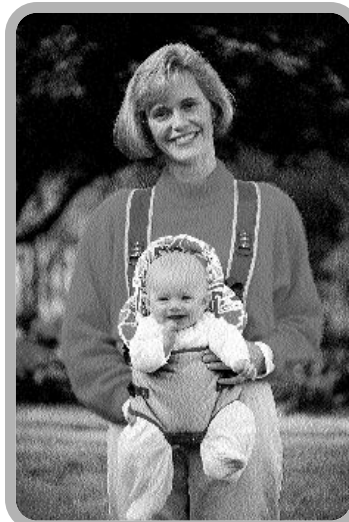

Cradled



Facing Forward



Facing You


Comfortably carries baby in three different ways!
Please save these instructions for future reference.
Maximum weight of child: 26 lbs.

Fisher-Price®


Important Safety Information

- Never use the Deluxe Perfect Support Carrier as an on-the-back carrier.
- Never use the facing forward position with a baby who is unable to hold head and shoulders upright unassisted.
- Never bicycle or jog with your baby in the Deluxe Perfect Support Carrier.
- Make sure all buckles and fasteners are securely fastened.
- When stooping down, bend at the knees (not at the waist) to be sure baby stays secure in the Deluxe Perfect Support Carrier.

Fitting the Harness

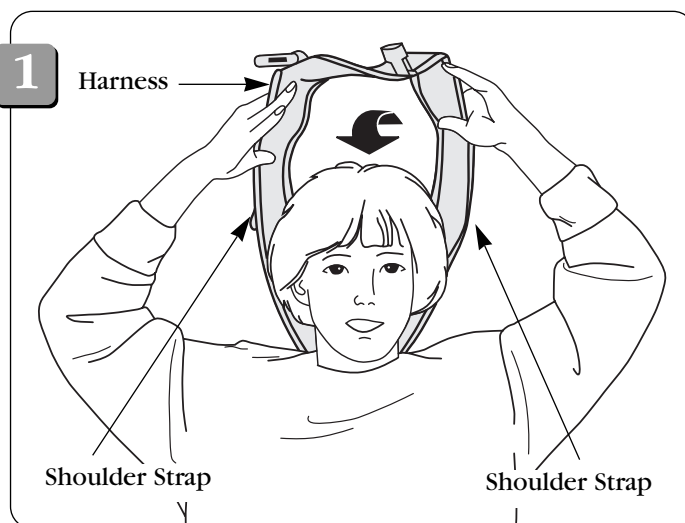


- Place the harness over your head, as shown. **Make sure the shoulder straps and back support belt are not twisted.**

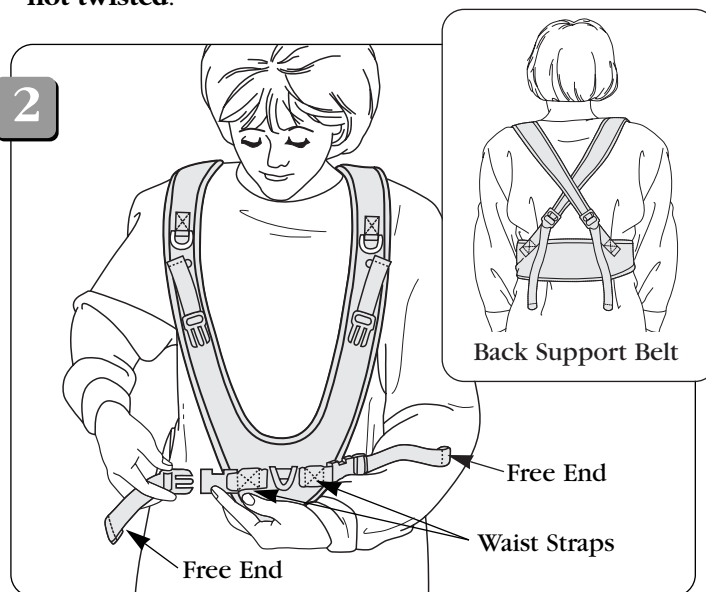

- Buckle each waist strap to the front of the harness.




- Position the harness so that the waist straps are around your waist and the back support belt rests on your lower back.
- Pull on the free end of each waist strap to adjust the fit. The waist straps should be comfortably snug around your waist.

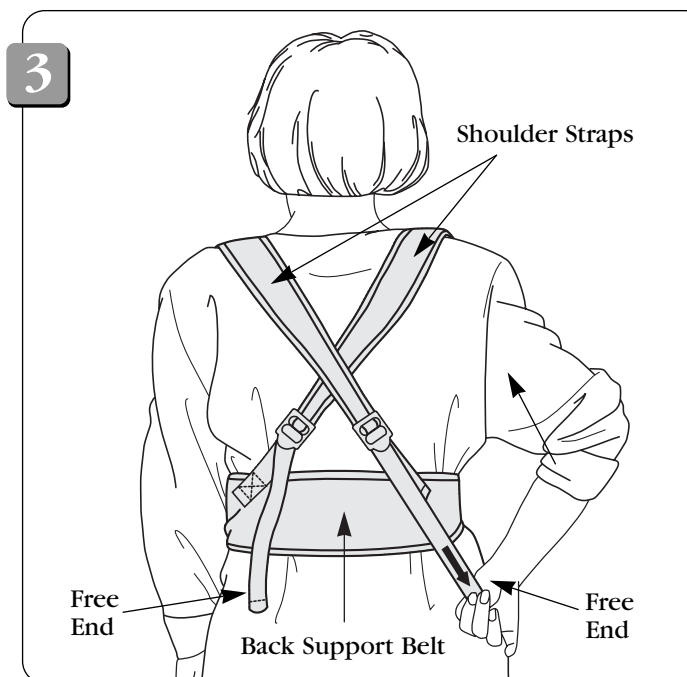


- Reach behind your back and grasp the free end of one shoulder strap.
- Pull down on the free end of the shoulder strap to adjust the length of the harness to the length of your torso. **Make sure the waist straps do not ride up above your waist and the back support belt stays on your lower back.**
- Repeat this procedure to comfortably adjust the other shoulder strap.

Cradled Position

Your baby can be carried or nursed laying down in the cradled position.

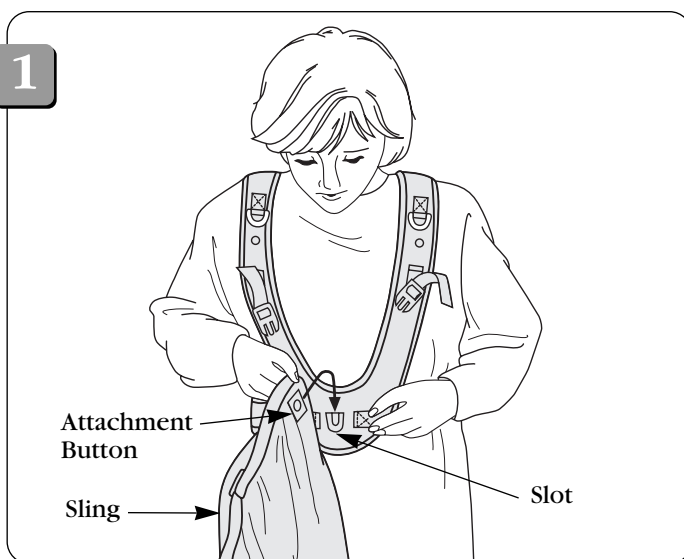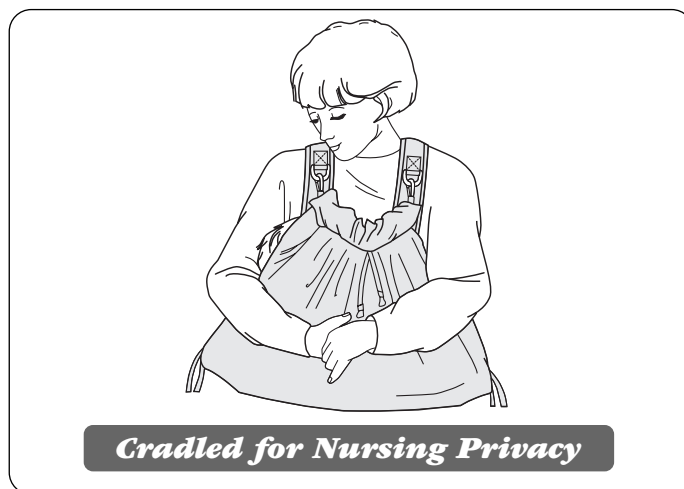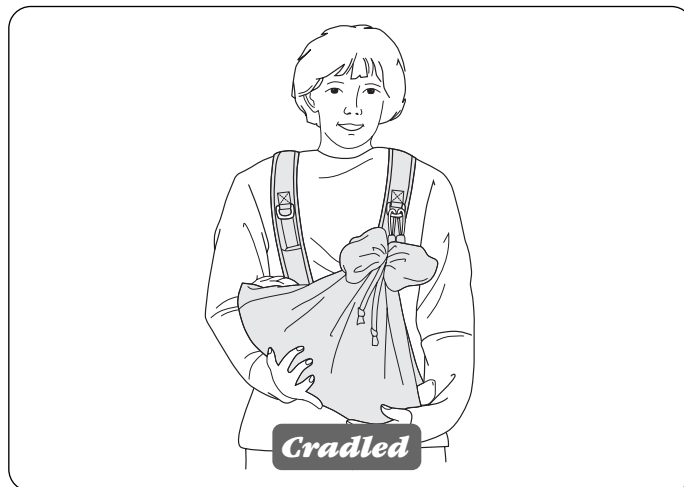


- Insert the attachment button on the back of the sling into the slot on the front of the harness, as shown.
- Slide the attachment button down to the bottom of the slot. **Make sure the attachment button is completely inserted into the slot.**

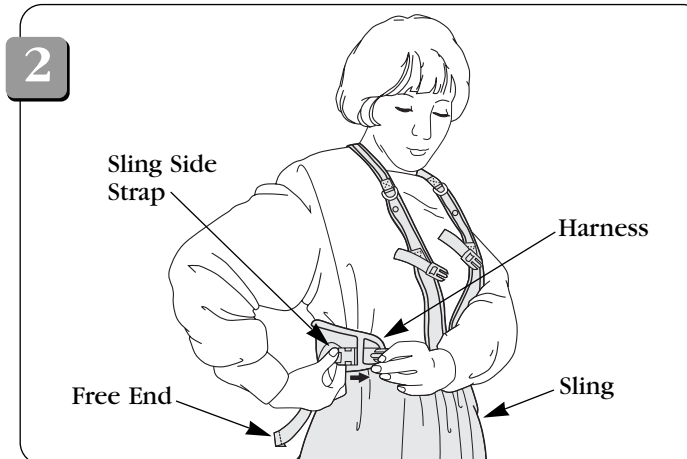

- Buckle each sling side strap to the harness.
- Pull on the free end of each sling side strap to adjust the sling.




- Place the buckles on the harness into the sewn-in pockets to keep the buckles out of baby's way.

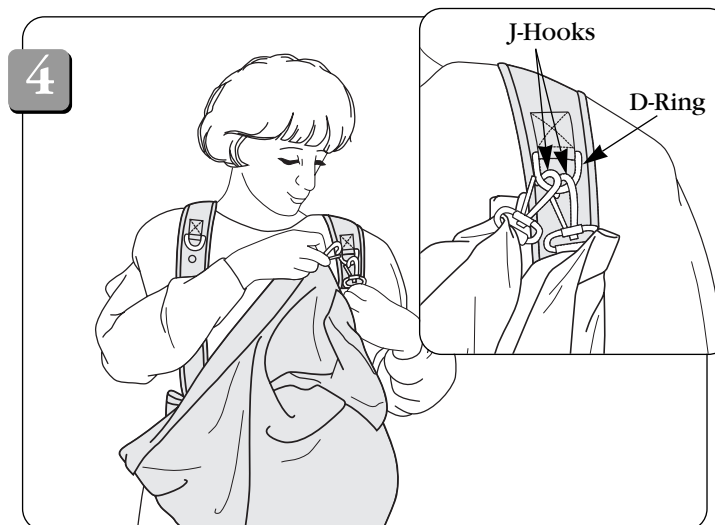

- Clip both J-hooks on the sling to one of the D-rings on the harness.


Cradled Position

5

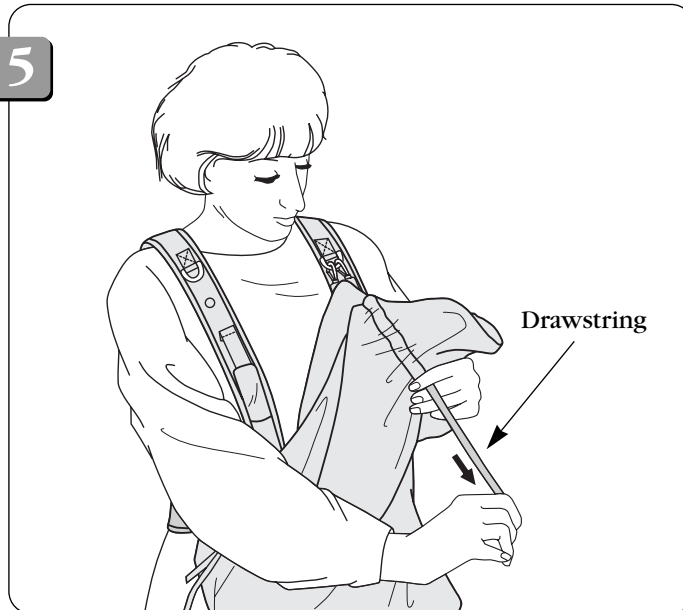


- Pull and tie the drawstring at the top of the sling to close the top of the sling.

7

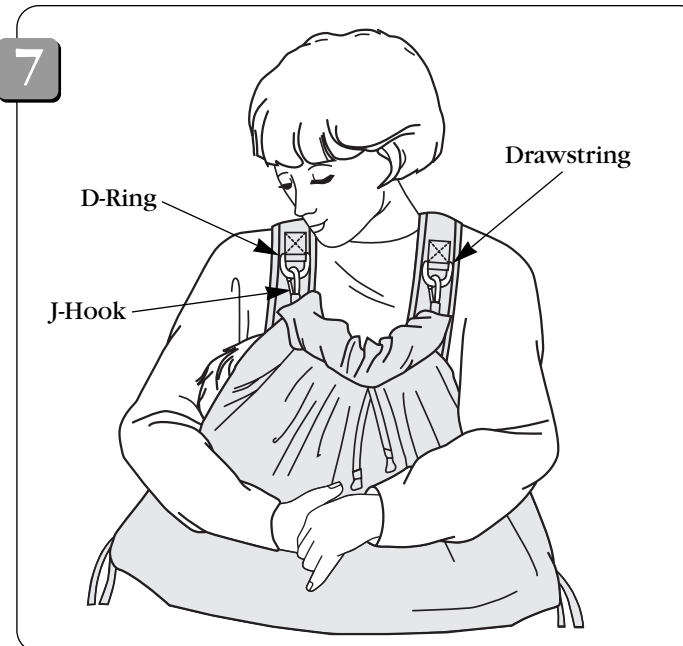

- **For nursing privacy**, attach each of the J-hooks on the sling to the corresponding D-ring on the harness, as shown.

6

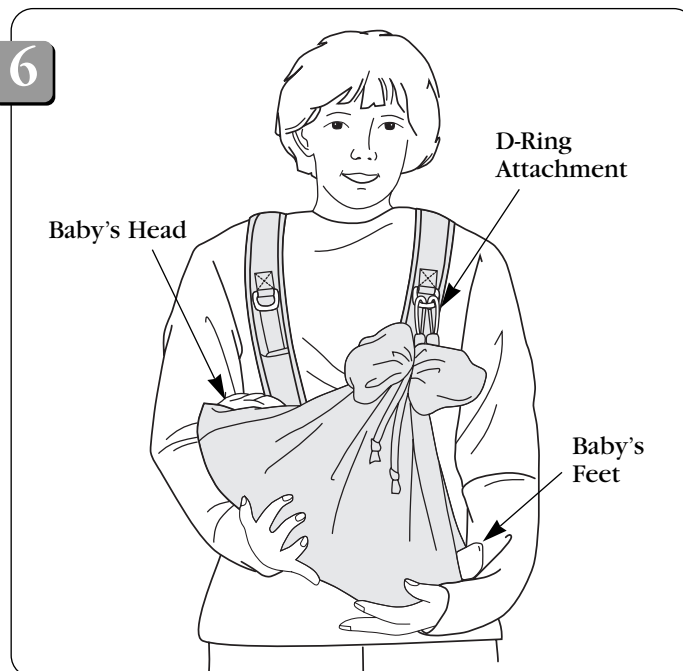

- Place your baby face up in the sling with baby's head on the opposite side from the D-ring attachment. Make sure baby's head is positioned higher than baby's feet.



8




- **To remove your baby**, carefully slide your baby from the sling.

Facing You or Facing Forward Positions

Your baby can be carried upright either facing you or facing forward.

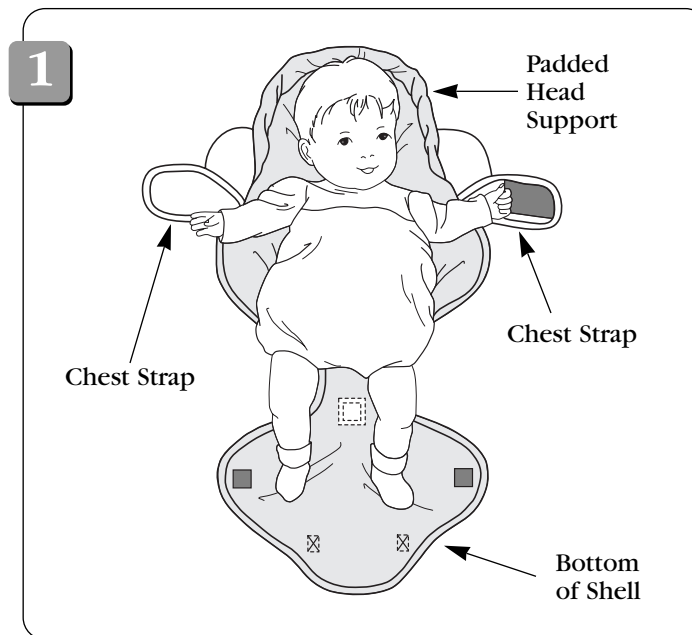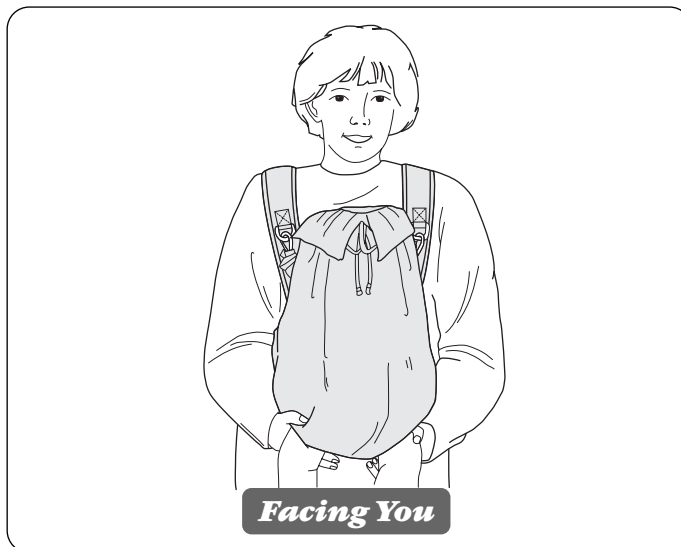


- Wrap your baby in the Perfect Support Shell to use any upright position.
- Place the Perfect Support shell on a flat surface with the printed side up and the padded head support at the top.
- Lay your baby on the Perfect Support shell, as shown.
- Note the positions of the chest straps and the bottom of the shell.

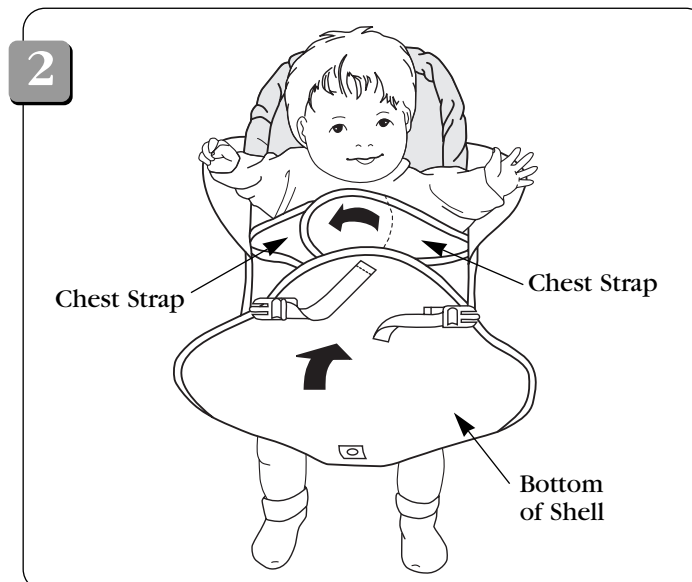


- Fasten the chest straps comfortably around your baby. Do not pull the chest straps too tight. For proper fit, make sure you can insert two stacked fingers between baby's chest and the secured chest straps.
- Lift the bottom of the shell between your baby's legs and wrap it over your baby.

Facing You or Facing Forward Positions

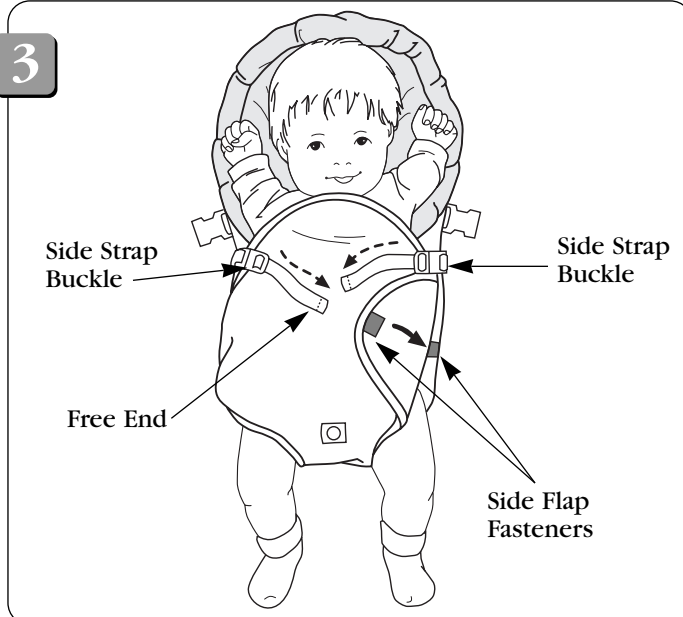

- Fasten the side strap buckle each side of the shell. **Make sure your hear a “click” when fastening each side strap buckle.**
- Position your baby's bottom so that it rests against the bottom of the shell.
- Pull on the free end of each side strap to adjust the size of the shell.
- Pull up on each side strap buckle to be sure they are securely fastened.
- Fasten the side flap fasteners on each side of the shell.


Facing You

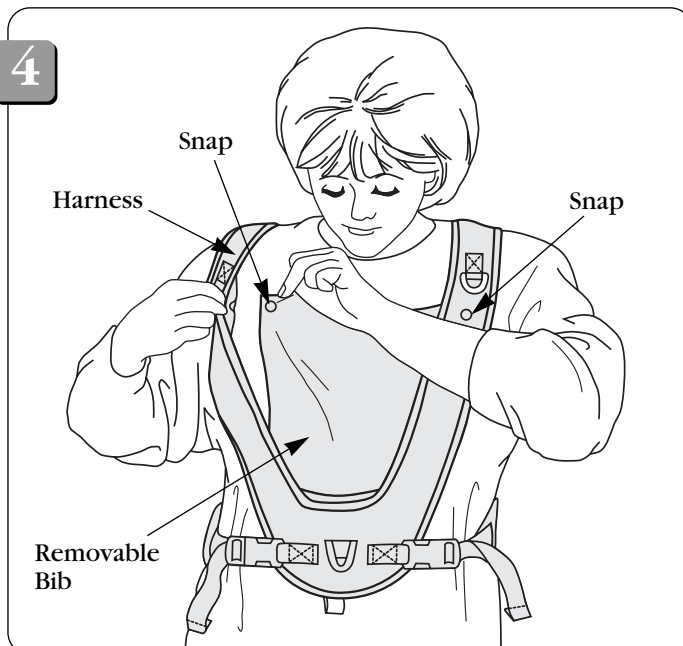

- If desired, snap the removable bib to the front of the harness to protect your clothing.




- Lift your baby in the Perfect Support shell with baby facing you.
- Support your baby's back and bottom with one arm.
- Insert the attachment button on the front of the shell into the slot on the front of the harness.
- Slide the attachment button down to the bottom of the slot. **Make sure the attachment button is completely inserted into the slot.**

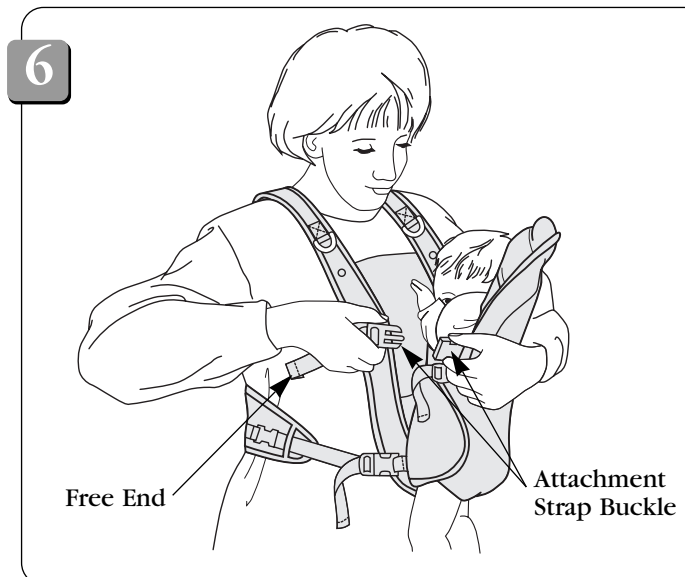


- Cradle your baby with one arm.
- Buckle the attachment strap buckle on each side of the shell and harness. **Make sure you hear a “click” when fastening each attachment strap buckle.**
- Pull on the free end of each attachment strap to adjust the position of your baby for your comfort and the comfort and security of your baby.
- Pull up on the attachment strap buckles to make sure they are securely fastened.


Facing You or Facing Forward Positions

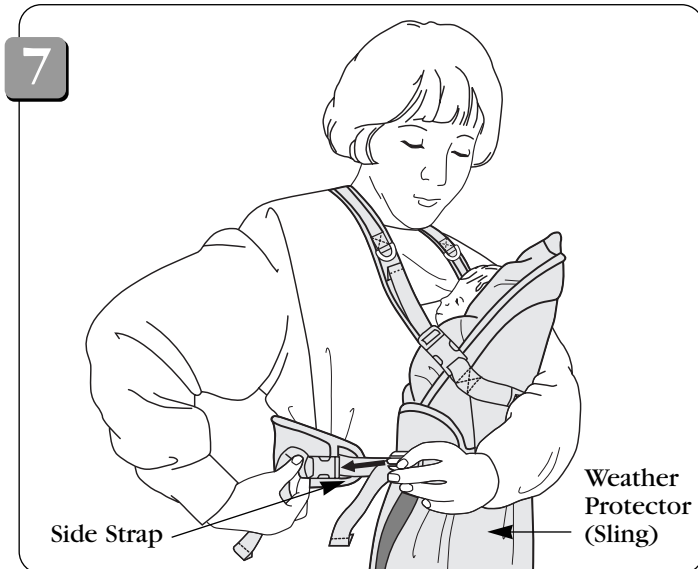

- **To use the weather protector:** Fasten the side straps on the bottom of the weather protector to the buckles on the sides of the harness. The printed side of the weather protector should face outward.

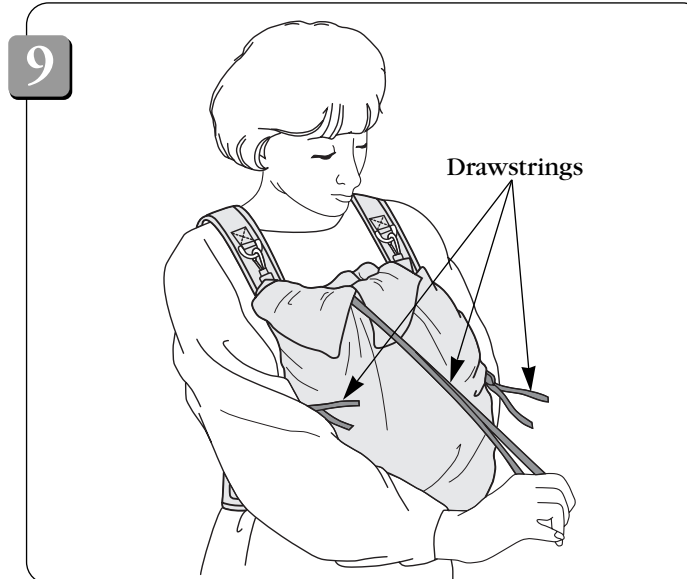


- Pull and tie the drawstrings on the sides of the weather protector to gather the weather protector around baby.
- Pull and tie the drawstring at the top of the weather protector to loosely gather the weather protector over the top of baby's head.

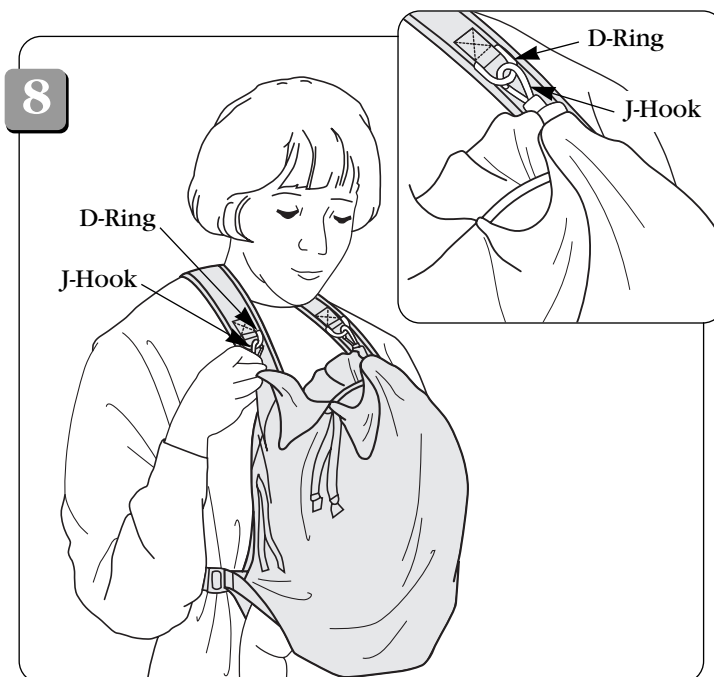

- Attach the J-hook at the top of the weather protector to the corresponding D-rings on the harness. The printed side of the weather protector should now be facing towards you.

Facing Forward

IMPORTANT! Never use a facing forward position with a baby who is unable to hold head and shoulders upright unassisted.

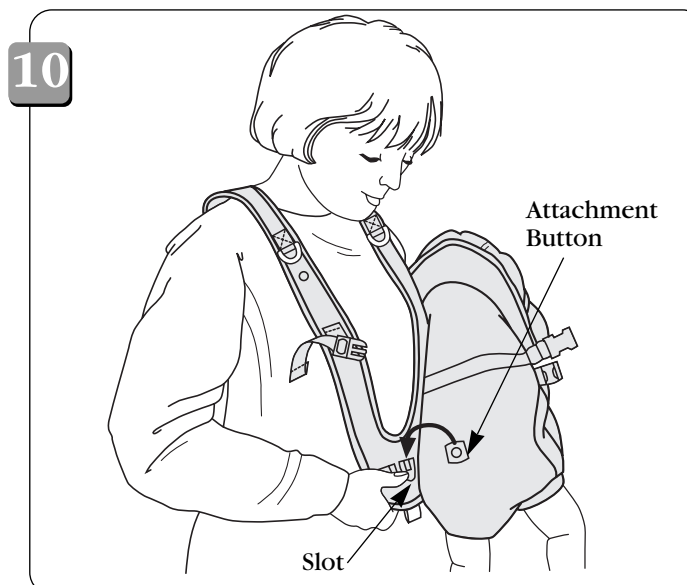

- Lift your baby in the Perfect Support shell with baby facing away from you.
- Support your baby with one arm.
- Insert the attachment button on the back of the shell into the slot on the front of the harness.
- Slide the attachment button down to the bottom of the slot. **Make sure the attachment button is completely inserted into the slot.**


Facing You or Facing Forward Positions

11



- Cradle your baby with one arm.
- Buckle the attachment strap buckle on each side of the shell and harness. **Make sure you hear a “click” when fastening each attachment strap buckle.**
- Pull on the free end of each attachment strap to adjust the position of your baby for your comfort and the comfort and security of your baby.
- Pull up on the attachment strap buckles to make sure they are securely fastened.


12

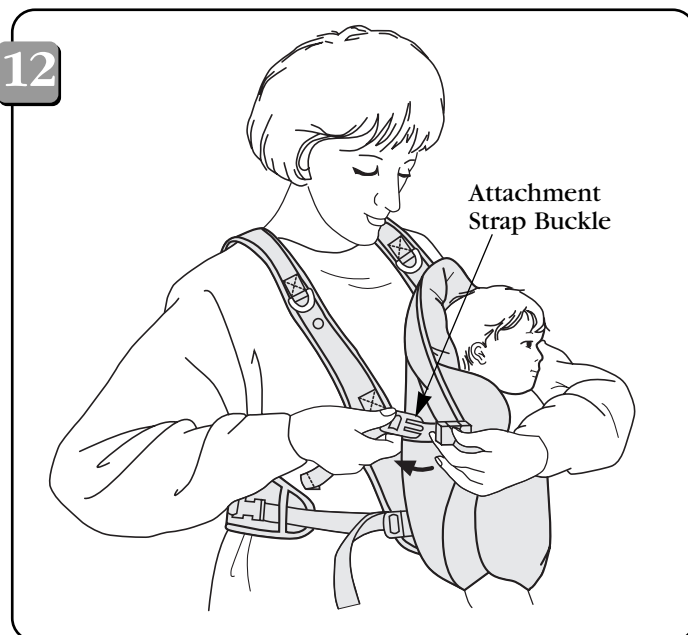

To remove the shell from the harness:

- Cradle your baby with one arm.
- Unbuckle the attachment strap buckles on each side of the shell and harness.

13

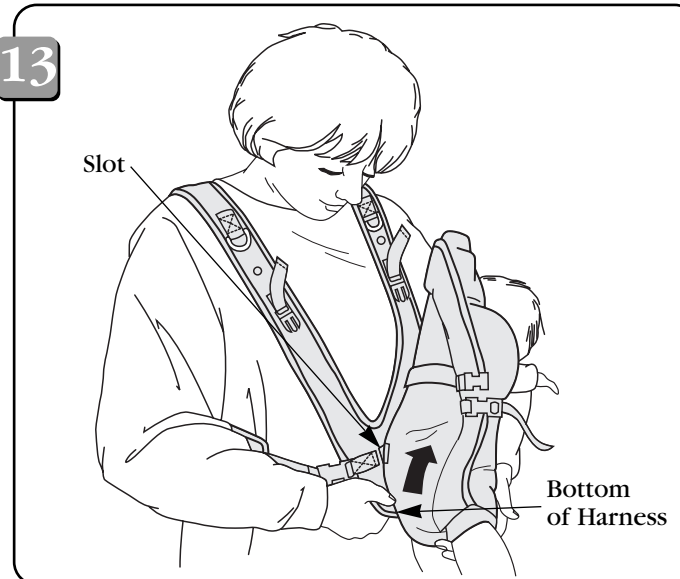

- Grasp the bottom of the harness.
- Lift the shell and your baby up to slide the attachment button on the shell out of the slot on the harness.
- Place baby on a stable, flat surface to take baby out of the shell.

Care and Cleaning

- The Deluxe Perfect Support Carrier is machine washable. Fasten all buckles and fasteners before washing.
- Machine wash the harness, shell, bib and sling in cold water on the gentle cycle. Do not wash with other articles. Do not use bleach.
- Tumble dry on low heat and remove promptly.
- Brush all lint off of the hook and loop fasteners after washing and drying.
- Periodically inspect all straps, buckles, and fasteners for excessive wear or damage. Do not use the Deluxe Perfect Support Carrier if it is excessively worn or damaged.

Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

In Canada, call 1-800-567-7724, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500302.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>