

Versión en español
 Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131834700.
 Spanish Owner's Guides
 Frigidaire Home Products
 P. O. Box 212378
 Augusta, GA 30917

Before Operating Your Dryer
Read your dryer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your dryer owner's guide before operating this appliance.

Operating Steps
Read Drying Procedures in your Owner's Guide. It explains these operating steps in detail.


- 1. Prepare items for drying.**
- 2. Check that lint screen is clean and in place.**
- 3. Load the dryer.** If desired, add a dryer fabric softener sheet.
- 4. Close the dryer door.**
- 5. Set Temperature control.**
- 6. Turn cycle selector clockwise to desired setting.**
- 7. Start dryer.** Turn the Turn to Start control clockwise to ON. **Hold for 1-2 seconds and release.**

- 8. At end of cycle, remove items immediately and hang or fold.**
- 9. Clean lint screen after every load.**

Temperature Selection
Always follow directions on fabric care labels.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Cool Down (no heat) setting only.

(continued, reverse side)

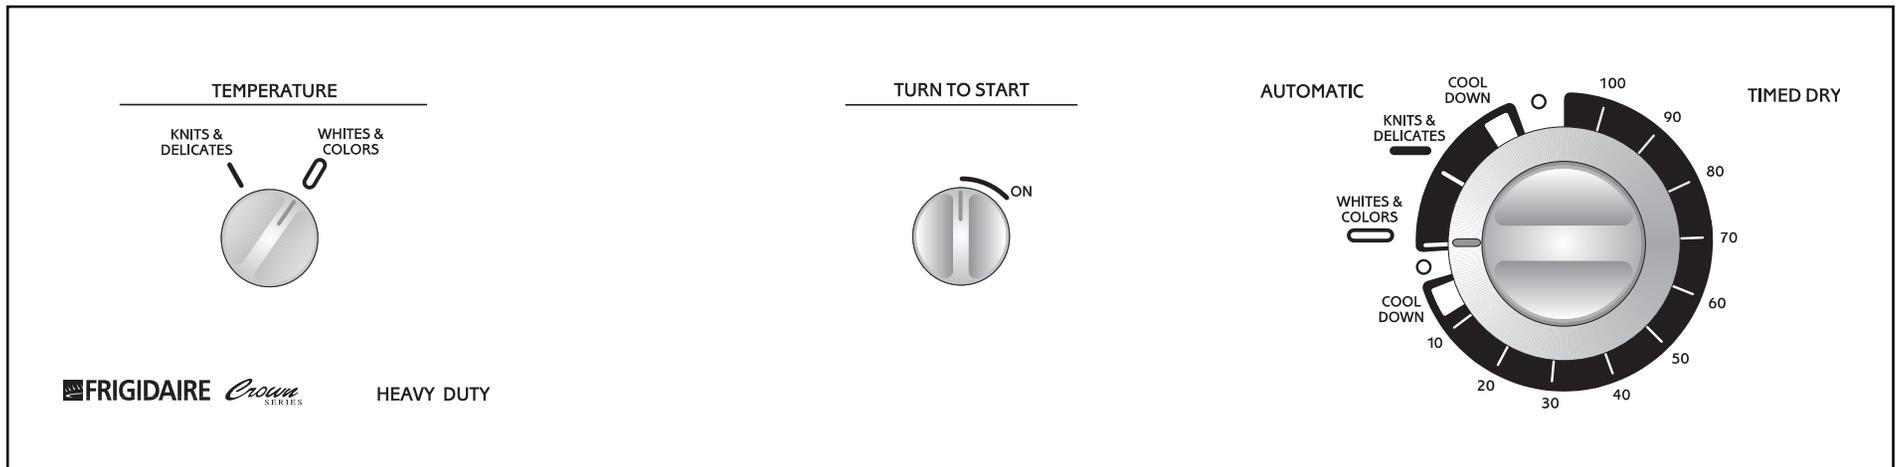

The **WHITES & COLORS (HIGH HEAT)** and **KNITS & DELICATES (LOW HEAT)** temperature settings may be used with any cycle setting.

- WHITES & COLORS (HIGH HEAT) is suggested for regular items.
- KNITS & DELICATES (LOW HEAT) is suggested for permanent press, knit and delicate items.

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Timed Dry Cycle

This cycle provides up to 100 minutes of drying time at the temperature selection of your choice.

Automatic Cycle

This cycle is best for regular and permanent press items that can be tumble dried. Drying time is determined automatically at the temperature selection of your choice.

- For items requiring more drying time, set cycle selector on **WHITES & COLORS**.
- For items requiring less drying time, set cycle selector on **KNITS & DELICATES**.

This cycle is best for items of similar fabric, weight and construction.

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>