


# **Amana**

A **Raytheon** Company

## **Use and Care Guide Home Laundry Automatic Dryer**

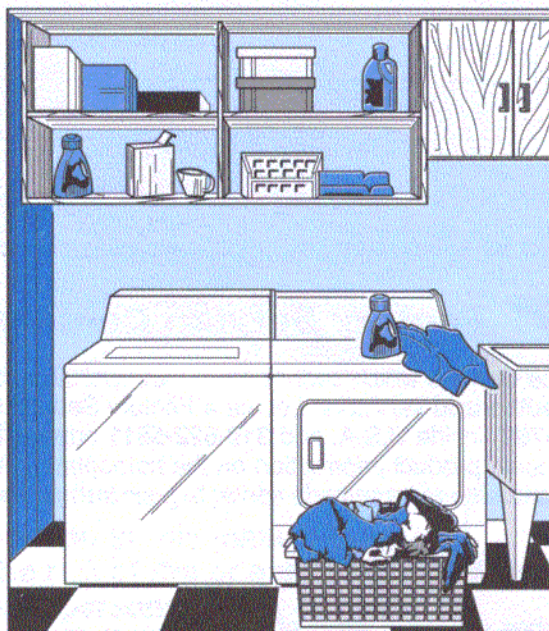

D249IE3A

**Models:**  
**(Electric Heat)**  
LE4217W/L2  
LE8217W/L2

**(Gas Heat)**  
LG4219W/L2  
LG8219W/L2

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

**Part No. 503140**  
**5/95**

# How to Use Your Dryer . . .

The timer knob will not advance with the same regularity in the AUTOMATIC cycle as it does in the TIME DRY cycle.

For example, you may notice the timer knob remains in the same position for 15 minutes before it begins to move. THE TIMER IS NOT MALFUNCTIONING. This only means it took 15 minutes for

the load to become dry enough to start advancing the timer knob. The length of time it takes for the timer knob to begin advancing depends on the type and size of load being dried.

## Automatic Regular/Permanent Press Cycle

Suggested Dryer Settings Automatic Regular / Permanent Press Cycle			
Load Type	Load Size		
	Small	Medium	Large
Heavy Cottons Rugs Denim Corduroys	More Dry	Between More & Less Dry	Less Dry
Cotton Work Clothes Cotton Knits Cotton Shirts	More Dry	Between More & Less Dry	Less Dry
Dresses Dress Shirts (Perm. Press-Polyester/Cotton Blend)	Between More & Less Dry	Less Dry	Between Less Dry & Cool-Down
Sheer Lightweight Cottons Items Labeled "Dry With Low Heat"	Less Dry	Less Dry	Between Less Dry & Cool-Down

## Time Dry Cycle

This cycle will operate the dryer for the number of minutes for which it is set (up to 100). Use for any load desired. Use for items you might want to remove while still damp.

Turn the timer knob for the number of minutes required for drying. This cycle has a five minute cool-down (no heat) period. The dryer will not heat if set for less than five minutes.

Suggested Dryer Settings Time Dry Cycle	
Load Type	Minutes (Approx.)
Cottons Heavyweight / Average Load	50 - 90 (More Dry)
Lightweight / Average Load	20 - 40 (Less Dry)

**Hint:** Set timer based on previous load types and sizes. If load is too dry, set timer closer to Less Dry mark. If load is too wet, set timer closer to More Dry mark.

### Cool-Down

The AUTOMATIC REGULAR/ PERMANENT PRESS cycle has a five minute cool-down period at the end of the cycle. During that time, the load is tumbled with no heat. This helps reduce wrinkling. Setting the timer knob in the COOL-DOWN position will result in the load being tumbled with no heat. Do not remove load until COOL-DOWN period is complete and dryer stops.

The times suggested are approximate. Your loads, installation, and drying requirements will determine the setting you should use.

## Operation Instructions

### ▲WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, Pages 2 and 3, before operating the dryer.

5. SELECT TIMER SETTING in cycle desired: AUTOMATIC REGULAR/PERMANENT PRESS or TIME DRY. These cycles control the drying time.

The Energy Saver settings, marked with a dot (·), show which dryer settings will use the least energy.

6. START DRYER: Push the timer knob in.

TO STOP DRYER AT ANY TIME, open door or turn timer knob to an OFF position.


TO RESTART DRYER, close door, reset timer if necessary, and push the timer knob in. Your dryer is designed so that it will not operate if the door is open.

## To Dry Clothes


**IMPORTANT:** Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

1. CLEAN LINT FILTER before each use.
2. LOAD DRYER. Open dryer door. Shake out laundry and place in dryer.
3. CLOSE DOOR. Dryer will not operate with the door open.
4. SELECT drying temperature: The **FABRIC SELECTOR** controls the drying temperature.

### FABRIC SELECTOR

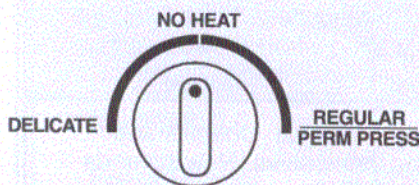

**IMPORTANT:** The heat on the DELICATE setting is not sufficient to remove wrinkles from permanent press.

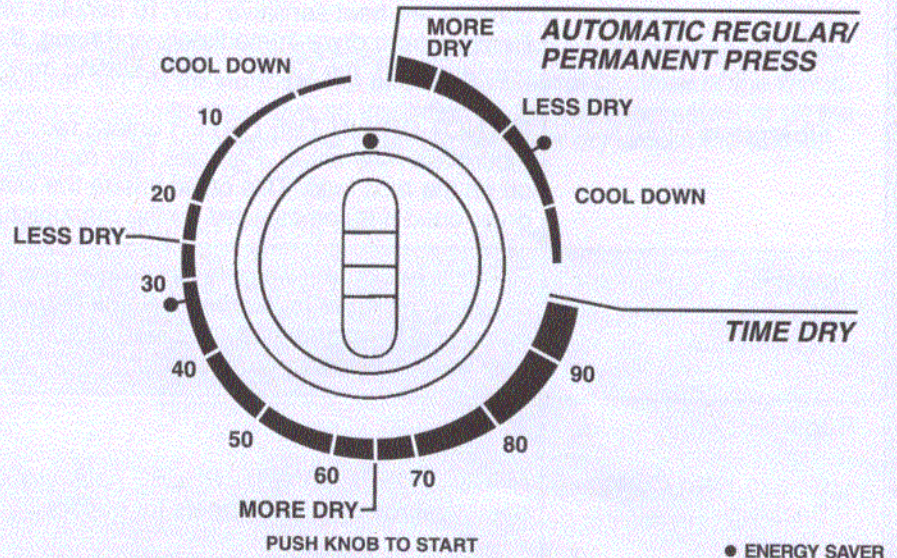

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>