



ASTONE[®]

Design for Life

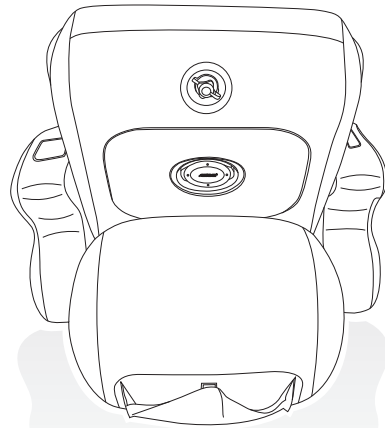

Sit N Joy

Portable Inflatable Multimedia Massage Chair

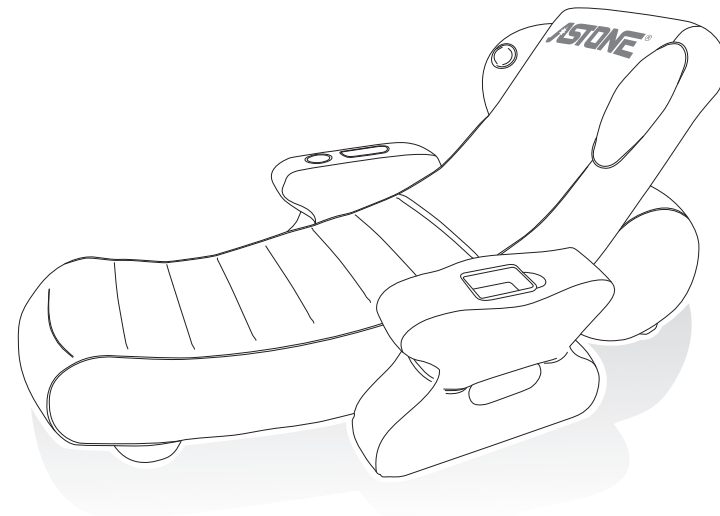

USER MANUAL

ASTONE[®]
www.astone.com.au

MC01A

Sit N Joy

Portable Inflatable Multimedia Massage Chair

(ENGLISH)

Table of Contents

Introduction	1
Warning	2
List of Component	3
Safety Precaution	4
Product Installation	4
Operating the Sit N Joy	7
Trouble Shooting	13
Maintenance	14
Product Specification	15
Remote Control Unit	16
Warranty & Legal Disclaimer	17

Introduction

Thank you for purchasing the Astone Sit N Joy. Before you install and use the product, please read and follow the instructions thoroughly in this user manual.


Sit N Joy is an amphibious battery powered multifunctional inflatable massage chair designed by Astone Holdings Pty Ltd.

With the multi-function massage pads and stereo speaker built-in, you can enjoy a total relaxation on smooth aquatic environments (like swimming pool, calm lake, pond or beach) or on land (like by the pool-side, camping ground, garden or in the living room at home).

⚠ WARNING

- Sit N Joy is not a life saving device. Recommend to wear life jacket when in use on water.
- Sit N Joy is designed for users age 14 and above. No one under the age of 14 is permitted to use Sit N Joy without adult supervision.
- If you are using any electronic cardiac pacemaker or similar devices, do not use Sit N Joy.
- Only use the product in fine weather condition and in a safe controlled environment.
- Installation or disassemble process SHOULD only be handled by adult.
- Pay attention when handling the inflatable body chapter for details. Refer to page 10 under the Advice and recommendation for more detail instructions.
- When using the Sit n Joy in a aquatic environment, alert other swimmers or person/s around you.
- ALWAYS remove the batteries from the product when product is not in use or to be kept in storage for a period of time, and before deflating the product for traveling.
- Do not expose the Sit N Joy under direct sunlight for a long period of time without use.
- Do not use the Sit N Joy as a towing devise, it will damage the inflatable body.
- Sit N Joy is to be operated on water only when fully assembled in accordance with the instructions.
- We recommend users to apply Suntan and / or UV protection lotion to avoid sunburn when using the Sit N Joy under direct sunlight.

List of Component

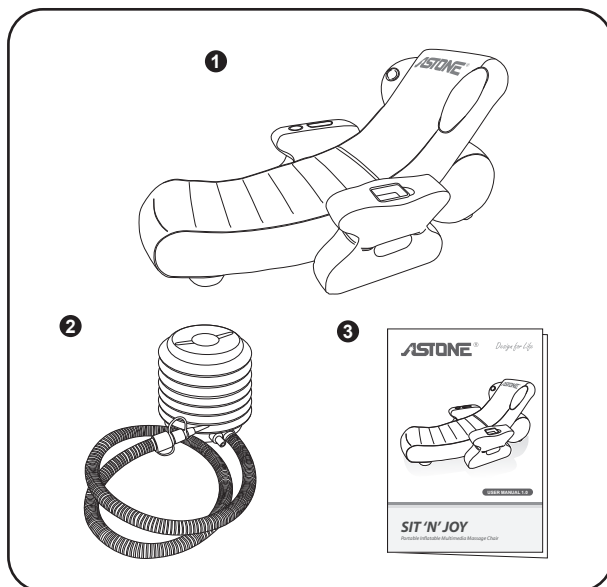

- ❶ Inflatable Body
- ❷ Manual Operated Inflator
- ❸ User Manual


Safety Precaution

- The product is NOT designed for the children under 14 years old.
- NEVER allow children to operate Sit N Joy without adult's supervision.
- Always wear suitable sportswear, especially the life jacket when using Sit N Joy on water.
- Do not use or operate Sit N Joy when or after consuming drugs or alcohol.
- DO NOT use the product if you suspect any leakage of air from the inflatable body.
- Should you feel dizzy or uncomfortable when using our massage features, please stop using it immediately and when necessary, consult your doctor.


Product Installation

Inflate the Inflatable Body with Inflator

For maximum safety and stability, the Inflatable Body is made up of 4 independent air chambers each with an independent air-tip nozzle.

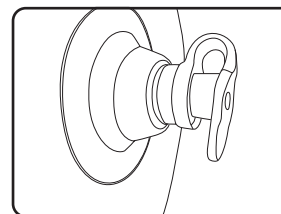


Nozzle of the Arm-rest


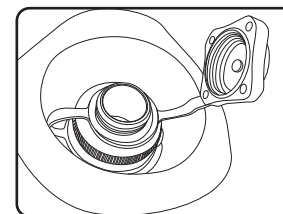


Nozzle of the Main Body & Supporting Air-bag


- ❶ Unscrew the upper air-tip cap of the air-tip on the main body. (ensure the lower air-tip ring tightly fastened)

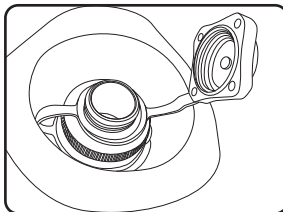



- ❷ Use the appropriate nozzle provided with the inflator and insert to the above said air-tip.

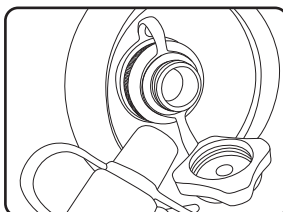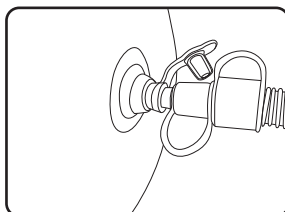



- ❸ Inflate the chamber by stepping on the inflator.

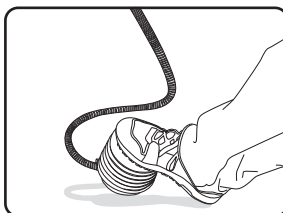



- ❹ Screw up or close the air-tip cap tightly afterward. The nozzle must be pressed down into the inflatable body to avoid air-tip cap being removed accidentally.

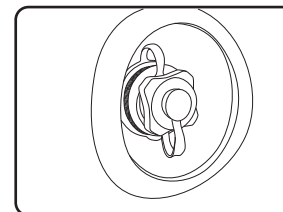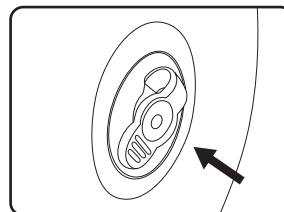



- ❺ Repeat the above steps for inflating the Supporting Air-bag and Arm-rest.
❻ To deflate the body after used, unscrew the lower air-tip cap completely or by squeezing the nozzle while pressing the inflatable to accelerate the release of air.

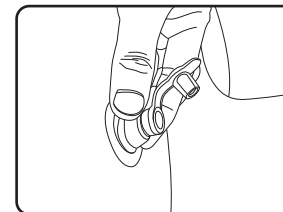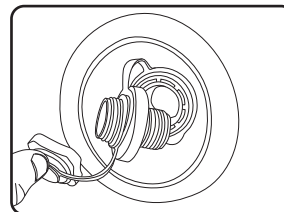

To secure the Sit N Joy in 1 position on land under windy weather condition, user can put sand into the 2 sand-pockets equipped at the front & rear.

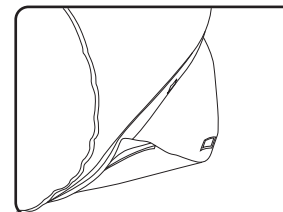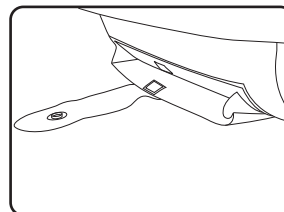

Or, by applying tent stakes to the grommets near the sand pocket.

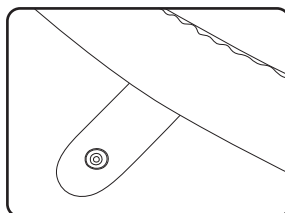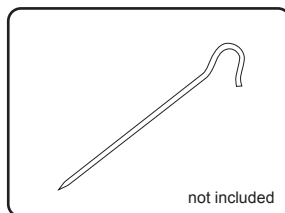

However, tent stakes should not put together with the inflatable while storage or traveling as, the tip may cause puncture.


Operating the Sit N Joy

Insert the dry batteries into the battery compartment


The waterproof battery compartment holds 4 AA size (UM3/R6) batteries with DC 6V to power up the vibration massage pads.




- 1 Unscrew the cover (anti-clockwise) of the battery compartment at the back of the inflatable main body.

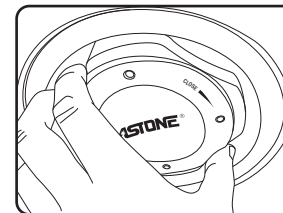

- 2 Insert the batteries (alkaline recommended) according to the engrave polarity marking.

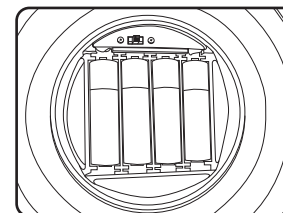

- 3 Switch the main power ON by sliding the power switch according to the engraved marking.

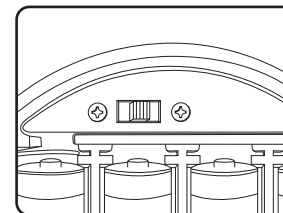


- 4 Then, close the cover (clockwise) back to position tightly.

- Battery Safety and Care
 - Always use correct type of dry battery --- AA/UM3/R6 X 4 pieces. Recommend alkaline battery for better performance.
 - Do not use rechargeable battery.

- Do not mix new with used batteries.
- Do not put battery near or into fire / heat source, explosion may occur. Remove all batteries from the Battery Compartment during storage or traveling.
- Do not leave exhausted batteries in the Battery Compartment as it may cause leakage and corrosion.
- Please do not let water in to the battery compartment during batteries changing process. Please dry your hands and the surrounding of the battery compartment before opening the battery cover, water / sea water goes in may result rusting of the battery contacts. Make sure to screw tight of the battery cover before playing in water!
- Always keep the battery compartment cover lock securely before using the product on water or when cleaning the Sit N Joy.

The Massage feature


To provide you a real relaxation, Sit N Joy is equipped with 4 vibration massage pads at the 3 most strategic locations - shoulder / spine / lumbar.

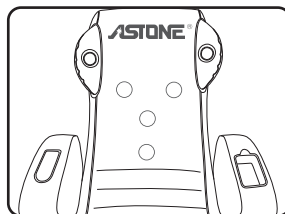

To start with the Sit N Joy massage feature, all you need is sit comfortably on the product and select and press the desired functions on the massage controller situated on the right Arm-rest.

- Press the "power" key to switch ON the massage controller. Power LED light will turn on.

- Press the "mode" button to choose from the 8 different types of massaging pattern. Corresponding LED will turn on for indication.
- Press the "auto" button for sequential switch to different types of massaging pattern automatically. Corresponding LED will turn on for indication.
- Press the "position" key if you want to activate only one of the massage positions. Corresponding LED will turn on for indication.
- Press the "strength" key to select High / Medium / Low massaging magnitude. Corresponding LED will turn on for indication.
- Press the "timer" key to set the massage period for 15 or 30 min. Corresponding LED will turn on for indication.

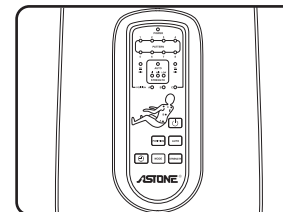

- Advice and recommendation
 - The maximum loading weight of the inflatable body is 100 Kg (220Lb.) Do not overload it.
 - Recommend not to use massage for more than 30 min continuously. For users who have spinal problems / heart disease or disorder, please consult your doctor before using this product.
 - Do not over inflate the inflatable body. Use only the manual inflator that is provided with this package.
 - Do not leave the inflatable body under strong or direct sunlight for over 3 hours. The ultraviolet ray will degrade the inflatable body.
 - Do not operate the inflatable body over rocky surface. The sharp edge will cause puncture.


The Built-in speakers & Waterproof storage box

Sit N Joy comes equipped with 2 built in stereo speakers and a waterproof storage box to house most kind of portable devices like MP3, iPods, PMP or simply radios.

The speakers are designed to provide soft, crystal clear music for your personal listening pleasure only and will not cause disturbance to people surrounding you.


To play music through our Speakers

- 1 Open the storage box by flipping the locking lid towards yourself.

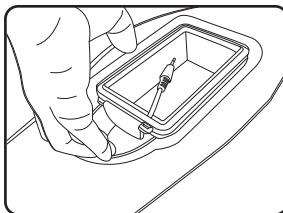


- 2 Connect the audio cable in the Box to the earphone jack of your portable Audio device.

- 3 Switch your player on and adjust the volume as your desire.

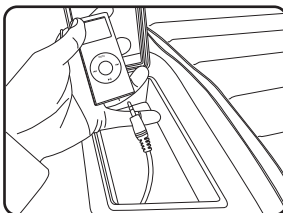

- 4 You can also secure your valuable belongings by putting them into the storage box so, no more worrying about losing your car key, wallet etc. afterward. All you need is remember to lock up the lid to prevent water come in while having fun on water.

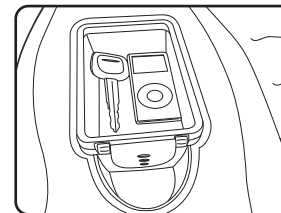

- Advice and recommendation
 - Always lock the lid of the storage box to prevent items inside the box from dropping into water should the product capsize accidentally.
 - Dry your hands while handling the music player and always keep the box free from water when closing it.
 - Do not pull the Audio cable with extreme force as it may not only damage the cable or your music player but also affect the waterproofing of the box.
 - If water existed inside the storage box, remove it before continue for using.
 - Flush the whole product (especially the audio cable) with fresh water after using on salt water. Before storage, ensure the product is completely dry.

Trouble Shooting

- ❶ No massage function with batteries inserted onto the battery compartment. No LED turns on even the “power” key of the controller is being pressed.
 - Possible causes:
 - The battery is exhausted.
 - The batteries are inserted with wrong polarity.
 - The Main Power Switch inside the battery compartment is at OFF position.
 - Solution/s:
 - Replace the Battery.
 - Double check with the battery's polarity according to the engraved marking.
 - Slide the Main Power Switch to ON position according to the engraved marking.
- ❷ The massage strength is too weak. LED glow dim on the Controller.
 - Possible causes:
 - The battery is almost exhausted.
 - The batteries are inserted with wrong polarity.
 - The massaging magnitude was set to “Low”
 - Solution/s:
 - Replace the Battery.
 - Double check with the battery's polarity according to the engraved marking.
 - Press the “Strength” key to select High massaging magnitude. Corresponding LED will turn on for indication.
- ❸ No or only one audio channel was found playing. Volume is small.
 - Possible causes:
 - The earphone plug is not completely plug-into the music player.
 - The volume of the music player was set too low.
 - Solution/s:
 - Securely and completely plug the earphone plug to the music player.
 - Adjust the volume of the music player to higher level.

- ❹ The Inflatable body leaks during use.
 - Possible causes:
 - The air-tip cap and / or the air-tip ring of the inflatable air chamber is not screwed up tight.
 - The inflatable body was damaged with holes or cracks.
 - Solution/s:
 - Make sure air-tip cap and / or the air-tip ring is screwed tightly and air seal.
 - Consult the dealer for providing servicing to mend the leaking part.

Maintenance

- ❶ Beware of the water depth when operating Sit N Joy. In shallow water, the Inflatable body may collide with the seabed and caused damage.
- ❷ Always use fresh water to rinse the Sit N Joy thoroughly after use (with Battery compartment cover & Storage box cover securely locked).
- ❸ Sit N Joy should store in a dry cool place without any corrosive / flammable solvents or sharp object nearby.
- ❹ Always remove the dry batteries from the Battery compartment after use or during storage.
- ❺ Sit N Joy is not supposed to store in outdoor. Store it in dry cool place and avoid strong sun-light.
- ❻ Do not carry the product by pulling the Arm-rest. Grip the whole inflatable body for carrying.
- ❼ DO NOT use any rechargeable battery for Sit N Joy. Dry batteries are not rechargeable.
- ❽ Never operate the Sit N Joy nearby coral reef or rocky seabed; the inflatable body may punctured by the sharp edges.
- ❾ Flush the whole product (especially the audio cable) with fresh water after using on salt water. Before storage, ensure the product is completely dry.

Product Specification

Inflatable

- Inflatable: 4 chambers for max. safety concern
- PVC material: Class K70, 0.4mm thickness
- Size (inflated): 1800mm(L) x 1130mm(W) x 980mm(H)
- Max. Loading: 100 kg


Speakers

- Speaker specification: Dia. 50mm 32 ohm 0.5 Watt Stereo, totally water-proof design.
- Speaker plug: Dia. 3.5mm

Massage module

- Dry cell battery operated.
- Battery type for massage feature: AA size X 4, DC 6V drive (batteries not included).
- Operating current consumption: DC 200mA 1200mW
- Battery life: 2 hours (approx.)
- Water-proof battery compartment with power ON / OFF switch.
- Massage feature controller: Water-proof design with ON / OFF, massaging area, pattern or sequence, magnitude, time period setting and LEDs indicator.

Remote Control Unit

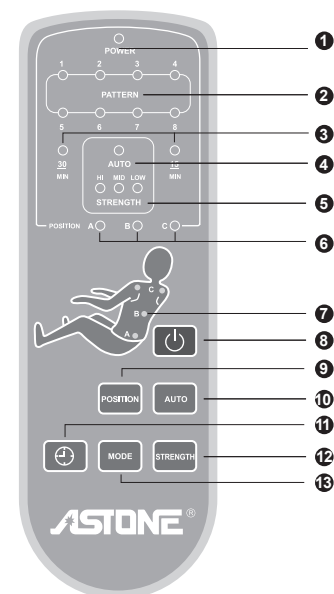

- | | |
|------------------------------------|---------------------------------|
| ① Power indicator | ⑧ On / Off switch |
| ② Massage mode indicator | ⑨ Massage position switch |
| ③ Massage time sitting indicator | ⑩ Auto function switch |
| ④ Auto function indicator | ⑪ Massage time setting switch |
| ⑤ Massage strength level indicator | ⑫ Massage strength level switch |
| ⑥ Massage position indicator | ⑬ Massage mode switch |
| ⑦ Massage zone | |

Warranty


For any warranty enquiries, please kindly contact the local distributor / importer directly for their local warranty terms and conditions.

Legal Disclaimer

1. Astone Holdings Pty Ltd known herein as 'Astone', does not guarantee the accuracy or validity of the information outlined in this user manual, although all attempts have been made to display the most accurate information.
2. Astone will not be held liable for any loss, accident or mis-use caused by incorrectly following these instructions. At the same time Astone will not be held responsible for damages caused by misinterpretation.
3. Astone holds the right to modify this user manual, software, product packaging or hardware without any advance notice. Product modifications may occur over time, therefore Astone cannot guarantee the accuracy of product information on packaging and this user manual.
4. To the extent of the law permits, any liability which may be incurred as a result of use of our product manufactured or sold by Astone is limited to the cost of repairing or replacing the failed product or component at the discretion of Astone, and does not extend to any loss or damage which may be caused as a consequence of misuse or failure of the equipment or product. Astone shall not be in any event be liable for economic loss of products, indirect, special, bodily injuries or consequential damages.

This device complies with part 15 of the FCC Rules. Operation is subject to the following 2 conditions:

1. This device may cause harmful interference and,
2. This device must accept any interference received, including interference that may cause undesired operation.

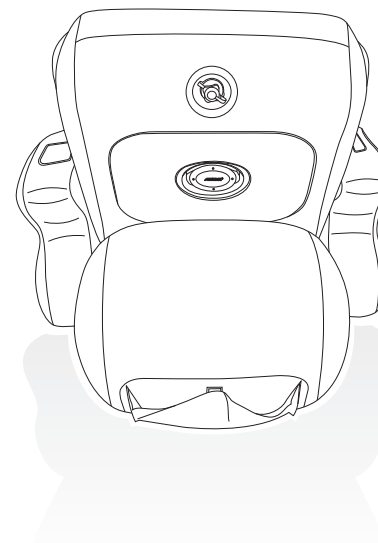

ASTONE®
Astone Holdings Pty Ltd

©2007 Astone Holdings Pty Ltd. All rights reserved.
The Astone logo is a registered trademark of Astone Holdings Pty Ltd. All trademarks are the properties of their respective owners. Specifications are subject to change without notice.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>