

www.trittonusa.com

Pairing mode lasts for 3 minutes, after this period the AX Micro returns to standby mode.

If the AX Micro is on, turn it OFF

Click and hold the Multi-function Button until LED status indicator light starts flashing red and blue (appx 7 seconds). If prompted for a pin number to establish a connection on the paired Bluetooth device, enter 0000.

When connected, the AX Micro LED status indicator light will turn off

The AX Micro can be worn on the left or right ear. When the headset is not in use, you can clip the headset onto the lanyard for convenience and portability.

Select one of the two rubber grippers that fits most comfortable and securely.

Place the headset in the ear so that the rubber grippers hold the headset snugly against the ear wall.





### Answer Call

An alert sound will output from both phone and headset. Short click Multi-Function Button to answer call.

# Dial and place a call from phone and automatically be transferred

to headset. Short click Multi-Function Button to switch the call to the headset. NOTE: Some phones will automatically transfer call.

Double click Multi-Function Button when in idle state NOTE: Double click on some phones will display the number last called or received. In this case, double click Multi-Function Button again to redial.

Make sure your phone supports voice dialing, that it is activated and the voice tags have been recorded if needed. Long-click Multi-Function Button when in idle state. Follow the instruction message from phone to complete voice dialing.

Double click Multi-Function Button once.

## Volume Control

Short click (+) or (-) to adjust volume during handsfree mode. NOTE: Beep tones will be heard at maximum or minimum volume.

Long click Multi-Function Button during 'Talk Mode'. NOTE: If the other party ends the call first, the AX Micro will automatically return to standby mode.

Long click Multi-Function Button while phone is ringing.

call from headset to phone or vise versa.

## Reject Call

Call Transfer Short click Multi-Function Button during 'Talk Mode' to transfer

## Call Waiting

Long click Multi-Function Button during 'Talk Mode' to answer an incoming call. Short click Multi-Function Button twice to switch between calls.

NOTE: This function can only be used if user has subscribed for

## Microphone Mute

Long click the (+) and (-) buttons simultaneously during 'Talk Mode' if you do not want to mute your voice for privacy. Long click the (+) and (-) buttons simultaneously to cancel mute function.

### Reconnect

Short click Multi-Function Button twice to reconnect headset with phone

Standards	Bluetooth Specification V2.0
RF Frequency Range	2402 ~ 2480 MHz
Profiles Supported	Headset, Handsfree V1.5
Transmission Power	0.25 ~ 2.5mW (Class 2)
Distance	10m (in open space)
Battery Type	Li-Ion Polymer
Battery Life	Standby > 150 hrs,
	Voice Connection : 4 hrs
Charging Time	< 3 hrs
Weight	9.5g
Operating Temp.	-10 ∼ +50°C,
& Humidity	Rel. Humidity 0 ~ 95%
Certification	BQB, FCC, CE

Tritton Technologies warrants this product against all defects in material and workmanship for a period of one year from the date of purchase by end user. The conditions for warranty are as follows:

The warranty is valid only if the original receipt issued to the original purchaser by the dealer is presented with the product to be repaired or replaced.

The warranty is void if the serial number, date of purchase and product label had been removed. The warranty does not cover any failure or damage of the product due to normal wear and tear, physical abuse, improper

installation, misuse, modification or repairs by unauthorized Tritton Technologies does not assume responsibility for any loss or damage incurred during shipment and as a result of force of

Tritton Technologies is not liable for any incidental or consequential damages arising from the use or misuse of the

All warranty claims are limited to repair or replacement of the defective product at the sole discretion of Tritton Technologies. If Tritton Technologies repairs or replaces the product, the repaired or replaced product shall be warranted for the remaining time of the original warranty period. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced part or product becomes the property of Tritton Technologies. Consumable components, such as batteries, are not included in

the warranty obligation.

### Disclaimer Notice

The manufacturer shall not be liable for errors contained herein or for ncidental or consequential damages in connection with the furnishing, performance or use of this material. This document contains proprietary nformation, which is protected by international patent applications and topyright. All rights reserved. No part of this document may be copied, manufacturer reserves the right to revise this publication and to make the angular cutter reserves the right to levise aris publication and to that of the hanges from time to time in the contents hereof without obligation to notify any person of such revisions or changes. The manufacturer also eserves the right to change the specifications without notice.

European CE notice to users and product statements This product is C E marked according to the provisions of the R & TTE Directive (99/5/EC). Hereby, Tritton Technologies Co., Ltd, declares that this product is in compliance with the essential requirements and other relevant ions of Directive 1999/5/EC. For further information, please conta


# FCC notice to users and product statements THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. Operation is

subject to the following two conditions; (1) this device may not cause hamful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the



WEEE Directive 2002/96/EC Art. 11(2)

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

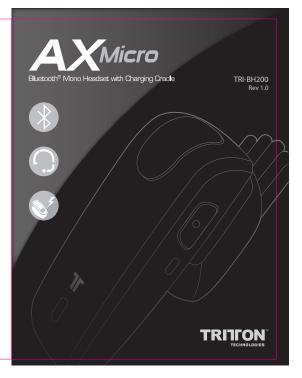

# TRITION


Phone Support: 800-431-1176 Online Support: www.TRITTONUSA.com Email Support: support@trittonusa.com

Product Specifications..

Product Warranty....

Safety Instructions.... Product Features... Package Contents.... Description of Parts.... Charging the AX Micro Battery..... Switching the TRI-BH200 ON/OFF.... Pairing the AX Micro .... Wearing the AX Micro.... Basic Handsfree Operations for the AX Micro....

Thank you for purchasing the Tritton Bluetooth Headset TRI-BH200, the AX Micro. The AX Micro is a high-tech wireless headset for handsfree operations at its best. The AX Micro can be connected to any Bluetooth device that supports either headset or handsfree Bluetooth profiles. The AX Micro features a revolutionary finger-like rubber gripping mechanism that holds the headset firmly against the auricle (Outer flap of the ear, also called the pinna), making it convenient to wear and comfortable even when used for extended hours. Additionally, the symmetrical design is one that can be easily switched from one ear to the other

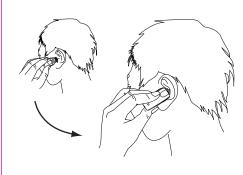

Know the law: Make sure to check to local laws and regulations on the use of mobile phones and handsfree equipment in the areas you intend to use them.

Extended use of headset devices at high volume levels may cause hearing damage.

When cleaning the device, do not use any type of scouring pad, abrasive powder or solvents as these may permanently dull the Charge the battery for at least 2 hours before first use.

Do not use in prohibited areas such as hospitals or on airplanes Do not expose components to extreme temperatures, prolonged sunlight, moisture or vibrations. Keep headset and charger cradle away from reach of children.

Do not place metal objects, such as coins or jewelry, on charger cradle contacts. This may cause a short circuit with the risk of fire or explosion.

Bluetooth V1.2, 2.0 compliant


Supports headset and handsfree profiles for hands free function with Bluetooth phones Unique finger-like rubber grippers to secure the headset on vour ear

High performance built-in speaker and microphone Red and blue LED status indicator light More than 4 hours of talk time and 150 hours of standby time Convenient charging via cradle using standard Mini-USB (not provided) or AC/DC Adapter

- . Tritton Bluetooth Headset TRI-BH200, AX Micro
- Charger Cradle
- 3. AC/DC Charger Adapter
- 4. Rubber Grippers (2 sizes) Lanyard and clip
- 6. User Manual





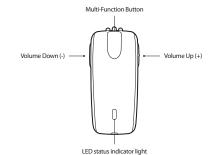

Many of the buttons perform multiple tasks, based upon if they are tapped, or held down We call this "Short Click" and "Long Click" respectively throughout the manual.


# ! Improper battery charging can shorten usage times!

Charge the battery for at least 2.5 hours prior to first use. During charging the headset LED status indicator light will

When fully charged, the headset LED status indicator light will be blue.

### To connect charger

- 1. Connect the charger cradle with the AC/DC Adapter.
- 2 Plug cord into power supply



To Turn ON: Click and hold the Multi-Function Button until the LED status indicator light turns blue and periodically flashes. To Turn OFF: Click and hold the Multi-Function Button until the LED status indicator light turns red and then off.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com