

Operation Guide 5640

ENGLISH

Congratulations upon your selection of this CASIO watch.

To ensure that this watch provides you with the years of service for which it is designed, carefully read and follow the instructions in this manual, especially the information under "Operating Precautions" and "User Maintenance".

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

About This Manual




- Depending on the model of your watch, display text appears either as dark figures on a light background, or light figures on a dark background. All examples in this manual are shown using dark figures on a light background.
- Button operations are indicated using the letters shown in the illustration.
- Note that the product illustrations in this manual are intended for reference only, and so the actual product may appear somewhat different than depicted by an illustration.

E

E-1

Things to check before using the watch

1. Check the battery power level.

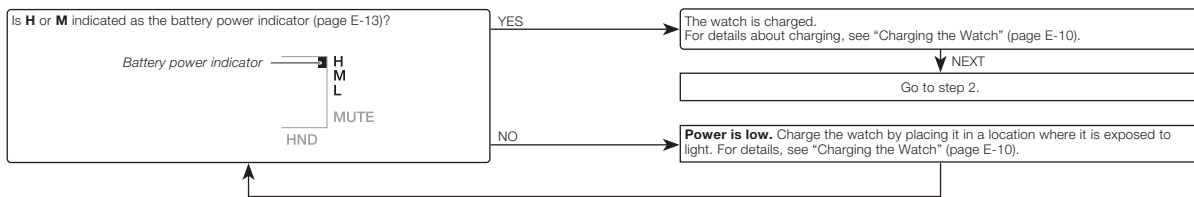

E-2

E-3

2. Check the Home City and the daylight saving time (DST) setting.

Use the procedure under "To configure Home City settings" (page E-40) to configure your Home City and daylight saving time settings.

Important!

- Proper time calibration signal reception and World Time Mode data depend on correct Home City, time, and date settings in the Timekeeping Mode. Make sure you configure these settings correctly.

3. Set the current time.

- **To set the time using a time calibration signal**
See "To get ready for a receive operation" (page E-24).
- **To set the time manually**
See "Configuring Current Time and Date Settings Manually" (page E-44).

The watch is now ready for use.

- For details about the watch's radio controlled timekeeping feature, see "Radio Controlled Atomic Timekeeping" (page E-19).

E-4

E-5

Contents

About This Manual..... E-1

Things to check before using the watch E-2

Charging the Watch..... E-10

 To recover from the sleep state E-18

Radio Controlled Atomic Timekeeping E-19

 To get ready for a receive operation E-24

 To perform manual receive E-27

 To check the latest signal reception results..... E-31

 To enable or disable auto receive E-32

Mode Reference Guide E-35

Timekeeping..... E-39

E-6

Configuring Home City Settings..... E-40

 To configure Home City settings..... E-40

 To change the Daylight Saving Time (summer time) setting E-42

Configuring Current Time and Date Settings Manually E-44

 To change the current time and date settings manually E-44

Using the World Time Mode E-48

 To enter the World Time Mode E-48

 To view the time in another time zone E-48

 To specify standard time or daylight saving time (DST) for a city E-49

 To swap your Home Time and World Time Cities..... E-50

Using the Stopwatch E-52

 To enter the Stopwatch Mode E-52

 To perform an elapsed time operation..... E-53

 To pause at a split time..... E-53

 To measure two finishes E-53

Using the Countdown Timer..... E-55

 To enter the Countdown Timer Mode..... E-55

 To specify the countdown start time..... E-55

 To perform a countdown timer operation E-57

 To stop the alarm E-57

Using the Alarm E-58

 To enter the Alarm Mode E-58

 To set an alarm time..... E-59

 To test the alarm E-60

 To enable or disable an alarm or the Hourly Time Signal..... E-61

 To stop a sounding alarm..... E-61

Illumination..... E-63

 To turn on illumination manually E-63

 To change the illumination duration..... E-64

 To enable or disable the auto light switch E-67

E-8

Hand Home Position Adjustment..... E-70

 To adjust home positions manually..... E-70

Moving the Hands for Easy Viewing of Digital Information E-72

 To move the hands to view digital information E-73

 To return the hands to their normal positions..... E-73

Other Settings E-75

 To enable or disable the button operation tone..... E-75

 To enable or disable Power Saving..... E-77

Troubleshooting..... E-78

Specifications E-85

Operating Precautions E-88

User Maintenance E-98

E-9

Charging the Watch

The face of the watch is a solar panel that generates power from light. The generated power charges a built-in rechargeable battery, which powers watch operations. The watch charges whenever it is exposed to light.

Charging Guide



Whenever you are not wearing the watch, leave it in a location where it is exposed to light.

- Best charging performance is achieved by exposing the watch to the strongest light available.



When wearing the watch, make sure that its face is not blocked from light by the sleeve of your clothing.

- The watch may enter a sleep state (page E-17) if its face is blocked by your sleeve even only partially.

E-10

Warning!

Leaving the watch in bright light for charging can cause it to become quite hot. Take care when handling the watch to avoid burn injury. The watch can become particularly hot when exposed to the following conditions for long periods.

- On the dashboard of a car parked in direct sunlight
- Too close to an incandescent lamp
- Under direct sunlight


Important!

- Allowing the watch to become very hot can cause the digital displays to black out. The appearance of the LCD should become normal again when the watch returns to a lower temperature.
- Enable the watch's Power Saving function (page E-17) and keep it in an area normally exposed to bright light when storing it for long periods. This helps to ensure that power does not run down.
- Storing the watch for long periods in an area where there is no light or wearing it in such a way that it is blocked from exposure to light can cause power to run down. Expose the watch to bright light whenever possible.

E-11

Power Levels

You can get an idea of the watch's power level by observing the battery power indicator.



E-12

Level	Battery Power Indicator	Function Status
1 (H)		All functions enabled.
2 (M)		All functions enabled.
3 (L and LOW)		Auto and manual receive, illumination, and beeper disabled. Except for Timekeeping Mode, all other modes disabled.
4 (CHG)		All functions and display indicators disabled except for timekeeping and display of the CHG (charge) indicator. Hour and minute hands stopped at 12 o'clock.
5		All functions disabled.

- The flashing **LOW** message at Level 3 (**L**) tells you that battery power is very low, and that exposure to bright light for charging is required as soon as possible.

E-13

- At Level 5, all functions are disabled and settings return to their initial factory defaults. Once the battery reaches Level 2 (**M**) after falling to Level 5, reconfigure the current time, date, and other settings.
- Display indicators reappear as soon as the battery is charged from Level 5 to Level 2 (**M**).
- Leaving the watch exposed to direct sunlight or some other very strong light source can cause the battery power indicator to show a reading temporarily that is higher than the actual battery level. The correct battery level should be indicated after a few minutes.
- The current time and all other settings return to their initial factory defaults whenever battery power drops to Level 5 and when you have the battery replaced.

Power Recovery Mode

- Performing multiple illumination, beeper, and/or high-speed hand movement operations during a short period may cause all of the battery power indicators (**H**, **M**, and **L**) to start flashing. This indicates that the watch is in the power recovery mode. Illumination, alarm, countdown timer alarm, and hourly time signal operations will be disabled until battery power recovers.
- Battery power will recover in about 15 minutes. At this time, the battery power indicators (**H**, **M**, **L**) will stop flashing. This indicates that the functions listed above are enabled again.
- If all of the battery power indicators (**H**, **M**, **L**) are flashing and the **CHG** (charge) message also is flashing, it means the battery level is very low. Expose the watch to bright light as soon as possible.
- Frequent flashing of all of the battery power indicators (**H**, **M**, **L**) probably means that remaining battery power is low. Leave the watch in bright light to allow it to charge.

E-14

E-15

Charging Times

Exposure Level (Brightness)	Daily Operation ^{*1}	Level Change ^{*2}				
		Level 5	Level 4	Level 3	Level 2	Level 1
Outdoor sunlight (50,000 lux)	8 min.	4 hours		38 hours	10 hours	
Window sunlight (10,000 lux)	30 min.	11 hours		142 hours	38 hours	
Window sunlight on cloudy day (5,000 lux)	48 min.	17 hours		230 hours	62 hours	
Indoor fluorescent lighting (500 lux)	8 hours	225 hours		---	---	

^{*1} Approximate exposure each day to generate power for normal daily operation.

^{*2} Approximate exposure time (in hours) required to take power up one level.

- The above exposure times all are for reference only. Actual exposure times depend on lighting conditions.

E-16

- For details about the operating time and daily operating conditions, see the "Power Supply" (page E-87) section of the Specifications.

Power Saving

When enabled, Power Saving enters a sleep state automatically whenever the watch is left for a certain period in an area where it is dark. The table below shows how watch functions are affected by Power Saving.

- For information about enabling and disabling power saving, see "To enable or disable Power Saving" (page E-77).
- There actually are two sleep state levels: "display sleep" and "function sleep".

Elapsed Time in Dark	Digital Displays	Operation
60 to 70 minutes (display sleep)	Blank	Digital display is disabled, but all functions are enabled.
6 or 7 days (function sleep)	Blank	Hour and minute hands stop at 12 o'clock. All functions are disabled, but timekeeping is maintained.

E-17

- The watch will not enter a sleep state between 6:00 AM and 9:59 PM. If the watch is already in a sleep state when 6:00 AM arrives, however, it will remain in the sleep state.
- The watch will not enter a sleep state while it is in the Stopwatch Mode or Countdown Timer Mode.

To recover from the sleep state

Move the watch to a well-lit area, press any button, or angle the watch towards your face for reading (page E-65).

E-18

Radio Controlled Atomic Timekeeping

This watch receives a time calibration signal and updates its time setting accordingly. However, when using the watch outside of areas covered by time calibration signals, you will have to adjust the settings manually as required. See "Configuring Current Time and Date Settings Manually" (page E-44) for more information.

This section explains how the watch updates its time settings when the city code selected as the Home City is in Japan, North America, Europe, or China, and is one that supports time calibration signal reception.

E-19

If your Home City Code setting is this:	The watch can receive the signal from the transmitter located here:
LIS, LON, MAD, PAR, ROM, BER, STO, ATH, MOW	Anthorn (England), Mainflingen (Germany)
HKG, BJS	Shangqiu City (China)
TPE, SEL, TYO	Fukushima (Japan), Fukuoka/Saga (Japan)
HNL, ANC, YVR, LAX, YEA, DEN, MEX, CHI, NYC, YHZ, YYT	Fort Collins, Colorado (United States)


Important!

- The areas covered by **MOW**, **HNL** and **ANC** are quite far from the calibration signal transmitters, so certain conditions may cause reception problems.
- When **HKG** or **BJS** is selected as the Home City, only the time and date are adjusted according to the time calibration signal. You need to switch manually between standard time and daylight saving time (DST) if required. See "To configure Home City settings" (page E-40) for information about how to do this.

E-20



Approximate Reception Ranges

UK and German Signals

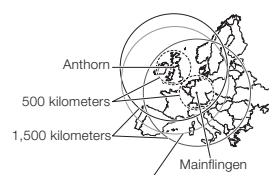


The Anthorn signal is receivable within this area.

North American Signal

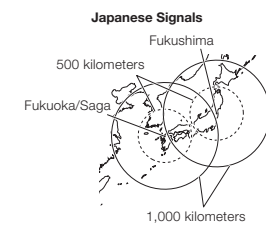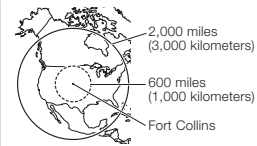

Signals are receivable in the Taiwan area when reception conditions are good.

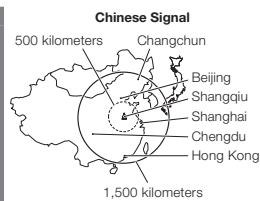


- Even when the watch is within range of a transmitter, signal reception may be impossible due to the effects of geographic contours, structures, weather, the time of year, the time of day, radio interference, etc. The signal becomes weaker at distances of approximately 500 kilometers, which means that the influence of the conditions listed above becomes even greater.
- Signal reception may not be possible at the distances noted below during certain times of the year or day. Radio interference may also cause problems with reception.
 - Mainflingen (Germany) or Anthorn (England) transmitters: 500 kilometers (310 miles)
 - Fort Collins (United States) transmitter: 600 miles (1,000 kilometers)
 - Fukushima or Fukuoka/Saga (Japan) transmitters: 500 kilometers (310 miles)
 - Shangqiu (China) transmitter: 500 kilometers (310 miles)
- As of January 2020, China does not use Daylight Saving Time (DST). If China does go to the Daylight Saving Time system in the future, some functions of this watch may no longer operate correctly.

E-22

E-23


To get ready for a receive operation

- Confirm that the watch is in the Timekeeping Mode. If it isn't, use **C** to enter the Timekeeping Mode (page E-36).
- The antenna of this watch is located on its 12 o'clock side. Position the watch with 12 o'clock facing towards a window as shown in the nearby illustration. Make sure there are no metal objects nearby.

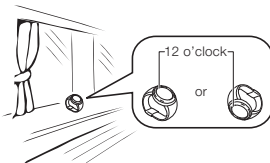

- Signal reception normally is better at night.
- The receive operation takes from three to eight minutes, but in some cases it can take as long as 16 minutes. Take care that you do not perform any button operation or move the watch during this time.

- Signal reception may be difficult or even impossible under the conditions described below.

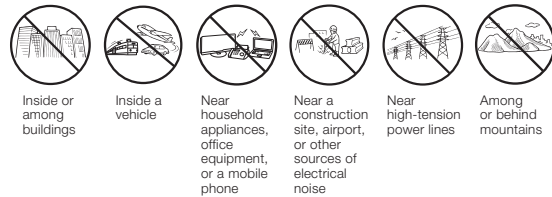

E-24

E-25

3. What you should do next depends on whether you are using Auto Receive or Manual Receive.

- Auto Receive: Leave the watch over night in the location you selected in step 2. See "Auto Receive" below for details.
- Manual Receive: Perform the operation under "To perform manual receive" on page E-27.

Auto Receive


- With Auto Receive, the watch performs the receive operation each day automatically up to six times (up to five times for the Chinese calibration signal) between the hours of midnight and 5 a.m. (according to the Timekeeping Mode time). When any receive operation is successful, none of the other receive operations for that day are performed.
- When a calibration time is reached, the watch will perform the receive operation only if it is in the Timekeeping Mode or World Time Mode. The receive operation is not performed if a calibration time is reached while you are configuring settings, while a countdown timer operation is in progress, or while the hands have been moved for easier viewing of digital information (page E-73).

E-26

- You can use the procedure under "To enable or disable auto receive" (page E-32) to enable or disable auto receive.

To perform manual receive

Receiving

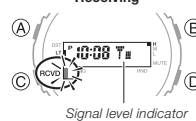


Signal level indicator

In the Timekeeping Mode, hold down **D** for at least two seconds.

- A signal level indicator (page E-30) appears after reception starts. Do not move the watch or perform any button operation until **GET** or **ERR** appears.


Receive successful

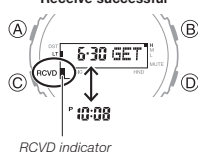

RCVD indicator

- If the receive operation is successful, the reception date and time will appear. The watch will return to the Timekeeping Mode if you press **D** or if you do not perform any button operation for more than two minutes.

Receive failed

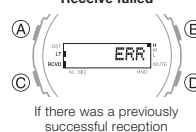

If there was a previously successful reception

- If the current reception fails but a previous reception (within the last 24 hours) was successful, **RCVD** and **ERR** will be displayed. If only **ERR** is displayed (without **RCVD**), it means that all of the receive operations over the past 24 hours have failed. The watch will return to the Timekeeping Mode without changing the time setting if you press **D** or if you do not perform any button operation for more than two minutes.


Note

- To interrupt a receive operation and return to the Timekeeping Mode, press any button.

E-28

E-29

Signal Level Indicator

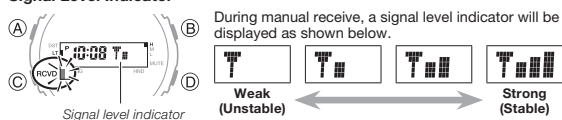

During manual receive, a signal level indicator will be displayed as shown below.

- As you watch the indicator, keep the watch in a location that best maintains stable reception.
- Even under optimum reception conditions, it can take about 10 seconds for reception to stabilize.
- Note that weather, the time of day, surroundings, and other factors all can affect reception.

E-30

To check the latest signal reception results



In the Timekeeping Mode, press **D** (page E-39).


- When receive is successful, the time and date that receive was successful will be displayed. - : - - indicates that none of the receive operations were successful.
- To return to the Timekeeping Mode, press **D**.

Note

- RCVD will not be displayed if you have adjusted the time or date setting manually since the last receive operation.

E-31

To enable or disable auto receive

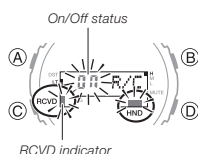

- In the Timekeeping Mode, press **D** (page E-39).
- Hold down **A** until the current auto receive setting (**ON** or **OFF**) and RCVD indicator start to flash. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).
 - Note that the watch will not display the setting screen if the currently selected Home City is one that does not support time calibration reception.

- Press **D** to toggle between auto receive on (**ON**) and off (**OFF**).
- Press **A** to exit the setting screen.

E-32

Radio-controlled Atomic Timekeeping Precautions

- Strong electrostatic charge can result in the wrong time setting.
- Even if a receive operation is successful, certain conditions can cause the time setting to be off by up to one second.
- The watch is designed to update the date and day of the week automatically for the period January 1, 2000 to December 31, 2099. Updating of the date by signal reception will no longer be performed starting from January 1, 2100.
- If you are in an area where signal reception is not possible, the watch keeps time with the precision noted in "Specifications" (page E-85).
- The receive operation is disabled under any of the following conditions.
 - While power is at Level 3 (**L**) or lower (page E-13)
 - While the watch is in the power recovery mode (page E-15)
 - When the watch is in the function sleep state ("Power Saving", page E-17)
 - While a countdown timer operation is in progress (page E-55)
 - While the hands are in positions to allow easier viewing (page E-73)
- A receive operation is cancelled if an alarm sounds while it is being performed.

E-33

- The Home City setting reverts to the initial default of **TYO** (Tokyo) whenever the battery power level drops to Level 5 or when you have the rechargeable battery replaced. If this happens, change the Home City to the setting you want (page E-40).

E-34

Mode Reference Guide


Your watch has "five modes". The mode you should select depends on what you want to do.

To do this:	Enter this mode:	See:
<ul style="list-style-type: none"> View the current date in the Home City Configure Home City and daylight saving time (DST) settings Configure time and date settings manually Perform a time calibration receive operation Check whether the last receive operation was successful Switch between 12-hour and 24-hour timekeeping Display an alarm countdown 	Timekeeping Mode	E-39
View the current time in one of 48 cities (31 time zones) around the globe	World Time Mode	E-48
Use the stopwatch to measure elapsed time	Stopwatch Mode	E-52
Use the countdown timer	Countdown Timer Mode	E-55
Set an alarm time	Alarm Mode	E-58

E-35

Selecting a Mode

- The illustration below shows which buttons you need to press to navigate between modes.
- To return to the Timekeeping Mode from any other mode, hold down **C** for at least four seconds.

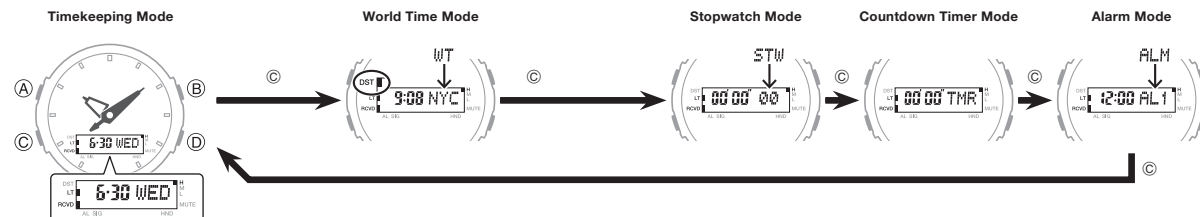

E-36

E-37

General Functions (All Modes)

The functions and operations described in this section can be used in all of the modes.

Auto Return

- The watch returns to the Timekeeping Mode automatically if you do not perform any button operation for two or three minutes in the Alarm Mode.
- If you leave the watch with a setting screen (flashing digits) displayed for two or three minutes without performing any operation, the watch will exit the setting screen automatically.

Initial Screens


When you enter the World Time or Alarm Mode, the data you were viewing when you last exited the mode appears first.

Scrolling

The **B** and **D** buttons are used in the setting screen to scroll through data. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.


E-38

Timekeeping

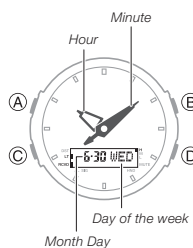

Use the Timekeeping Mode to set and view the current time and date.


- Each press of **A** cycles the Home City information as shown below.

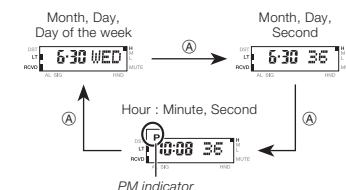

E-39

Configuring Home City Settings

There are two Home City settings: actually selecting the Home City, and selecting either standard time or daylight saving time (DST).

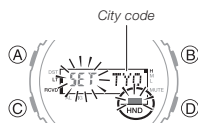

To configure Home City settings

- In the Timekeeping Mode, hold down (A) for at least two seconds until **ADJ** is displayed. When you release (A), the city code and city name will scroll from right to left. This is the setting screen.
 - For details about city codes, see the "City Code Table" at the back of this manual.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).

- Use (D) (East) and (B) (West) to scroll through the city codes until the one you want to use as your Home City is displayed.

E-40

- After the setting is the way you want, press (A) to return to the Timekeeping Mode.


Note

- After you specify a city code, the watch will use UTC* offsets in the World Time Mode to calculate the current time for other time zones based on the current time in your Home City.
 - * Coordinated Universal Time, the world-wide scientific standard of timekeeping. The reference point for UTC is Greenwich, England.
- Selecting some city codes automatically makes it possible for the watch to receive the time calibration signal for the corresponding area. See page E-19 for details.

E-41


To change the Daylight Saving Time (summer time) setting

DST indicator



- In the Timekeeping Mode, hold down (A) for at least two seconds until **ADJ** is displayed. When you release (A), the city code and city name will scroll from right to left. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).
- Press (C) to enter the DST setting screen.

- Use (D) to cycle through the DST settings in the sequence shown below.



- The Auto DST (**AUTO**) setting will be available only when a city code that supports time calibration signal reception (page E-19) is selected as the Home City. While Auto DST is selected, the DST setting will be changed automatically in accordance with time calibration signal data.
 - Note that you cannot switch between standard time and daylight saving time (DST) while UTC is selected as your Home City.
- After the setting is the way you want, press (A) to return to the Timekeeping Mode.
 - The **DST** indicator appears to indicate that Daylight Saving Time is turned on.


E-42

E-43

Configuring Current Time and Date Settings Manually


You can configure current time and date settings manually when the watch is unable to receive a time calibration signal.

To change the current time and date settings manually

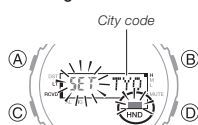

- In the Timekeeping Mode, hold down (A) for at least two seconds until **ADJ** is displayed. When you release (A), the city code and city name will scroll from right to left. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).

- Press (C) to move the flashing in the sequence shown below to select the other settings.

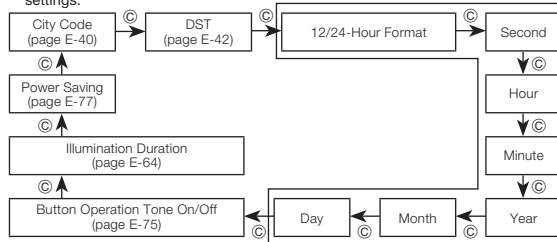

E-44

E-45

- When the timekeeping setting you want to change is flashing, use (D) and/or (B) to change it as described below.

Screen	To do this:	Do this:
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Press (D).
36	Reset the second to 00	
P 10:08	Change the hour or minute	Use (D) (+) and (B) (-).
6:30 20 21	Change the year, month, or day	

E-46

- Press (A) to exit the setting screen.

- The watch automatically adjusts its analog setting to match the currently display digital time.

Note

- For information about selecting a Home City and configuring the DST setting, see "Configuring Home City Settings" (page E-40).
- While 12-hour format is selected for timekeeping, a **P** (PM) indicator will appear for times from noon to 11:59 p.m. No indicator appears for times from midnight to 11:59 a.m. With 24-hour format, time is displayed from 0:00 to 23:59, without any **P** (PM) indicator.
- The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's rechargeable battery replaced or after power drops to Level 5 (page E-13).
- The day of the week changes automatically when the date changes.

E-47

Using the World Time Mode

Current time in the currently selected World Time City



Currently selected World Time City

You can use the World Time Mode to view the current time in one of 31 time zones (48 cities) around the globe. The city that is currently selected in the World Time Mode is called the "World Time City".

To enter the World Time Mode

- Use (C) to select the World Time Mode as shown on page E-36.
- WT** will be displayed for about one second. After that, the city code and city name will scroll once from right to left, and then the three-letter corresponding city code will be displayed.

To view the time in another time zone

In the World Time Mode, use (D) (East) to scroll through city codes.

E-48

To specify standard time or daylight saving time (DST) for a city

DST indicator



- In the World Time Mode, use (D) (East) to scroll through the city codes until the one whose Standard Time/Daylight Saving Time setting you want to change is displayed.
- Hold down (A) for at least two seconds until the watch beeps.
 - This toggles the city code you selected in step 1 between Daylight Saving Time (**DST** indicator displayed) and standard time (**DST** indicator not displayed).


- Using the World Time Mode to change the DST setting of the city code that is selected as your Home City also will change the Timekeeping Mode time DST setting.
- Note that you cannot switch between standard time/daylight saving time (DST) while **UTC** is selected as the World Time City.

E-49

- The standard time/daylight saving time (DST) setting affects only the currently selected time zone. Other time zones are not affected.

To swap your Home Time and World Time Cities

1. In the World Time Mode, use **(D)** to select the city you want to use as your new Home City.
2. To swap, hold down **(A)** and **(B)** at the same time until the watch beeps.




- This will make the World Time City you selected in step 1 (**NYC** (New York)) your new Home City.
- Your previous Home City (**TYO** (Tokyo)) will be your new World Time City.

E-50

E-51

Using the Stopwatch

The stopwatch measures elapsed time, split times, and two finishes.

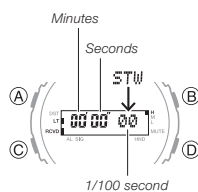

To enter the Stopwatch Mode

Use **(C)** to select the Stopwatch Mode (**STW**) as shown on page E-37.

E-52

E-53

Note

- The Stopwatch Mode can indicate elapsed time up to 59 minutes, 59.99 seconds.
- An ongoing elapsed time measurement operation will continue internally even if you change to another mode. However, if you exit the Stopwatch Mode while a split time is displayed, the split time will not be displayed when you return to the Stopwatch Mode.

E-54

2. Hold down **(A)** for at least two seconds until the minute setting of the current countdown start time starts to flash. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).
3. Press **(C)** to move the flashing between the minute and second settings.
4. Use **(D)** (+) and **(B)** (-) to change the flashing item.
 - To set the starting value of the countdown time to 100 minutes, set **00'00"**.
5. Press **(A)** to exit the setting screen.

E-56

Note

- If you are using the watch in Japan, be sure to select **TYO** (Tokyo) as your Home City. Selecting another city code will make it impossible to receive the time calibration signal, which will cause the watch's time setting to be off.


To perform an elapsed time operation



To pause at a split time



To measure two finishes



Using the Countdown Timer

The countdown timer can be set within a range of one second to 100 minutes. An alarm sounds when the countdown reaches zero.



To enter the Countdown Timer Mode

Use **(C)** to select the Countdown Timer Mode (**TMR**) as shown on page E-37.


To specify the countdown start time

1. Enter the Countdown Timer Mode.
 - If a countdown is in progress, press **(D)** to stop it and then press **(A)** to reset to the current countdown start time.
 - If a countdown is paused, press **(A)** to reset to the current countdown start time.

E-54

E-55

To perform a countdown timer operation



- Before starting a countdown timer operation, check to make sure that a countdown operation is not in progress (indicated by the seconds counting down). If it is, press **(D)** to stop it and then **(A)** to reset to the countdown start time.
- An alarm sounds for 10 seconds when the end of the countdown is reached. This alarm will sound in all modes. The countdown time is reset to its starting value automatically when the alarm sounds.

To stop the alarm

Press any button.

E-56

E-57

Using the Alarm

Alarm time (Hour : Minutes)



You can set five independent alarms. When an alarm is turned on, an alarm tone will sound for about 10 seconds each day when the time in the Timekeeping Mode reaches the preset alarm time. This is true even if the watch is not in the Timekeeping Mode. You can also enable an Hourly Time Signal, which will cause the watch to beep twice every hour on the hour.

To enter the Alarm Mode


Use **(C)** to select the Alarm Mode as shown on page E-37.

- This will cause the display to change as shown below.




E-58

To set an alarm time

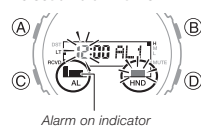

1. In the Alarm Mode, use **(D)** to scroll between the alarms (**AL1** to **AL5**, **SIG**) until the one whose time you want to set is displayed.



2. Hold down **(A)** for at least two seconds until the alarm time starts to flash. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).


3. Press **(C)** to move the flashing between the hour and minute settings.

E-59

- While a setting is flashing, use (D) (+) and (B) (-) to change it.
 - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (P indicator).
- Press (A) to exit the setting screen.

To test the alarm


In the Alarm Mode, hold down (D) to sound the alarm.



E-60

To enable or disable an alarm or the Hourly Time Signal

Alarm on indicator



Hourly Time Signal on indicator


- In the Alarm Mode, use (D) to scroll between the alarms (AL1 to AL5, SIG) until the one you want is displayed.
- When the alarm or the Hourly Time Signal you want is selected, press (A) to toggle it between on and off.
 - The alarm on indicator (when any alarm is on) and the Hourly Time Signal on indicator (when the Hourly Time Signal is on) are displayed in all modes.

To stop a sounding alarm

Press any button.

E-61

Alarm Countdown

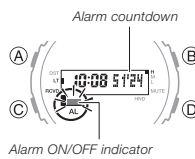

When the current time reaches one hour before an alarm time setting, the alarm on/off indicator will flash and a countdown of the final 60 minutes will be displayed while the watch is in the Timekeeping Mode.


Note

- Pressing (A) while an alarm countdown is in progress will display the seconds or the day of the week for about two seconds. After that, the countdown will be displayed again.

- When you enter the Timekeeping Mode from another mode while an alarm countdown is in progress, the seconds or the day of the week will be displayed for two seconds. After that, the countdown will be displayed.
- If an alarm countdown for another alarm starts while a previous alarm countdown is already in progress, it will be displayed after the ongoing countdown reaches zero and its alarm sounds.

E-62

Illumination

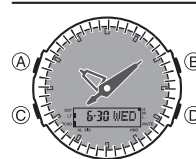

Illumination enables easy reading in the dark. The watch's auto light switch turns on illumination automatically when you angle the watch towards your face.

- The auto light switch must be enabled (page E-67) for it to operate.

To turn on illumination manually

Press (B) in any mode.

- You can use the procedure below to select either 1.5 seconds or three seconds as the illumination duration. When you press (B), the face will remain illuminated for about 1.5 seconds or three seconds, depending on the current illumination duration setting.

E-63

- The above operation turns on illumination regardless of the current auto light switch setting.
- Illumination is disabled during time calibration signal reception.

Important

- The light source of the analog hand area is an ultraviolet light emitting diode. Do not look directly at the light source lens.
- Do not attempt to remove the light source from this watch to use it for another purpose.
- Do not look directly into the light source located at 6 o'clock.

To change the illumination duration

- In the Timekeeping Mode, hold down (A) for at least two seconds until ADJ is displayed. When you release (A), the city code and city name will scroll from right to left. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).

E-64

- Use (C) to cycle through the settings until the current illumination duration (LT1 or LT3) is shown.
 - See the sequence in step 2 of the procedure under "To change the current time and date settings manually" (page E-44) for information about how to scroll between settings.

- Press (D) to toggle the illumination duration between three seconds (LT3 displayed) and 1.5 seconds (LT1 displayed).
- After the setting is the way you want, press (A) to exit the setting screen.

About the Auto Light Switch

Enabling the auto light switch causes illumination to turn on whenever you position your wrist as described below in any mode. **Moving the watch to a position that is parallel to the ground and then tilting it towards you more than 40 degrees causes illumination to turn on.**



E-65

Warning!

- Always make sure you are in a safe place whenever you are looking at the watch using the auto light switch. Be especially careful when running or engaged in any other activity that can result in accident or injury. Also take care that sudden illumination by the auto light switch does not startle or distract others around you.**
- When you are wearing the watch, make sure that its auto light switch is disabled before riding on a bicycle or operating a motorcycle or any other motor vehicle. Sudden and unintended operation of the auto light switch can create a distraction, which can result in a traffic accident and serious personal injury.**


Note

- This watch features a Full Auto LED, so the auto light switch turns on illumination only when available light is below a certain level. It does not turn on illumination if surrounding light is bright.

E-66

- The auto light switch is always disabled, regardless of its enabled/disabled setting, when any one of the following conditions exists.
 - While an alarm is sounding
 - While a receive operation is in progress

To enable or disable the auto light switch

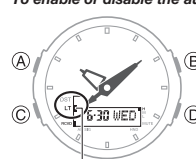

In the Timekeeping Mode, hold down (B) for at least three seconds to toggle the auto light switch between enabled (indicator displayed) and disabled (indicator not displayed).

- The auto light switch indicator appears in all modes while the auto light switch is enabled.
- The auto light switch becomes disabled automatically whenever battery power drops to Level 4 (page E-13).

Auto light switch indicator

E-67

Illumination Precautions

- Illumination may be hard to see when viewed under direct sunlight.
- Illumination turns off automatically whenever an alarm sounds.
- Frequent use of illumination runs down the battery.

Auto light switch precautions

- Wearing the watch on the inside of your wrist, movement of your arm, or vibration of your arm can cause frequent activation of the auto light switch and illumination of the face. To avoid running down the battery, disable the auto light switch whenever engaging in activities that might cause frequent illumination of the face.
- Note that wearing the watch under your sleeve while the auto light switch is enabled can cause frequent illumination of the face and can run down the battery.



- Illumination may not turn on if the face of the watch is more than 15 degrees above or below parallel. Make sure that the back of your hand is parallel to the ground.
- Illumination turns off after the preset illumination duration (page E-64), even if you keep the watch pointed towards your face.

E-68

- Static electricity or magnetic force can interfere with proper operation of the auto light switch. If illumination does not turn on, try moving the watch back to the starting position (parallel with the ground) and then tilt it back towards your face again. If this does not work, drop your arm all the way down so it hangs at your side, and then bring it back up again.
- You may notice a very faint clicking sound coming from the watch when it is shaken back and forth. This sound is caused by mechanical operation of the auto light switch, and does not indicate a problem with the watch.

E-69

Hand Home Position Adjustment

Strong magnetism or impact can cause the hands of the watch to be off, even if the watch is able to perform the signal receive operation.

- Home position adjustment is not necessary when the analog time and digital time are the same time in the Timekeeping Mode.

To adjust home positions manually

1. In the Timekeeping Mode, hold down (A) and keep it depressed for at least five seconds until **H.SET** is displayed.
 - The hour and minute hands should all move to 12 o'clock, which is their home position.
 - Though **ADJ** will appear about two seconds after you hold down (A), do not release the button yet. Keep it depressed until **H.SET** is displayed. When **H.SET** appears, release the (A) button. This will cause the hour and minute hands to move to 12 o'clock.

E-70

- The watch will return to regular timekeeping automatically if you do not perform any operation for about two or three minutes. Any changes you have made to settings up to that point will be saved. If the hour and minute hands are all at 12 o'clock, which is their home position, jump to step 3.
2. Use (D) (+) and (B) (-) to adjust the hour and minute hand positions.
 - Holding down either button will cause the hand to move at high speed. Once started, high-speed hand movement will continue even if you release the button. To stop high-speed hand movement, press any button.
 - High-speed hand movement started with the (D) (+) button will stop automatically after 12 revolutions of the minute hand. If started with the (B) (-) button, it will stop after one revolution of the minute hand.
 3. Press (A) to exit home position correction and return to regular timekeeping.

Note

- If the hands are moved to view the digital information, the time indicated by the hands will not match the time indicated on the digital display. To match the two times, return the hands to their normal positions (page E-73).

E-71

Moving the Hands for Easy Viewing of Digital Information

You can use the procedure below to move the analog hands in order to better view digital information.


Note

- The analog hands will not move while battery power is low.
- Time calibration signal reception is disabled while the hands are moved to allow easier viewing of digital information (page E-73).

E-72

To move the hands to view digital information

Hold down (C) for at least two seconds until the message "HAND" starts to flash. Releasing (C) will cause the hands shifted indicator to flash and the hands will move.

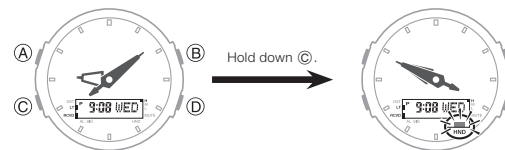

To return the hands to their normal positions

Hold down (C) for at least two seconds until the message "HAND" starts to flash.

E-74

Note

- The hands will also return to their normal positions if you do not perform any operation for about one hour.
- The hands also will move automatically whenever you display a setting screen in the Timekeeping Mode, Timer Mode, or Alarm Mode. Normally, exiting a setting screen will cause the hands to return to normal timekeeping. However, if the hands were moved to view digital information when you displayed the setting screen, they will be moved for viewing when you exit the setting screen.
- Time calibration signal reception is disabled while the hands are moved for easier viewing (page E-73).
- Hold down (C) for at least four seconds to return the hands to their normal positions and switch to the Timekeeping Mode.

Other Settings

The button operation tone sounds any time you press one of the watch's buttons. You can enable or disable the button operation tone as desired.

- Even if you disable the button operation tone, the alarm, Hourly Time Signal, and Countdown Timer Mode alarm all operate normally.

To enable or disable the button operation tone

1. In the Timekeeping Mode, hold down (A) for at least two seconds until **ADJ** is displayed. When you release (A), the city code and city name will scroll from right to left. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).

Mute indicator

E-76

2. Use (C) to cycle through settings until the current button operation tone (**MUTE** or **KEY ♪**) is displayed.
 - See the sequence in step 2 of the procedure under "To change the current time and date settings manually" (page E-44) for information about how to scroll between settings.
3. Press (D) to toggle the button operation tone between enabled (**KEY ♪**) and disabled (**MUTE**).
4. After the setting is the way you want, press (A) to exit the setting screen.

Note

- The mute indicator is displayed in all modes when the button operation tone is disabled.

To enable or disable Power Saving

Power saving on indicator

1. In the Timekeeping Mode, hold down (A) for at least two seconds until **ADJ** is displayed. When you release (A), the city code and city name will scroll from right to left. This is the setting screen.
 - The hour and minute hands will automatically move out of the way at this time (page E-72).

2. Use (C) to cycle through the settings on the display until the current power saving setting (**PSON** or **PSOF**) is displayed.
 - See the sequence in step 2 of the procedure under "To change the current time and date settings manually" (page E-44) for information about how to scroll between settings.
3. Press (D) to toggle Power Saving between enabled (**PSON**) and disabled (**PSOF**).
4. After the setting is the way you want, press (A) to exit the setting screen.

E-77

Troubleshooting

Time Setting

See "Radio Controlled Atomic Timekeeping" (page E-19) for information about adjusting the time setting according to a time calibration signal.

■ The current time setting is off by hours.

Your Home City setting may be wrong (page E-40). Check your Home City setting and correct it, if necessary.

■ The current time setting is off by one hour.

If you are using the watch in an area where time calibration signal reception is possible, see "To configure Home City settings" (page E-40). If you are using in the watch in an area where time calibration signal reception is not possible, you may need to change your Home City's standard time/daylight saving time (DST) setting manually. Use the procedure under "To change the current time and date settings manually" (page E-44) to change the standard time/daylight saving time (DST) setting.

E-78

■ The hands are misaligned.

This could indicate that the watch has been exposed to magnetism or strong impact, which has caused problems with proper hand alignment. Adjust the watch's hand home position alignment (page E-70).

■ The analog hands are not indicating the correct time.

If the hands shifted indicator is displayed, it means that the analog hands are currently in a position for easier viewing of digital information. Hold down (C) for at least four seconds to return to the Timekeeping Mode.

World Time Mode

■ The time for my World Time City is not correct in the World Time Mode.

This could be due to incorrect switching between standard time and daylight saving time. See "To specify standard time or daylight saving time (DST) for a city" (page E-49) for more information.

E-79

Charging

■ **The watch does not resume operation after I expose it to light.**
This can happen after the power level drops to Level 5 (page E-13). Continue exposing the watch to light until the battery power indicator shows **H** or **M**.

Time Calibration Signal

The information in this section applies only when **LIS, LON, MAD, PAR, ROM, BER, STO, ATH, MOW, HKG, BJS, HNL, ANC, YVR, LAX, YEA, DEN, MEX, CHI, NYC, YHZ, YYT, SEL,** or **TYO** is selected at the Home City. You need to adjust the current time manually when any other city is selected as the Home City.

E-80

■ **The watch can't receive a time calibration signal. The RCVD indicator does not appear.**

Possible Cause	Remedy	Page
<ul style="list-style-type: none"> You are wearing or moving the watch, or performing a button operation during the signal receive operation. The watch is in an area with poor reception conditions. 	Keep the watch in an area where reception conditions are good while the signal receive operation is being performed.	E-24
You are in an area where signal reception is not possible for some reason.	See "Approximate Reception Ranges".	E-21
The calibration signal is not being transmitted for some reason.	<ul style="list-style-type: none"> Check the website of the organization that maintains the time calibration signal in your area for information about its down times. Try again later. 	-

E-81

■ **The current time setting changes after I set it manually.**

You may have the watch configured for Auto Receive of the time calibration signal (page E-26), which will cause the time to be adjusted automatically according to your currently selected Home City. If this results in the wrong time setting, check your Home City setting and correct it, if necessary (page E-40).

■ **The current time setting is off by one hour.**

Possible Cause	Remedy	Page
Signal reception on a day for switching between standard time/daylight saving time (DST) may have failed for some reason.	Perform the operation under "To get ready for a receive operation". The time setting will be adjusted automatically as soon as signal reception is successful.	E-24
	If you are unable to receive the time calibration signal, change the standard time/daylight saving time (DST) setting manually.	E-42

E-82

■ **Auto Receive is not performed or you cannot perform Manual Receive.**

Possible Cause	Remedy	Page
The watch is not in the Timekeeping Mode or World Time Mode, a countdown timer operation is in progress, or the hands have been moved to a position to allow easier viewing of digital information.	Auto receive is performed only while the watch is in the Timekeeping Mode or World Time Mode. Switch to either of these two modes. If a countdown timer operation is in progress, stop it. If the hands have been moved for easier viewing, return them to their normal positions.	E-36
Your Home City setting is wrong.	Check your Home City setting and correct it, if necessary.	E-40
There is not enough power for signal reception.	Expose the watch to light to charge it.	E-10

E-83

■ **Signal reception is being performed successfully, but the time and/or day is wrong.**

Possible Cause	Remedy	Page
Your Home City setting is wrong.	Check your Home City setting and correct it, if necessary.	E-40
The DST setting may be incorrect.	Change the DST setting to Auto DST.	E-40

E-84

Specifications

Accuracy at normal temperature: ±15 seconds a month (with no signal calibration)

Timekeeping: Hour, minute, second, p.m. (P), year, month, day, day of the week, alarm countdown

Time format: 12-hour and 24-hour

Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099
Other: Home City code (can be assigned one of 48 city codes); Standard Time/Daylight Saving Time (summer time)

Time Calibration Signal Reception: Auto receive 6 times a day (5 times a day for the Chinese calibration signal); Remaining auto receives cancelled as soon as one is successful; Manual receive

Receivable Time Calibration Signals: Mainflingen, Germany (Call Sign: DCF77, Frequency: 77.5 kHz); Anthorn, England (Call Sign: MSF, Frequency: 60.0 kHz); Fort Collins, Colorado, the United States (Call Sign: WWVB, Frequency: 60.0 kHz); Fukushima, Japan (Call Sign: JJY, Frequency: 40.0 kHz); Fukuoka/Saga, Japan (Call Sign: JJY, Frequency: 60.0 kHz); Shangqiu City, Henan Province, China (Call Sign: BPC, Frequency: 68.5 kHz)

E-85

World Time: 48 cities (31 time zones)

Other: Daylight Saving Time/Standard Time; Home Time swapping

Stopwatch:

Measuring unit: 1/100 second
Measuring capacity: 59'59.99"
Measuring modes: Elapsed time, split time

Countdown Timer:

Measuring unit: 1 second
Countdown range: 100 minutes
Setting unit: 1 second

Alarms: 5 Daily alarms; Hourly Time Signal

Double LED light: LED light for the face (Full auto LED light, Super illuminator, selectable illumination duration (approximately 1.5 seconds or 3 seconds), afterglow)
LED backlight for the digital display (Full auto LED light, Super illuminator, selectable illumination duration (approximately 1.5 seconds or 3 seconds), afterglow)

E-86

Other: Battery power indicator; Power Saving; Button operation tone on/off; Moving the Hands to View the Digital Display

Power Supply: Solar panel and one rechargeable battery

Approximate battery operating time: 11 months under the following conditions:

- Display on 18 hours per day, sleep state 6 hours per day
- 1 illumination operation (1.5 seconds) per day
- 10 seconds of alarm operation per day
- 4 minutes of signal reception per day
- 1 hand movement for easy viewing of digital information per day

Frequent use of illumination runs down the battery.

Specifications are subject to change without notice.

E-87

Operating Precautions

Water Resistance

• The information below applies to watches with **WATER RESIST** or **WATER RESISTANT** marked on the back cover.

Marking	On watch front or on back cover	Water Resistance Under Daily Use	Enhanced Water Resistance Under Daily Use		
			5 Atmospheres	10 Atmospheres	20 Atmospheres
	Hand washing, rain	No BAR mark	5BAR	10BAR	20BAR
Example of Daily Use	Water-related work, swimming	Yes	Yes	Yes	Yes
	Windsurfing	No	Yes	Yes	Yes
	Skin diving	No	No	Yes	Yes

• Do not use your watch for scuba diving or other types of diving that requires air tanks.

E-88

OPUM-E

- Watches that do not have **WATER RESIST** or **WATER RESISTANT** marked on the back cover are not protected against the effects of sweat. Avoid using such a watch under conditions where it will be exposed to large amounts of sweat or moisture, or to direct splashing with water.
- Even if a watch is water resistant, note the usage precautions described below. Such types of use reduce water resistance performance and can cause fogging of the glass.
 - Do not operate the crown or buttons while your watch is submersed in water or wet.
 - Avoid wearing your watch while in the bath.
 - Do not wear your watch while in a heated swimming pool, sauna, or any other high temperature/high humidity environment.
 - Do not wear your watch while washing your hands or face, while doing housework, or while performing any other task that involves soaps or detergents.
- After submersion in seawater, use plain water to rinse all salt and dirt from your watch.
- To maintain water resistance, have the gaskets of your watch replaced periodically (about once every two or three years).

E-89

- A trained technician will inspect your watch for proper water resistance whenever you have its battery replaced. Battery replacement requires the use of special tools. Always request battery replacement from your original retailer or from an authorized CASIO service center.
- Some water-resistant watches come with fashionable leather bands. Avoid swimming, washing, or any other activity that causes direct exposure of a leather band to water.
- The inside surface of the watch glass may fog when the watch is exposed to a sudden drop in temperature. No problem is indicated if the fogging clears up relatively quickly. Sudden and extreme temperature changes (such as coming into an air conditioned room in the summer and standing close to an air conditioner outlet, or leaving a heated room in the winter and allowing your watch to come into contact with snow) can cause it to take longer for glass fogging to clear up. If glass fogging does not clear up or if you notice moisture inside of the glass, immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Your water-resistant watch has been tested in accordance with International Organization for Standardization regulations.

E-90

E-91

Temperature

- Never leave your watch on the dashboard of a car, near a heater, or in any other location that is subject to very high temperatures. Do not leave your watch where it will be exposed to very low temperatures. Temperature extremes can cause your watch to lose or gain time, to stop, or otherwise malfunction.
- Leaving your watch in an area hotter than +60°C (140°F) for long periods can lead to problems with its LCD. The LCD may become difficult to read at temperatures lower than 0°C (32°F) and greater than +40°C (104°F).

Impact

- Your watch is designed to withstand impact incurred during normal daily use and during light activity such as playing catch, tennis, etc. Dropping your watch or otherwise subjecting it to strong impact, however, can lead to malfunction. Note that watches with shock-resistant designs (G-SHOCK, BABY-G, G-MS) can be worn while operating a chain saw or engaging in other activities that generate strong vibration, or while engaging in strenuous sports activities (motocross, etc.)

E-92

E-93

Chemicals

- Do not allow your watch to come into contact with thinner, gasoline, solvents, oils, or fats, or with any cleaners, adhesives, paints, medicines, or cosmetics that contain such ingredients. Doing so can cause discoloration of or damage to the resin case, resin band, leather, and other parts.

Storage

- If you do not plan to use your watch for a long time, thoroughly wipe it free of all dirt, sweat, and moisture, and store it in a cool, dry place.

Resin Components

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause color on resin components to transfer to the other items, or the color of the other items to transfer to the resin components of your watch. Be sure to dry off your watch thoroughly before storing it and make sure it is not in contact with other items.

E-94

E-95

Leather Band

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause the color of the leather band to transfer to the other items or the color of the other items to transfer to the leather band. Be sure to dry off your watch thoroughly with a soft cloth before storing it and make sure it is not in contact with other items.
- Leaving a leather band where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from a leather band for long periods can cause it to become discolored.
CAUTION: Exposing a leather band to rubbing or dirt can cause color transfer and discoloration.

Metal Components

- Failure to clean dirt from metal components can lead to formation of rust, even if components are stainless steel or plated. If metal components exposed to sweat water, wipe thoroughly with a soft, absorbent cloth and then place the watch in a well-ventilated location to dry.

E-96

E-97

User Maintenance

Caring for Your Watch

Remember that you wear your watch next to your skin, just like a piece of clothing. To ensure your watch performs at the level for which it is designed, keep it clean by frequently wiping with a soft cloth to keep your watch and band free of dirt, sweat, water and other foreign matter.

- Whenever your watch is exposed to sea water or mud, rinse it off with clean fresh water.
- For a metal band or a resin band with metal parts, use a soft toothbrush or similar tool to scrub the band with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing the band, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.
- For a resin band, wash with water and then wipe dry with a soft cloth. Note that sometimes a smudge like pattern may appear on the surface of a resin band. This will not have any effect on your skin or clothing. Wipe with a cloth to remove the smudge pattern.

E-98

E-99

Band

- Tightening the band too tightly can cause you to sweat and make it difficult for air to pass under the band, which can lead to skin irritation. Do not fasten the band too tightly. There should be enough room between the band and your wrist so you can insert your finger.
- Deterioration, rust, and other conditions can cause the band to break or come off of your watch, which in turn can cause band pins to fly out of position or to fall out. This creates the risk of your watch falling from your wrist and becoming lost, and also creates the risk of personal injury. Always take good care of your band and keep it clean.
- Immediately stop using a band if you even notice any of the following: loss of band flexibility, band cracks, band discoloration, band looseness, band connecting pin flying or falling out, or any other abnormality. Take your watch to your original retailer or to a CASIO service center for inspection and repair (for which you will be charged) or to have the band replaced (for which you will be charged).

Magnetism

- The hands of analog and combination (analog-digital) watches are moved by a motor that uses magnetic force. When such a watch is close to a device (audio speakers, magnetic necklace, cell phone, etc.) that emits strong magnetism, the magnetism can cause timekeeping to slow down, speed up, or stop, resulting in the incorrect time being displayed.
- Very strong magnetism (from medical equipment, etc.) should be avoided because it can cause malfunction of your watch and damage to electronic components.

Electrostatic Charge

- Exposure to very strong electrostatic charge can cause your watch to display the wrong time. Very strong electrostatic charge even can damage electronic components.
- Electrostatic charge can cause the display to go blank momentarily or cause a rainbow effect on the display.

- Leaving your watch where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from your watch for long periods can cause it to become discolored.
- Friction caused by certain conditions (strong external force, sustained rubbing, impact, etc.) can cause discoloration of painted components.
- If there are printed figures on the band, strong rubbing of the printed area can cause discoloration.
- Leaving your watch wet for long periods can cause fluorescent color to fade. Wipe the watch dry as soon as possible after it becomes wet.
- Semi-transparent resin parts can become discolored due to sweat and dirt, and if exposed to high temperatures and humidity for long periods.
- Daily use and long-term storage of your watch can lead to deterioration, breaking, or bending of resin components. The extent of such damage depends on usage conditions and storage conditions.

- Use a soft toothbrush or similar tool to scrub the metal with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing metal components, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.

Bacteria and Odor Resistant Band

- The bacteria and odor resistant band protects against odor generated by the formation of bacteria from sweat, which ensures comfort and hygiene. In order to ensure maximum bacteria and odor resistance, keep the band clean. Use an absorbent soft cloth to thoroughly wipe the band clean of dirt, sweat, and moisture. A bacteria and odor resistant band suppresses the formation of organisms and bacteria. It does not protect against rash due to allergic reaction, etc.

Liquid Crystal Display

- Display figures may be difficult to read when viewed from an angle.

- Clean water and sweat from a leather band by wiping with a soft cloth.
- Not operating a watch crown, buttons, or rotary bezel could lead to later problems with their operation. Periodically rotate the crown and rotary bezel, and press buttons to maintain proper operation.

Dangers of Poor Watch Care

Rust

- Though the metal steel used for your watch is highly rust-resistant, rust can form if your watch is not cleaned after it becomes dirty.
 - Dirt on your watch can make it impossible for oxygen to come into contact with the metal, which can lead to breakdown of the oxidization layer on the metal surface and the formation of rust.
- Rust can cause sharp areas on metal components and can cause band pins to fly out of position or to fall out. If you ever notice any abnormality immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.

- Even if the surface of the metal appears clean, sweat and rust in crevasses can soil the sleeves of clothing, cause skin irritation, and even interfere with watch performance.

Premature Wear

- Leaving sweat or water on a resin band or bezel, or storing your watch an area subject to high moisture can lead to premature wear, cuts, and breaks.

Skin Irritation

- Individuals with sensitive skin or in poor physical condition may experience skin irritation when wearing a watch. Such individuals should keep their leather band or resin band particularly clean. Should you ever experience a rash or other skin irritation, immediately remove your watch and contact a skin care professional.

Battery

- The special rechargeable battery used by your watch is not intended to be removed or replaced by you. Use of a rechargeable battery other than the special one specified for your watch can damage your watch.
- The rechargeable (secondary) battery is charged when the solar panel is exposed to light, so it does not require regular replacement as the primary battery requires. Note, however, that long use or operating conditions can cause the capacity or charging efficiency of the rechargeable battery to deteriorate. If you feel that the amount of operation provided by charging is too short, contact your original retailer or CASIO service center.

E-100

E-101



City Code Table

City Code	City	UTC Offset/ GMT Differential	City Code	City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11	RAI	Praia	-1
HNL	Honolulu	-10	UTC		
ANC	Anchorage	-9	LIS	Lisbon	0
YVR	Vancouver	-8	LON	London	
LAX	Los Angeles	-8	MAD	Madrid	
YEA	Edmonton	-7	PAR	Paris	
DEN	Denver	-7	ROM	Rome	+1
MEX	Mexico City	-6	BER	Berlin	
CHI	Chicago	-6	STO	Stockholm	
NYC	New York	-5	ATH	Athens	
SCL	Santiago	-4	CAI	Cairo	+2
YHZ	Halifax	-4	JRS	Jerusalem	
YYT	St. Johns	-3.5	MOW	Moscow	+3
RIO	Rio De Janeiro	-3	JED	Jeddah	+3
FEN	Fernando De Noronha	-2	THR	Tehran	+3.5

L

L-1

City Code	City	UTC Offset/ GMT Differential
DXB	Dubai	+4
KBL	Kabul	+4.5
KHI	Karachi	+5
DEL	Delhi	+5.5
KTM	Kathmandu	+5.75
DAC	Dhaka	+6
RGN	Yangon	+6.5
BKK	Bangkok	+7
SIN	Singapore	
HKG	Hong Kong	+8
BJS	Beijing	
TPE	Taipei	
SEL	Seoul	+9
TYO	Tokyo	
ADL	Adelaide	+9.5

L-2

City Code	City	UTC Offset/ GMT Differential
GUM	Guam	+10
SYD	Sydney	+11
NOU	Noumea	+11
WLG	Wellington	+12

- This table shows the city codes of this watch (As of January 2020).
- The rules governing global times (UTC offset and GMT differential) and summer time are determined by each individual country.

CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>